



ASSEMBLY INSTRUCTION











NS 71 Nightstand

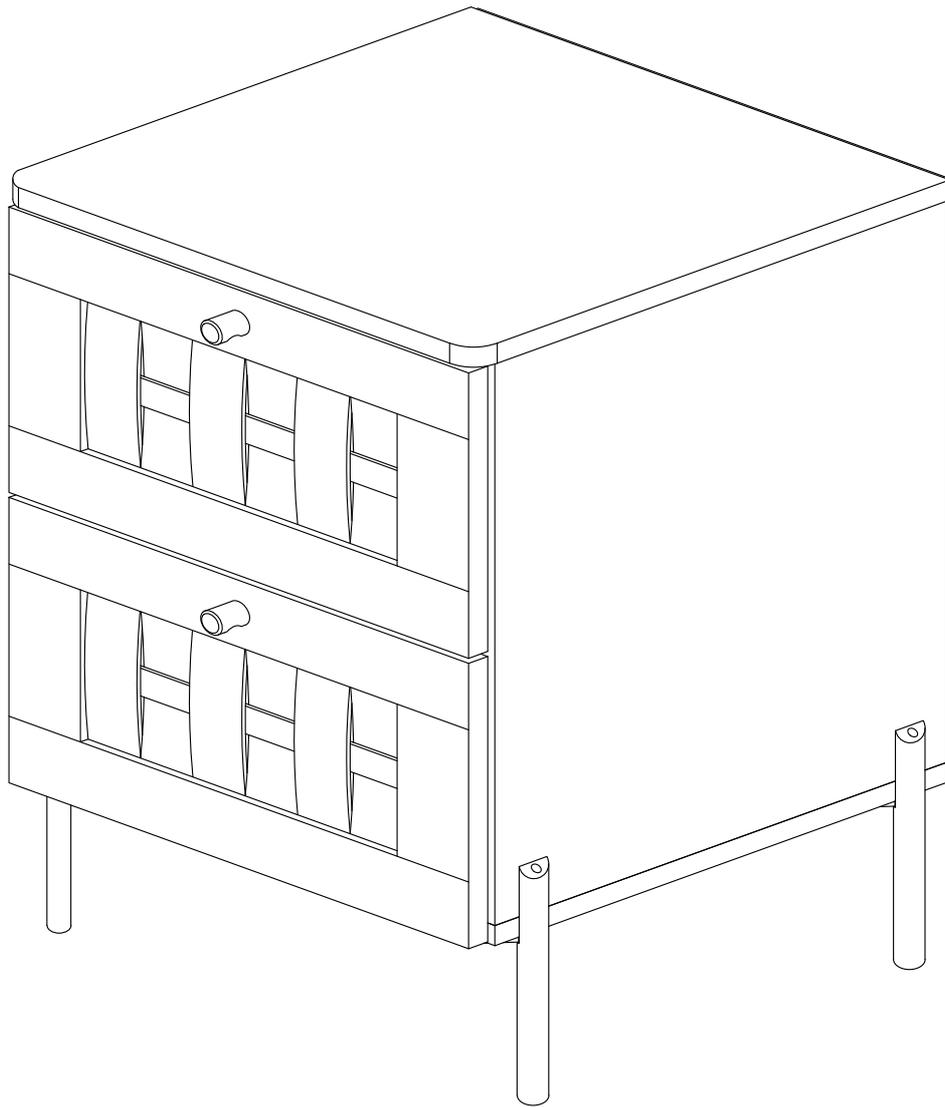

ASSEMBLY INSTRUCTION

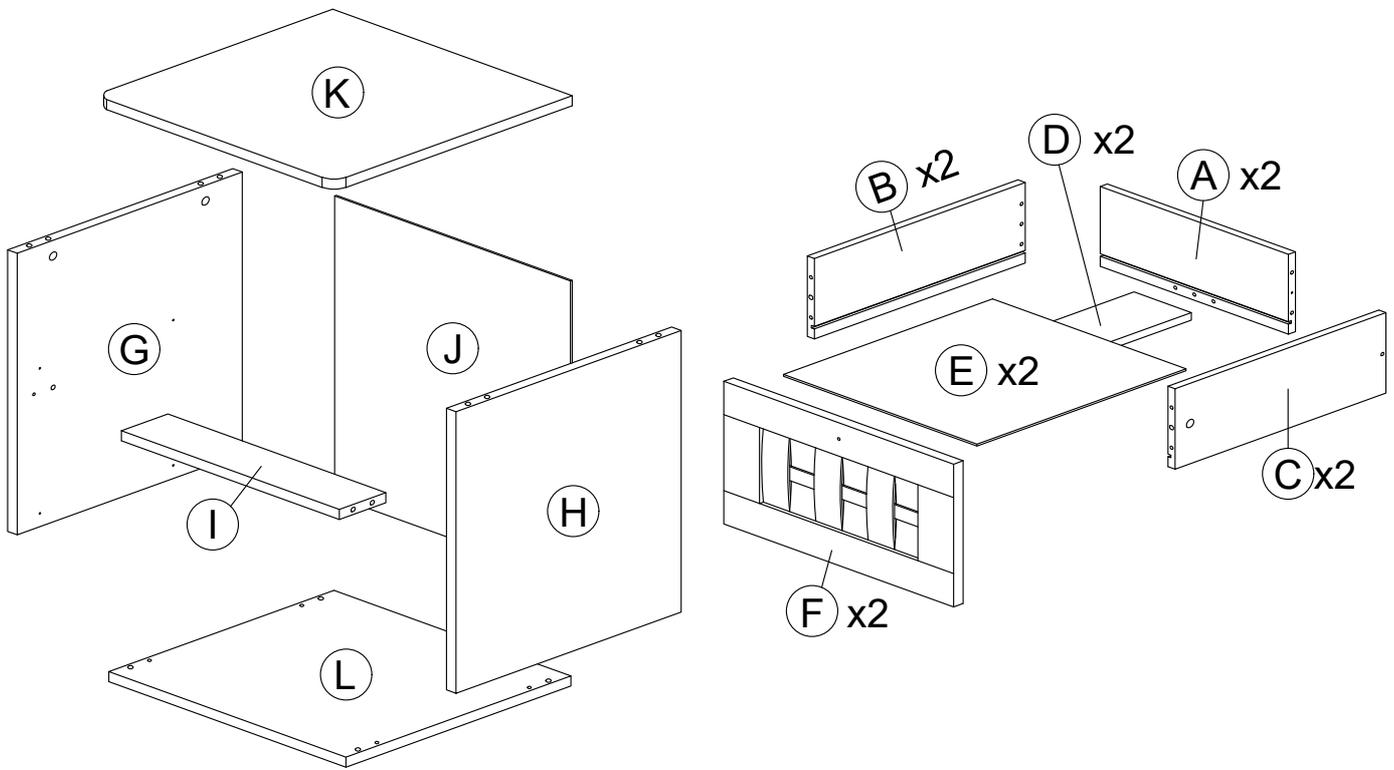

ASSEMBLY INSTRUCTION

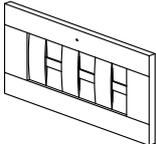
PART LIST			
A  Drawer Back 2 PCS	B  Drawer Side L 2 PCS	C  Drawer Side R 2 PCS	D  Drawer Support 2 PCS
E  Drawer Panel 2 PCS	F  Drawer Head 2 PCS	G  Side Panel L 1 PC	H  Side Panel R 1 PC
I  Middle Support 1 PC	J  Back Panel 1 PC	K  Top Panel 1 PC	L  Bottom Panel 1 PC
HARDWARE LIST			
1  Camlock 15MM 12 PCS	2  Camlock Bolt 15MM 12 PCS	3  M8x25MM Wood Dowel 10 PCS	4  M6x30MM Wood Dowel 24 PCS
5  CB Screw M3.5x12MM 24 PCS	6  CB Screw M3.5x16MM 16 PCS	7  M4x38MM Screw 6 PCS	8  Csk M6x50MM 4 PCS
9  Handle Screw M4x22MM 2 PCS	10  Metal Handle C 2 PCS	11  Nail 5/8 15 PCS	12  M4 Allen Key 1 PC
13  Drawer Slide 12" 2 SETS	14  Metal Leg 4 PCS	15  Black P/H Screw M4x20MM 4 PCS	

ASSEMBLY INSTRUCTION

Step 1

Required/Requis/Requerido

x24

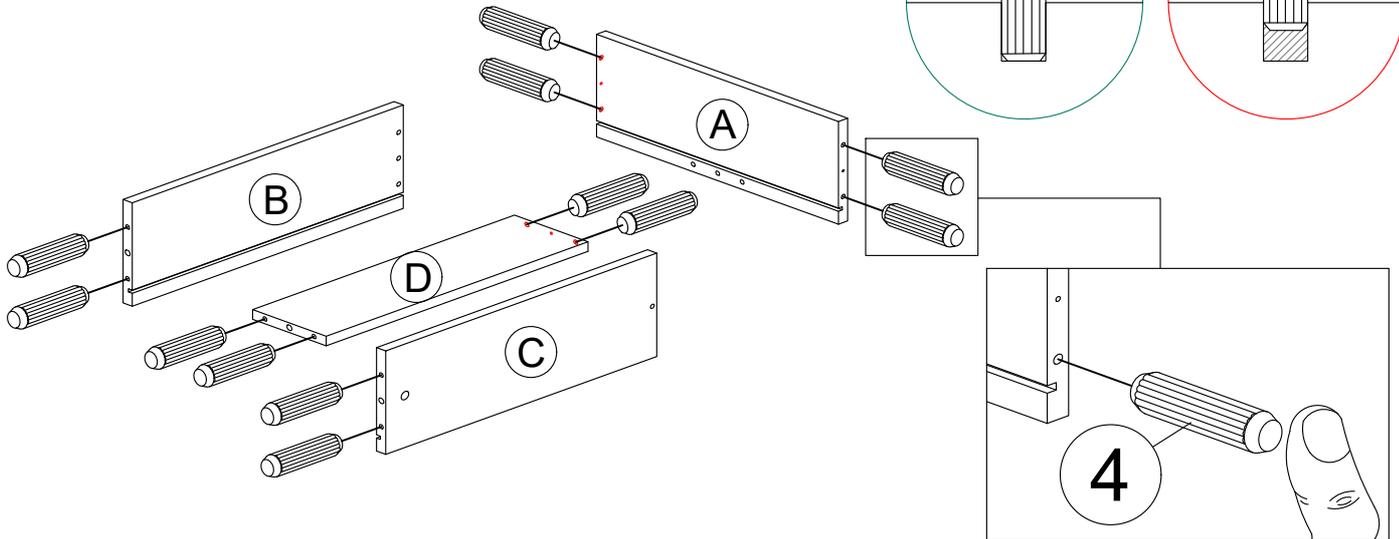


x2

Step 2

Required/Requis/Requerido

x6

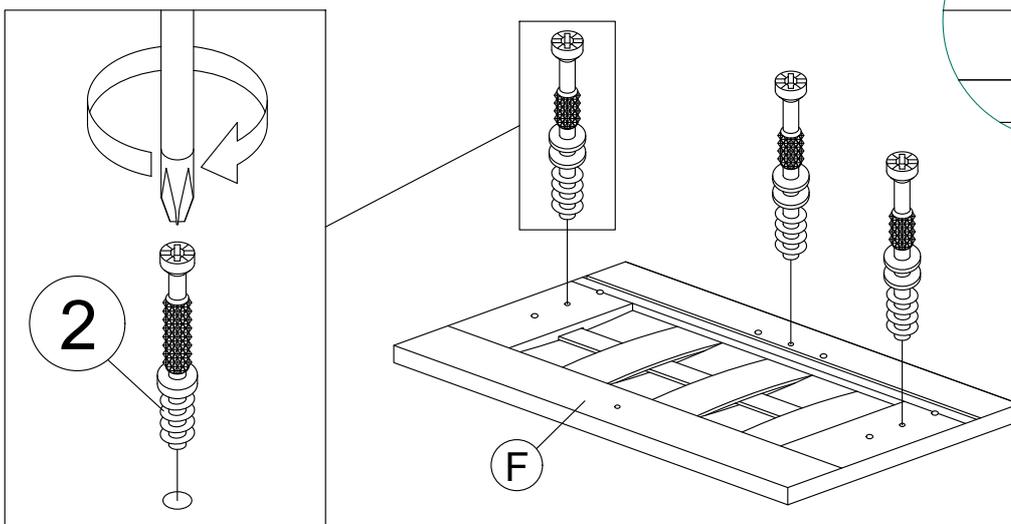

Back View


x2

ASSEMBLY INSTRUCTION

Step 3

Required/Requis/Requerido

x6

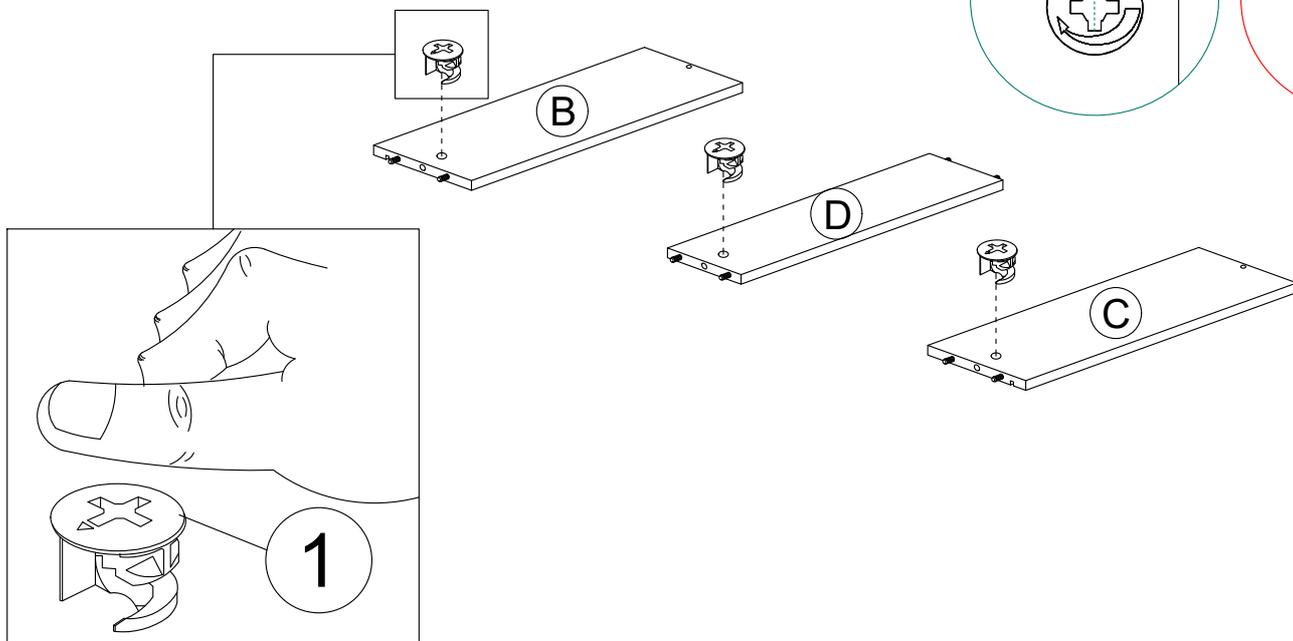


x2

Step 4

Required/Requis/Requerido


x6

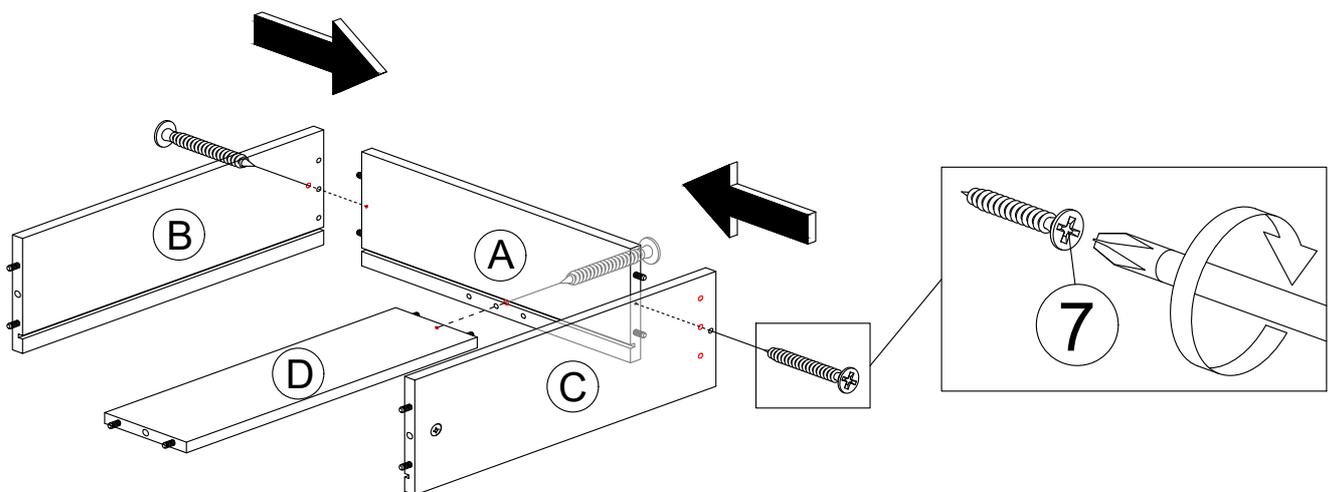

x2


ASSEMBLY INSTRUCTION

Step 5

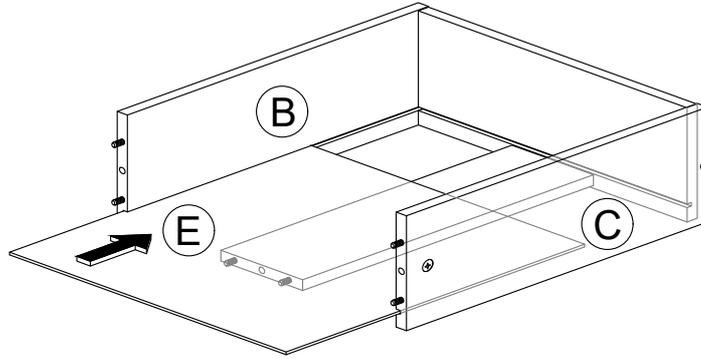


x2


Step 6

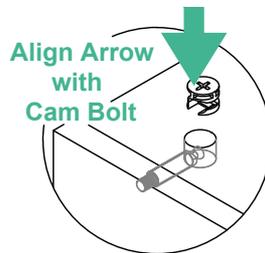



Press The
Cam Lock

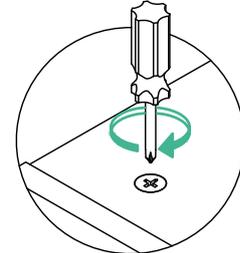

Tighten It
Clockwise

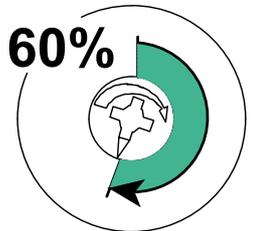

60-Degree
Rotation Lock

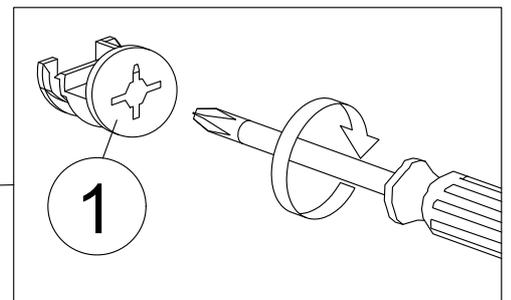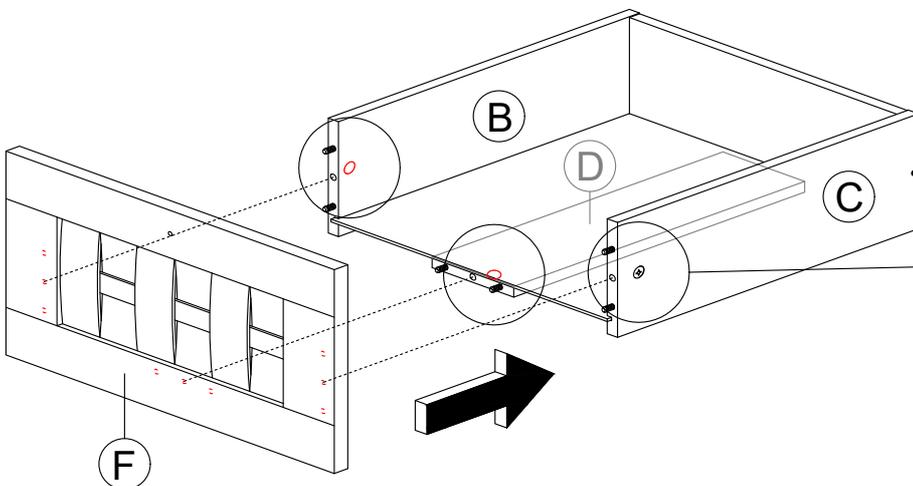

x2




ASSEMBLY INSTRUCTION

Step 7

Required/Requis/Requerido

x12  5

x2  13B

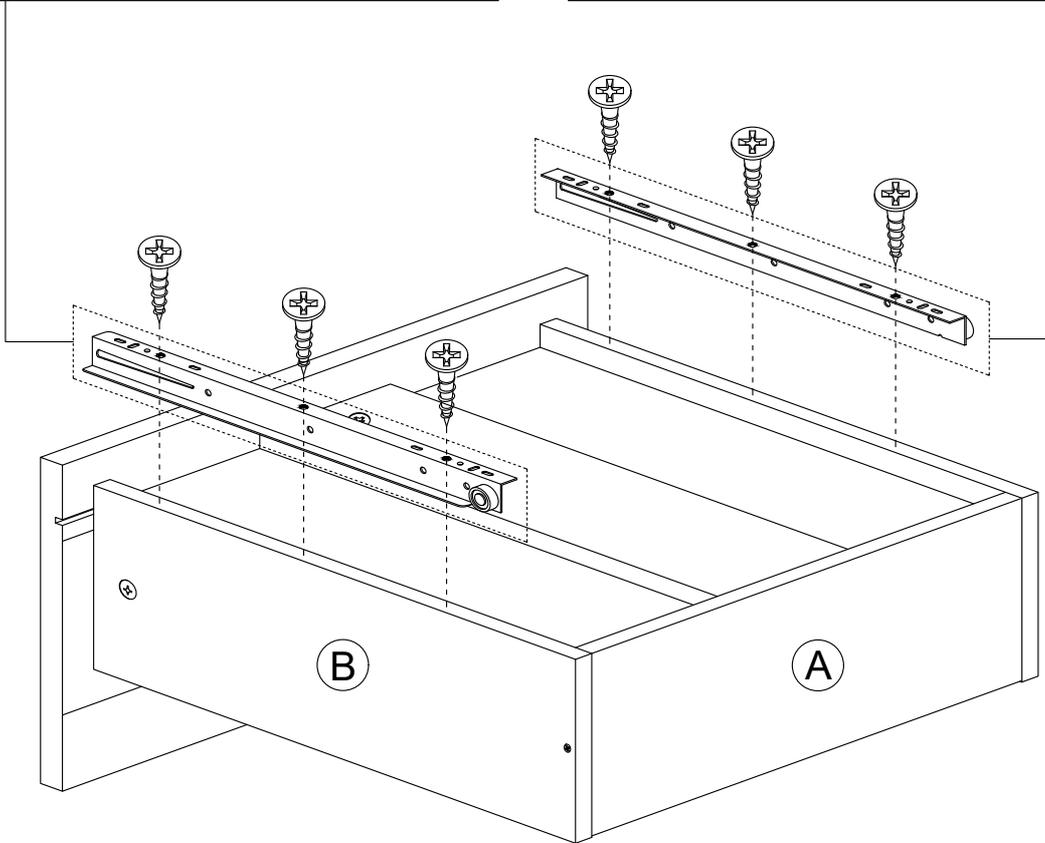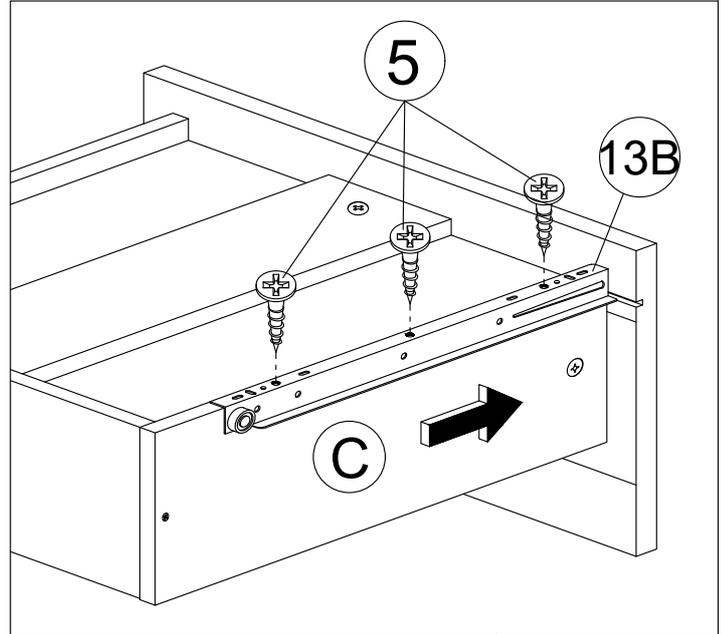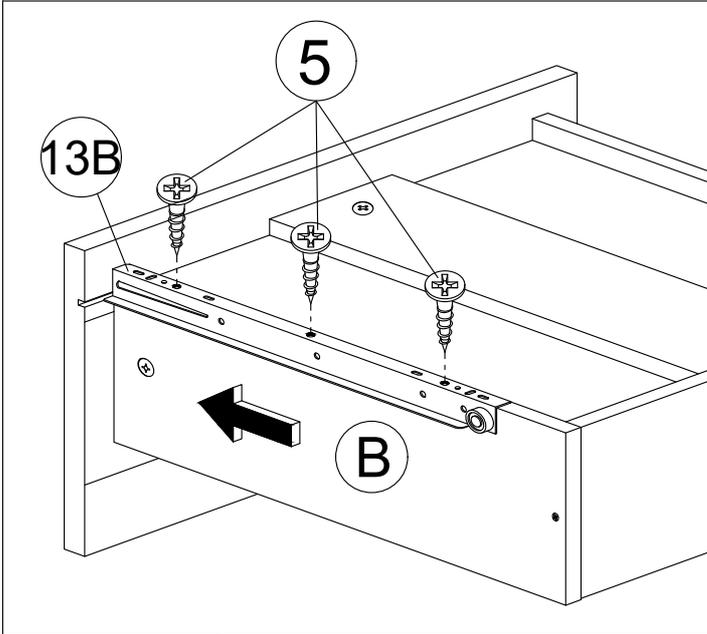

Bottom View

x2



ASSEMBLY INSTRUCTION

Step 8

Required/Requis/Requerido

x2  10

x2  9





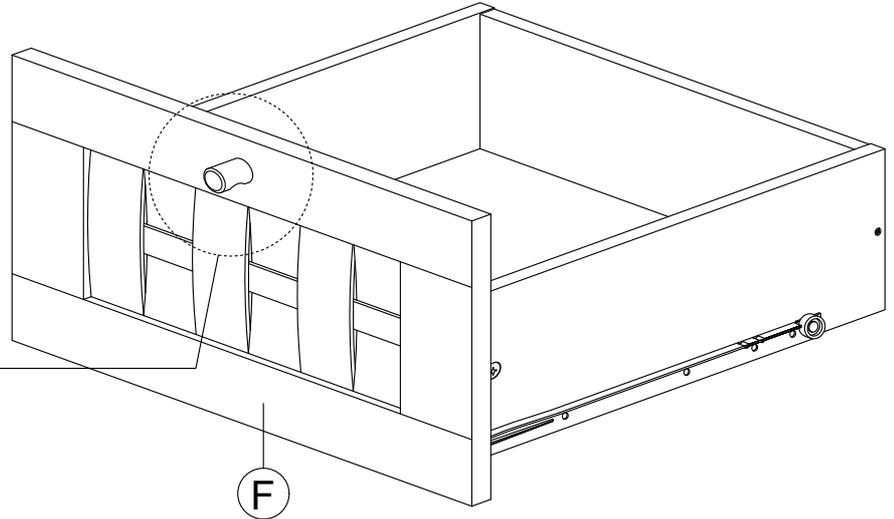
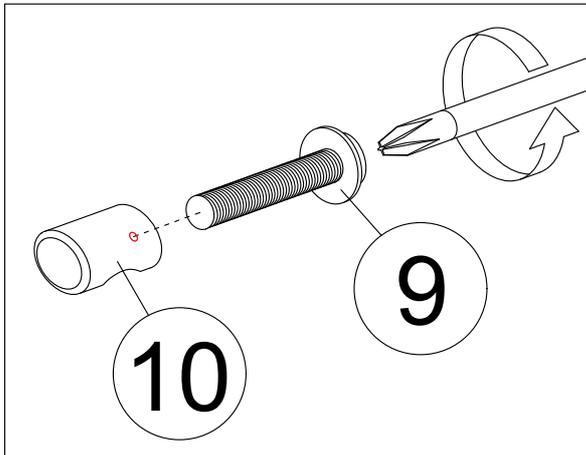


x2

Step 9


Required/Requis/Requerido

x10  3

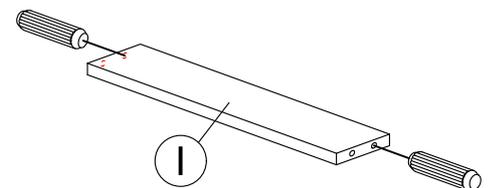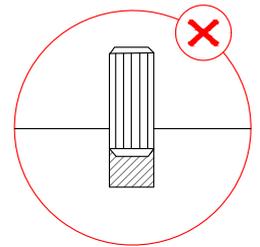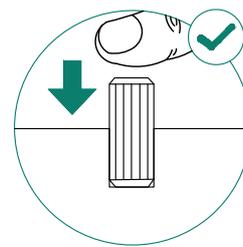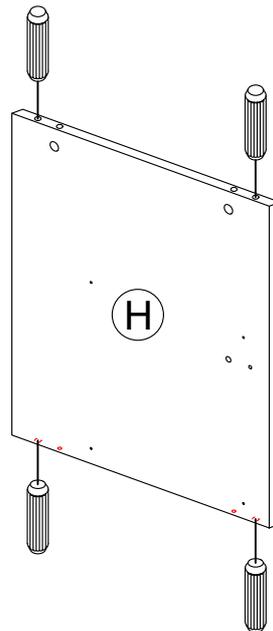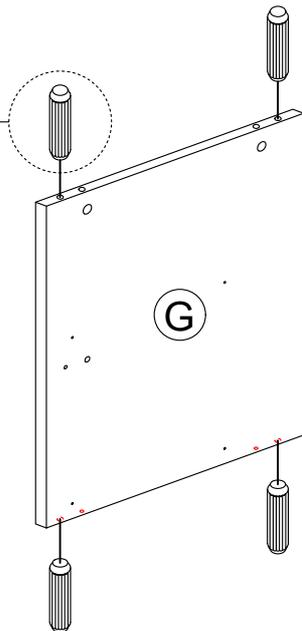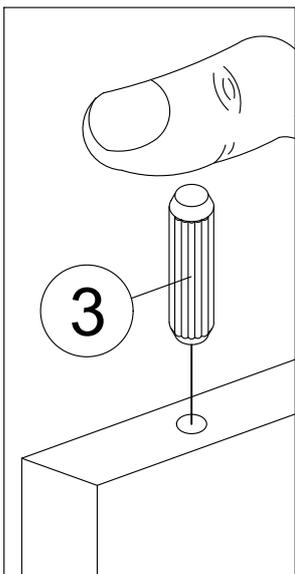

ASSEMBLY INSTRUCTION




Step 10

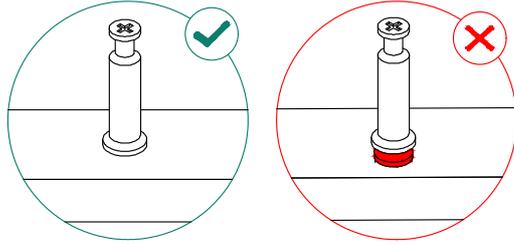


Required/Requis/Requerido

x6

 2

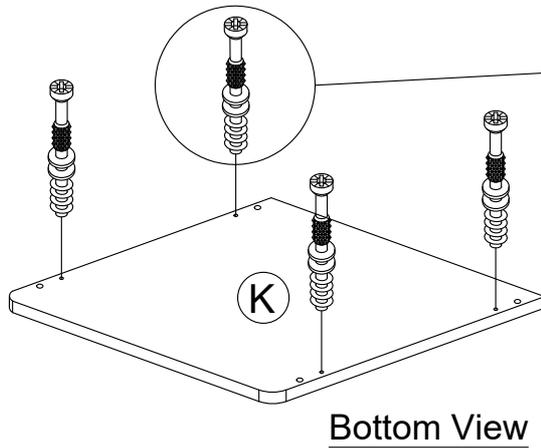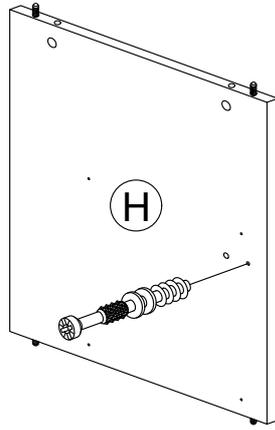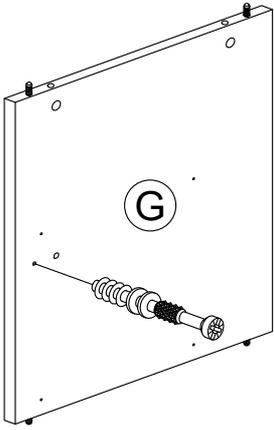

Bottom View



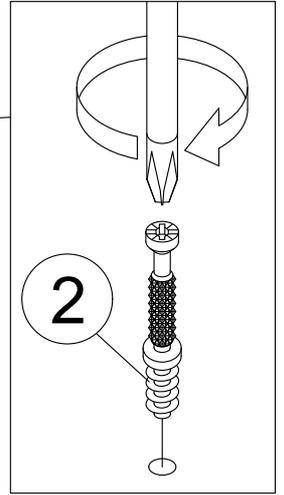


Step 11



Required/Requis/Requerido

x6

 1

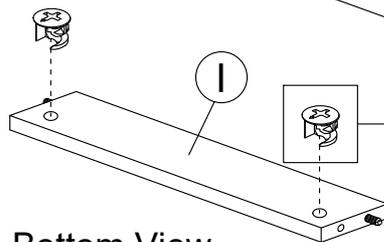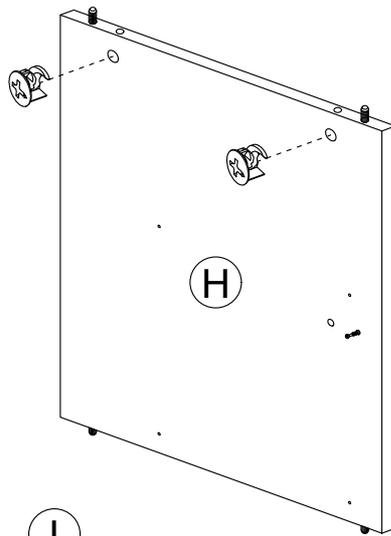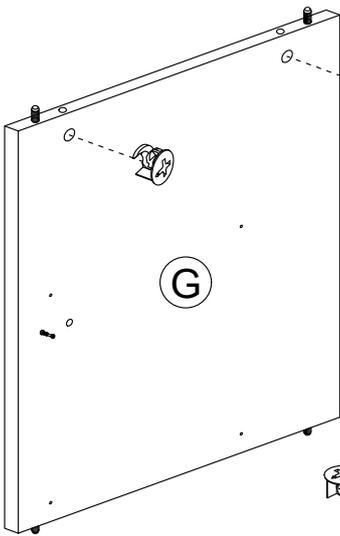


Bottom View

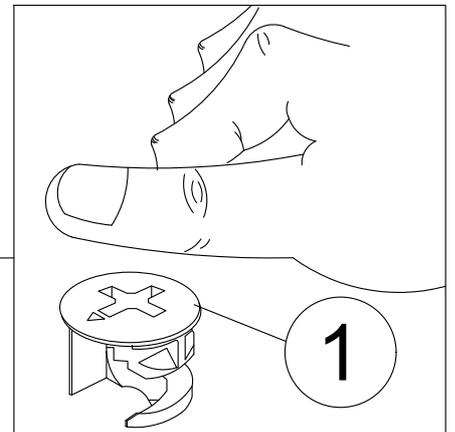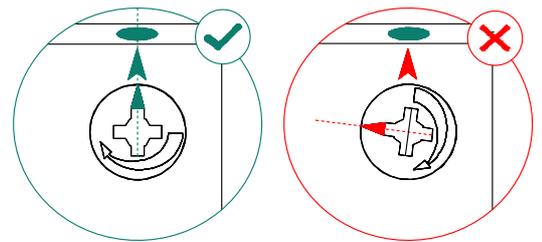

ASSEMBLY INSTRUCTION

Step 12


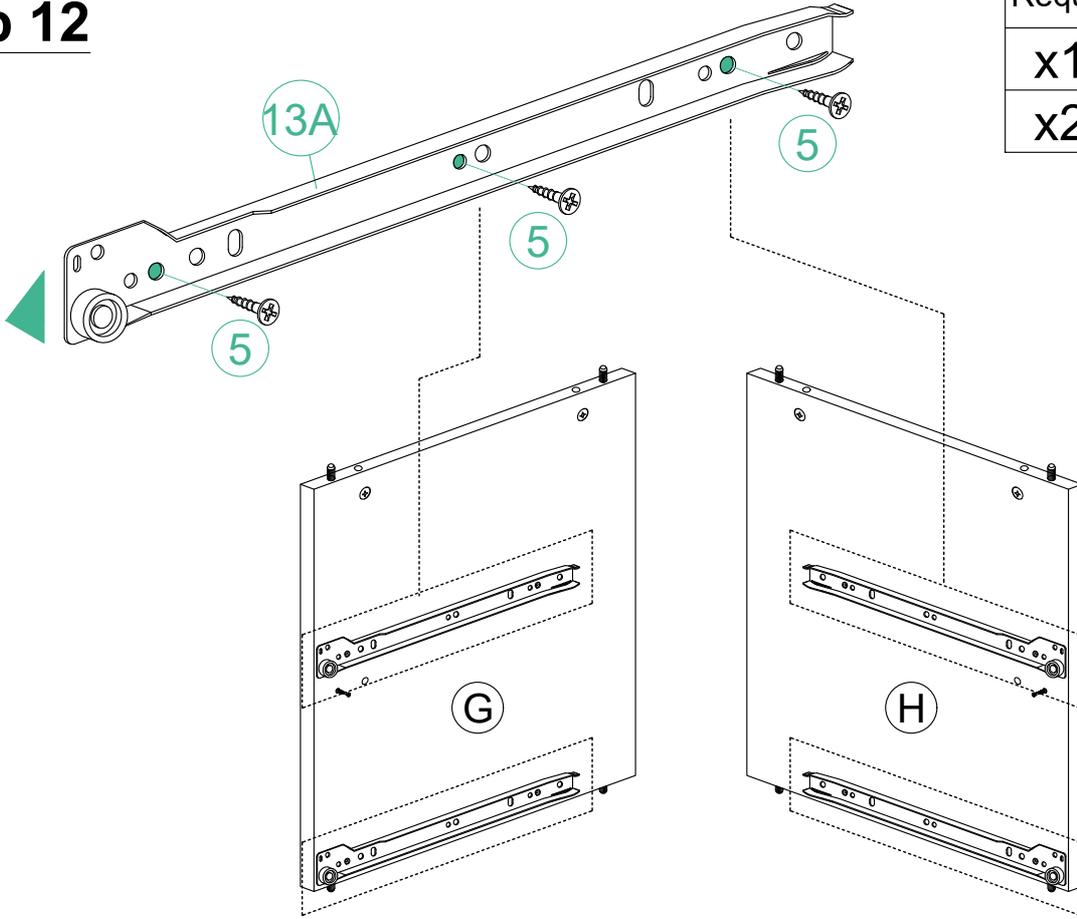


Required/Requis/Requerido


x12  5

x2  13A


Step 13

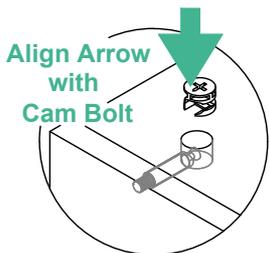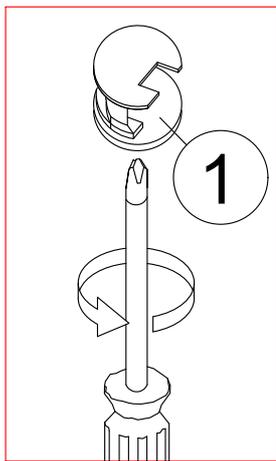


Press The
Cam Lock

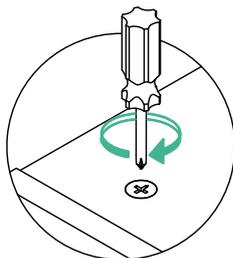

Tighten It
Clockwise


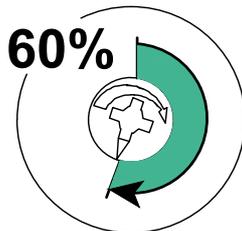


60-Degree
Rotation Lock

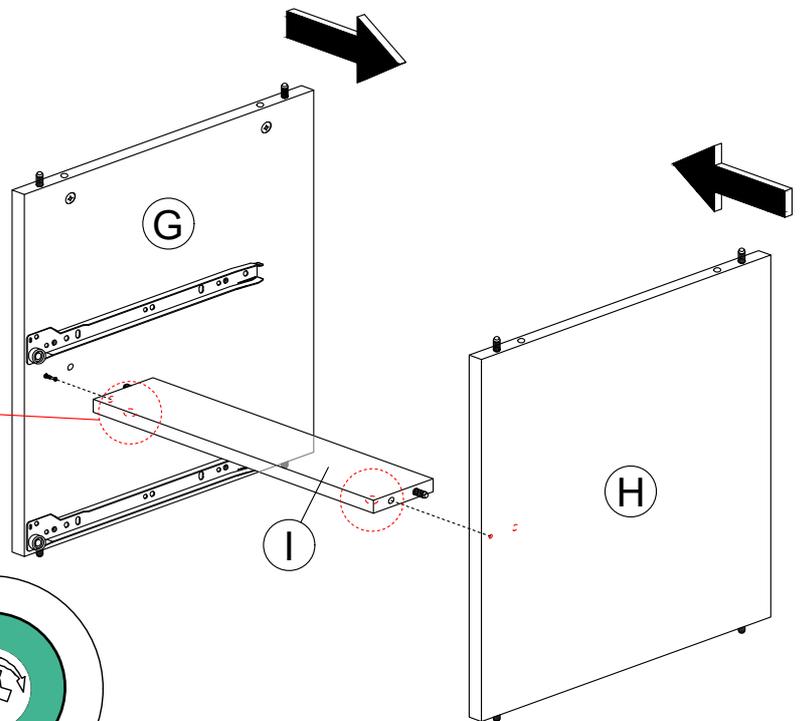


ASSEMBLY INSTRUCTION


Step 14

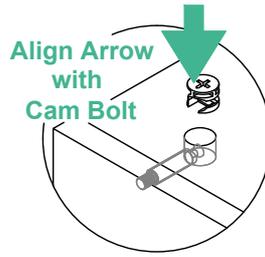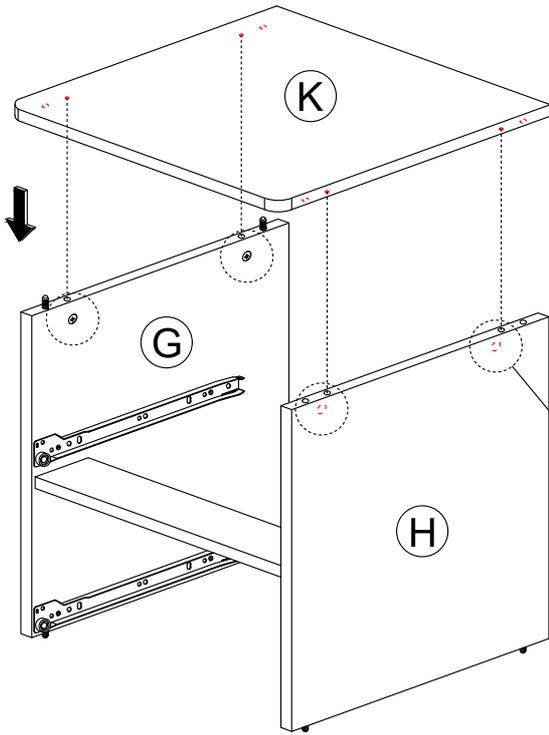


Press The Cam Lock

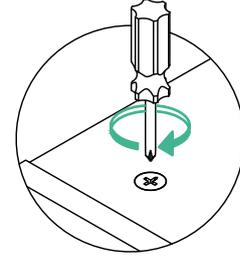

Tighten It Clockwise

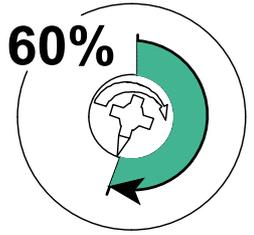


60-Degree Rotation Lock


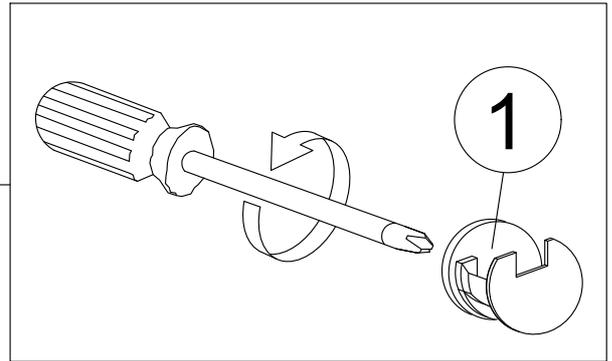


Step 15

Required/Requis/Requerido

x4  8

x1  12

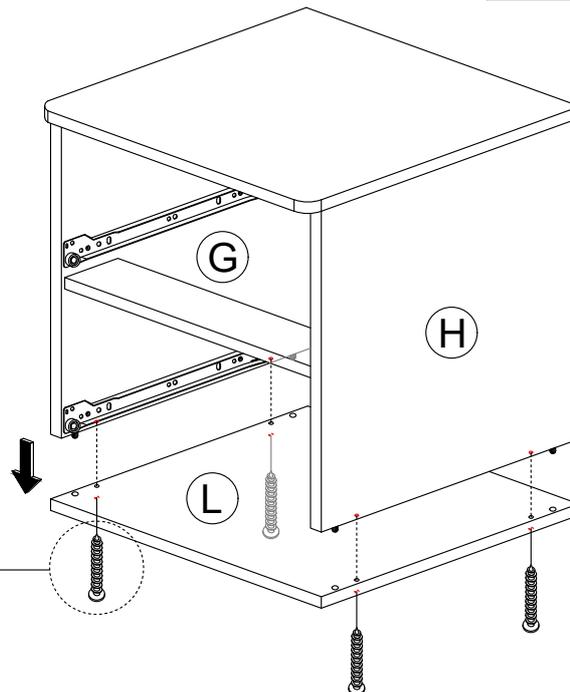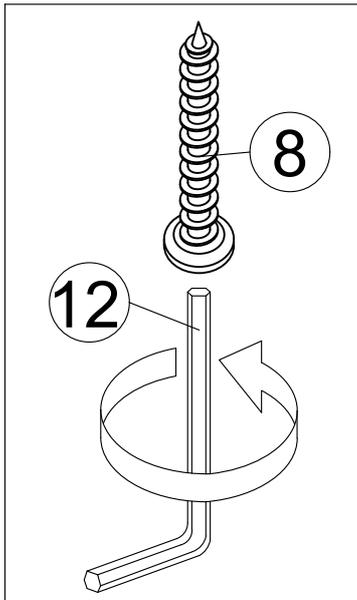

Lie Down First
Before Screw



ASSEMBLY INSTRUCTION

Step 16

Required/Requis/Requerido

x16  6

x4  14

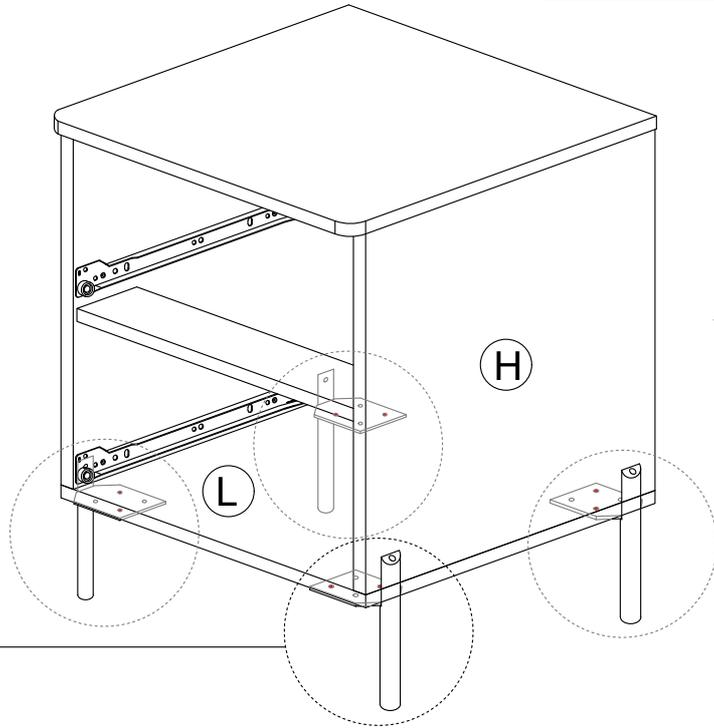
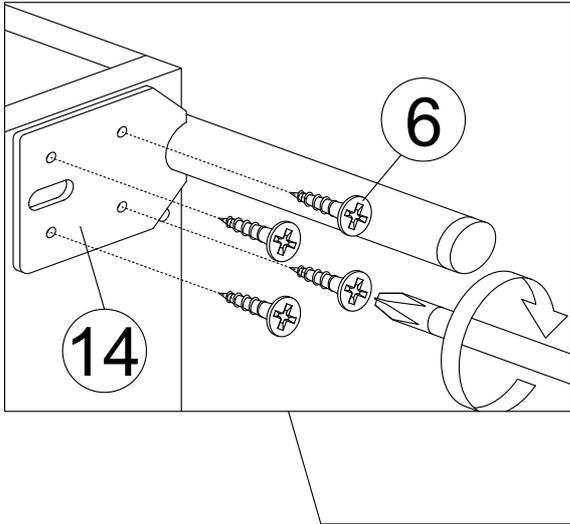



Lie Down First
Before Screw

Step 17

Required/Requis/Requerido

x15  11

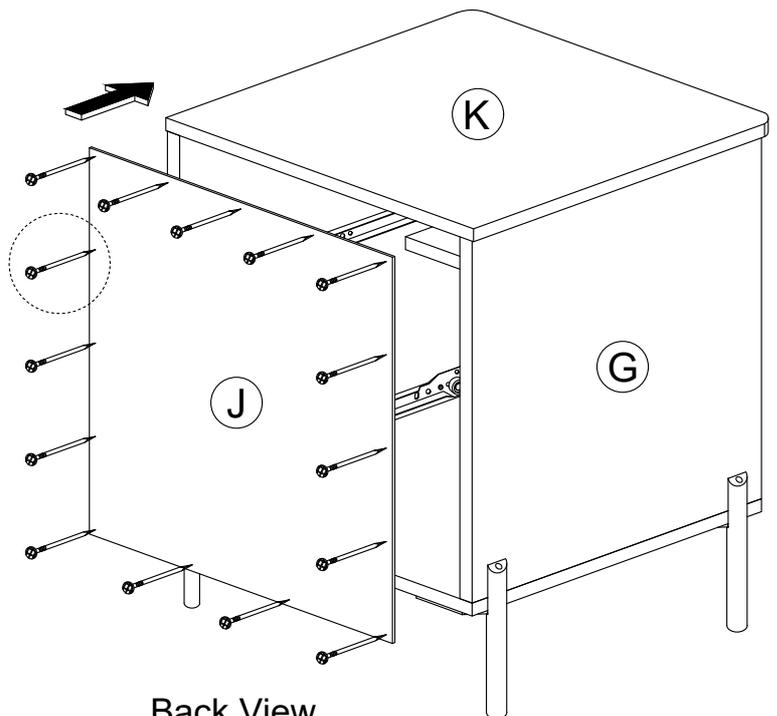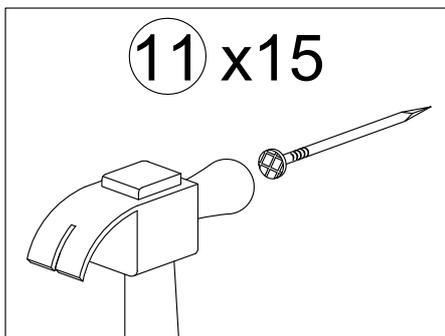

Back View


ASSEMBLY INSTRUCTION

Step 18

Required/Requis/Requerido

x4

 15

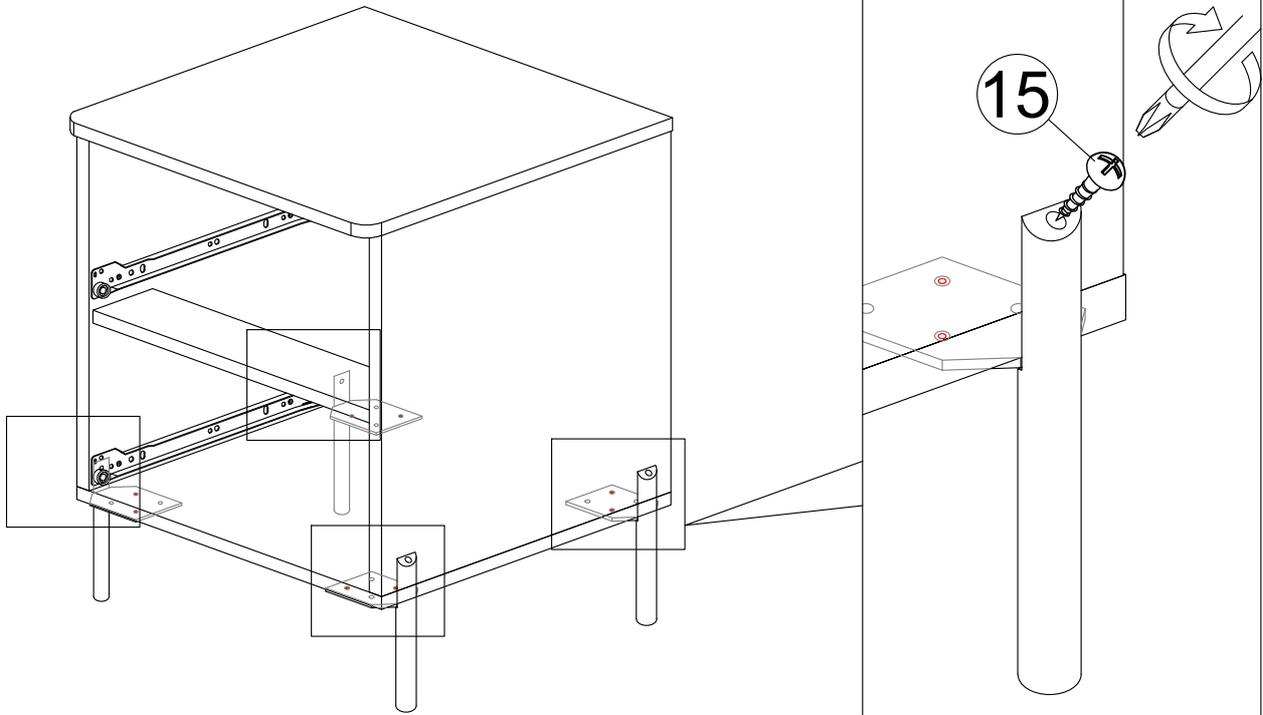

Completed

