


ASSEMBLY INSTRUCTION


Page 1

(NORTON) DOUBLE DECKER BED (Metal Slat) - *Half Fencing* Before you begin, please follow Assembly Instnction carefully. Follow them step by step.


STEP 1

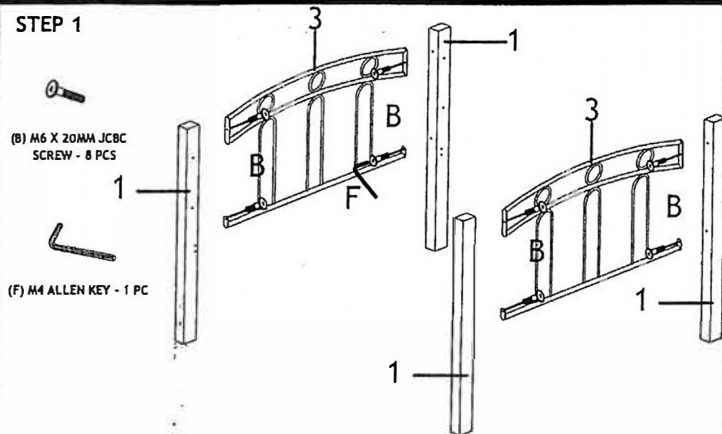


STEP 2

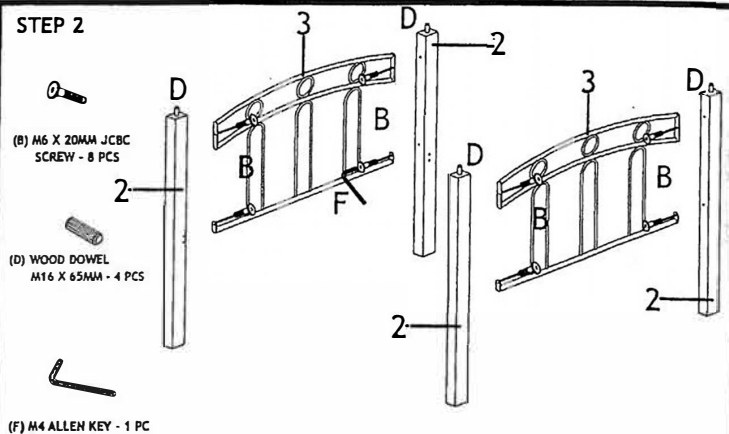

STEP 3

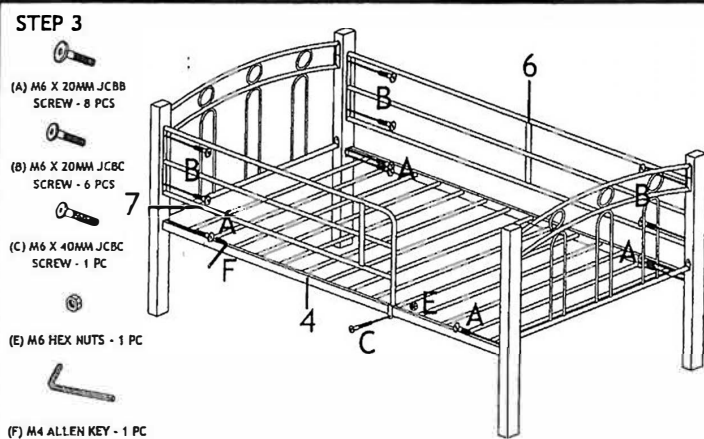

STEP 4

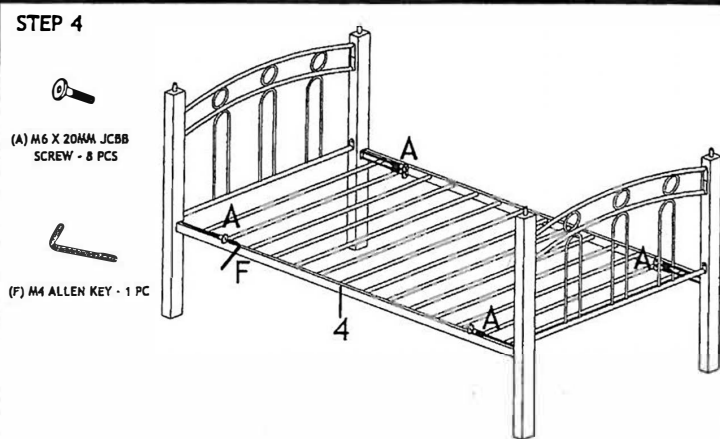


ASSEMBLY INSTRUCTION

Page 2

(NORTON) DOUBLE DECKER BED (Metal Slat) - *Half Fencing* Before you begin, please follow Assembly Instnction carefully. Follow them step by step.

STEP 5

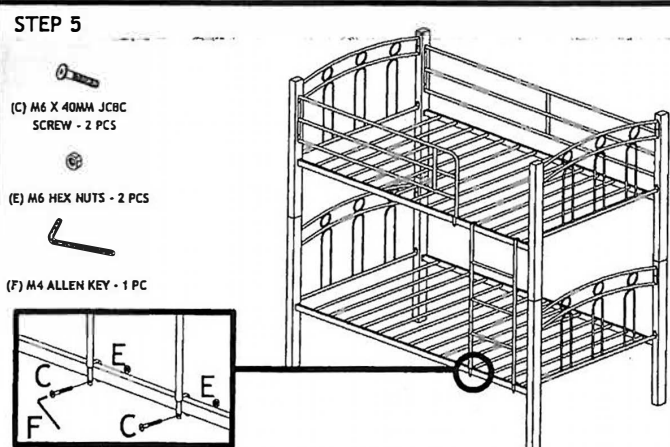

PART LIST

1 TOP POST X 4 PCS	2 BOTTOM POST X 4 PCS	5 STAIRCASE X 1 PC
3 HEADBOARD / FOOTBOARD X 4 PCS	6 LONG FENCING A X 1 PC	7 LONG FENCING B X 1 PC
4 METAL BED BASE X 2 PCS		

HARDWARE LIST

(A) M6 X 20MM JCBB SCREW - 16 PCS	(D) WOOD DOWEL M16 X 65MM - 4 PCS
(B) M6 X 20MM JCBB SCREW - 22 PCS	(E) M6 HEX NUTS - 3 PCS
(C) M6 X 40MM JCBB SCREW - 3 PCS	(F) M4 ALLEN KEY - 1 PC