



Bunk Bed

Option: A

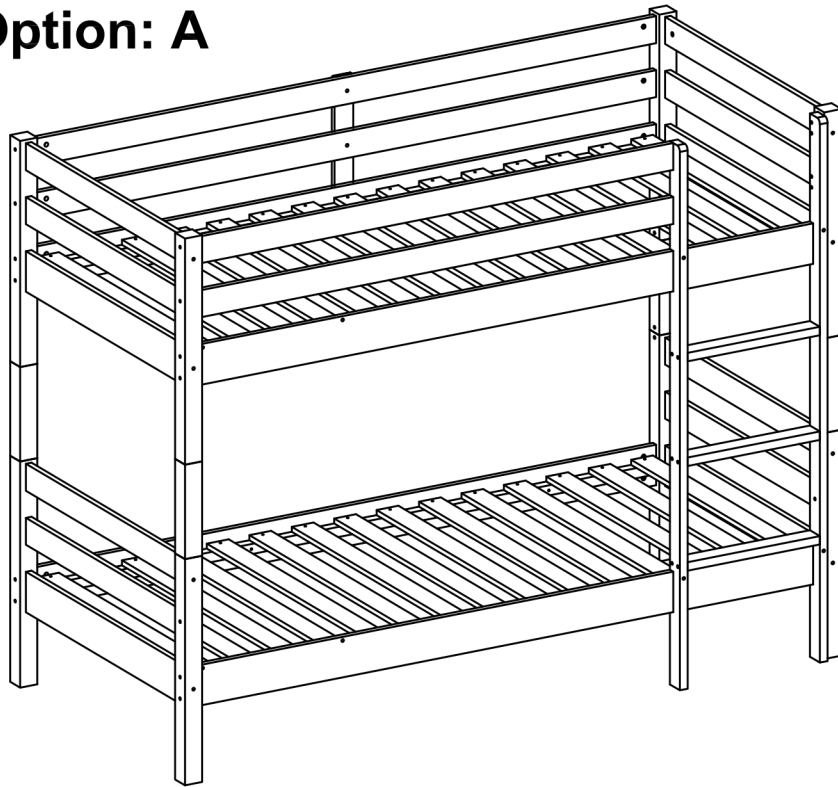


Option: B

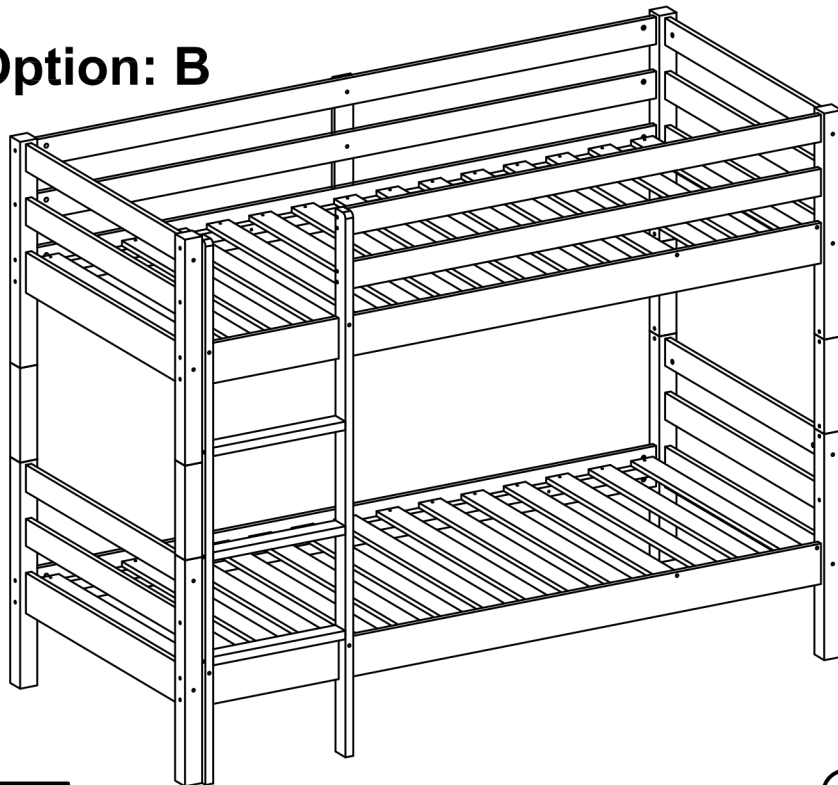


READ THE ASSEMBLY INSTRUCTIONS CAREFULLY. IDENTIFY THE ELEMENTS CONSTITUING YOUR PIECE OF FURNITURE. GROUP AND CHECK THE HARDWARE FITTINGS. GET THE TOOLS NEEDED. CLEAR SPACE TO WORK. PROCEED TO ASSEMBLE







NEVER FORCE THE FITTINGS. TIGHTEN THE SCREW AFTER USING FOR SOMETIME. KEEP YOUR ASSEMBLY INSTRUCTIONS, IT COULD HELP FOR BETTER COMMUNICATION WITH YOUR STORE. IN THE EVENT OF QUERY.

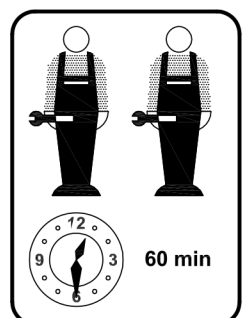


EXPLODED VIEW

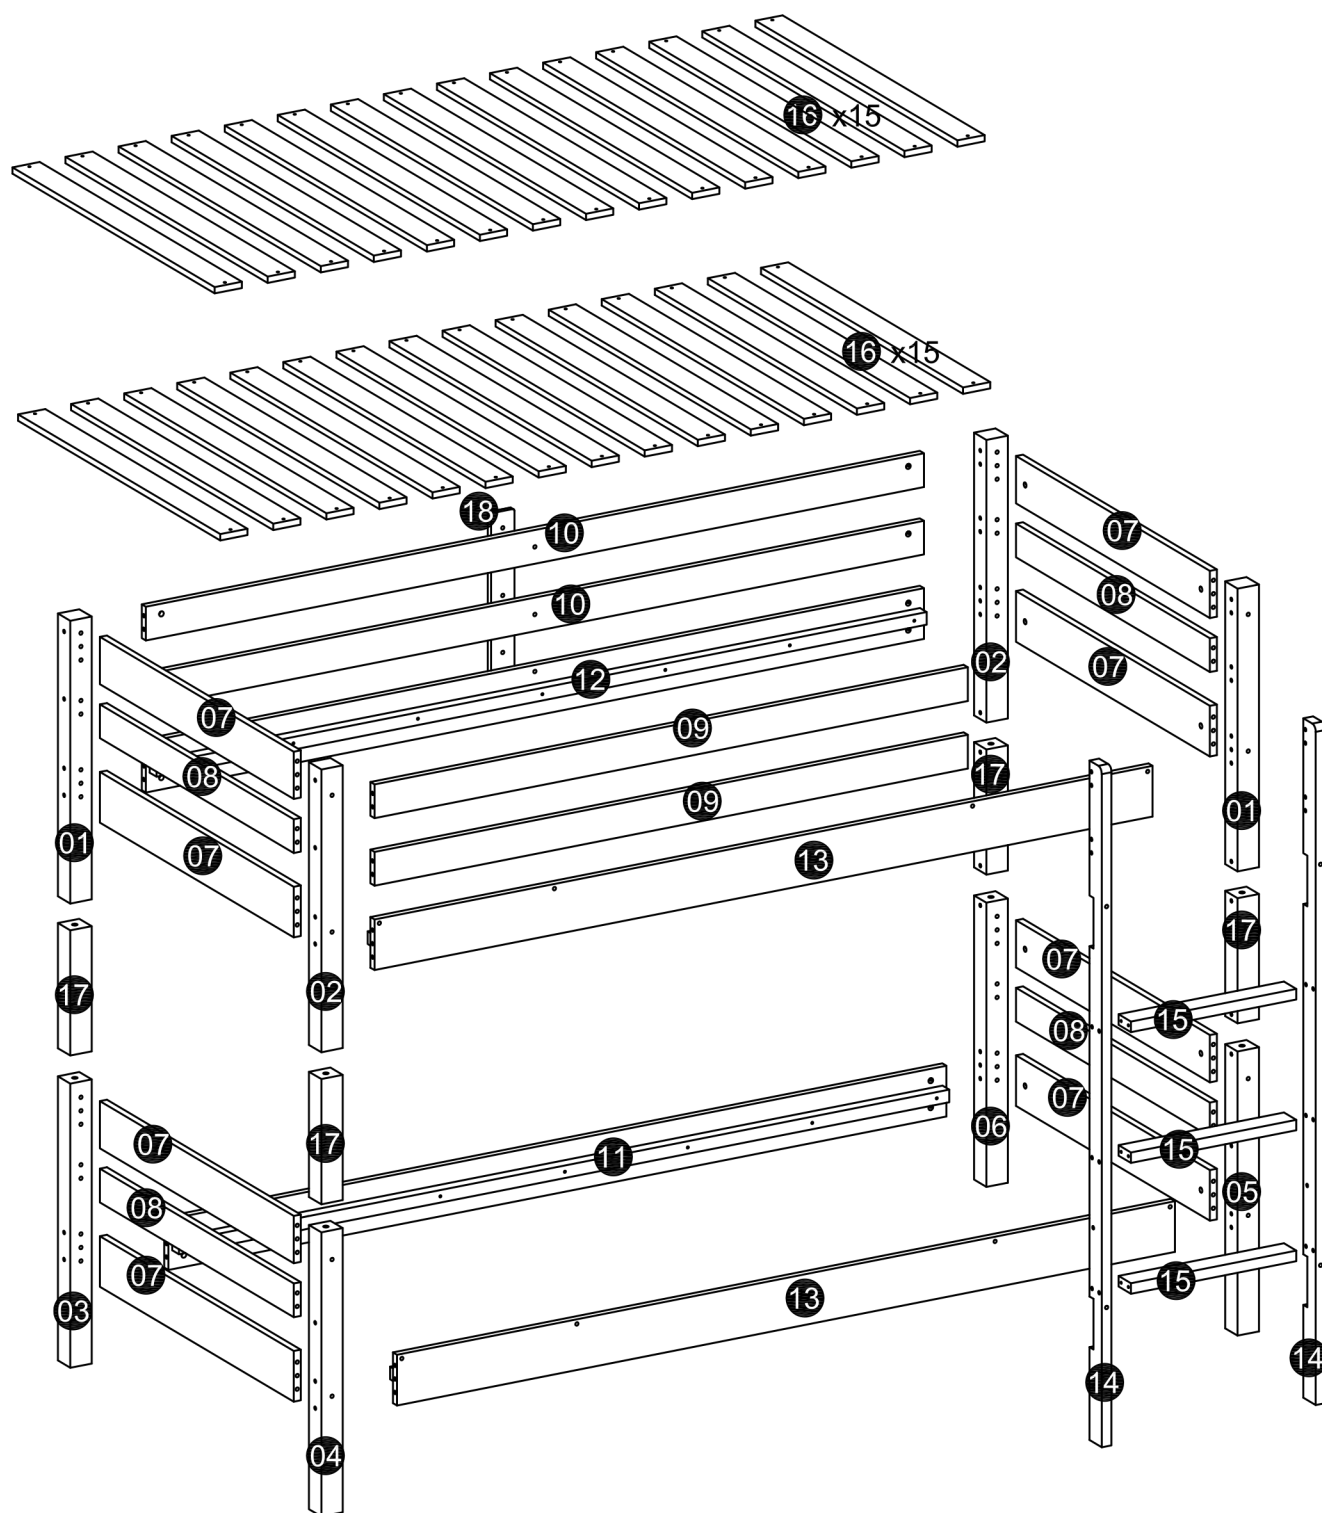


HARDWARE

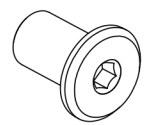
A x38  M6 x100mm	B x40  	C x5  M6 x70mm	D x3  M6 x25mm	E x10 
F x12  Ø7 x60mm	G x2  	H x8  Ø12 x60mm	I x66  Ø8 x30mm	J x60  Ø4 x30mm
K x8  Ø8mm	L x16  Ø4 x40mm	M x4  M6 x50mm		

TOOLS



Ruler - Use this ruler to help correctly identify the screws



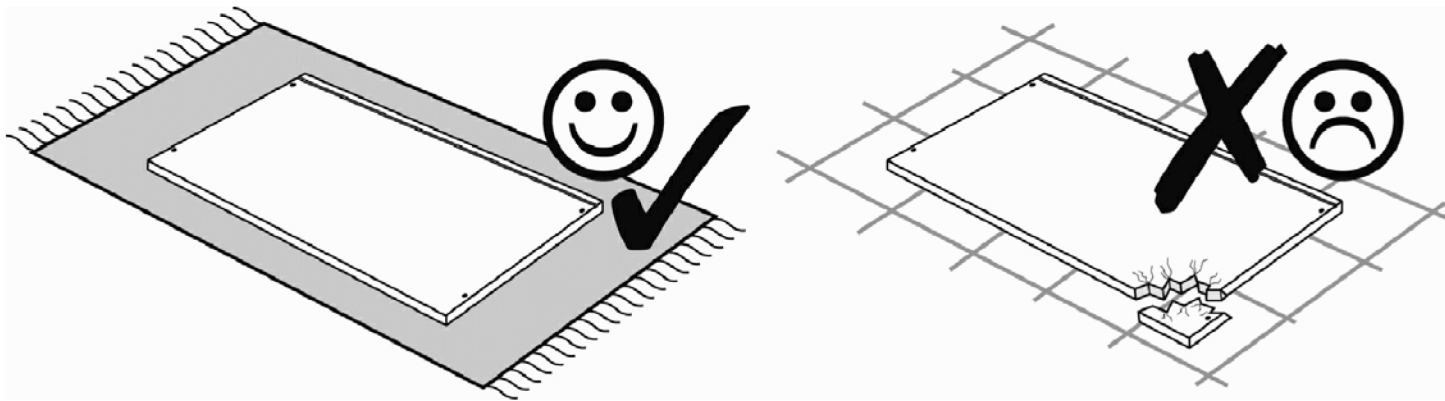


01


I x60




Ø8 x30mm

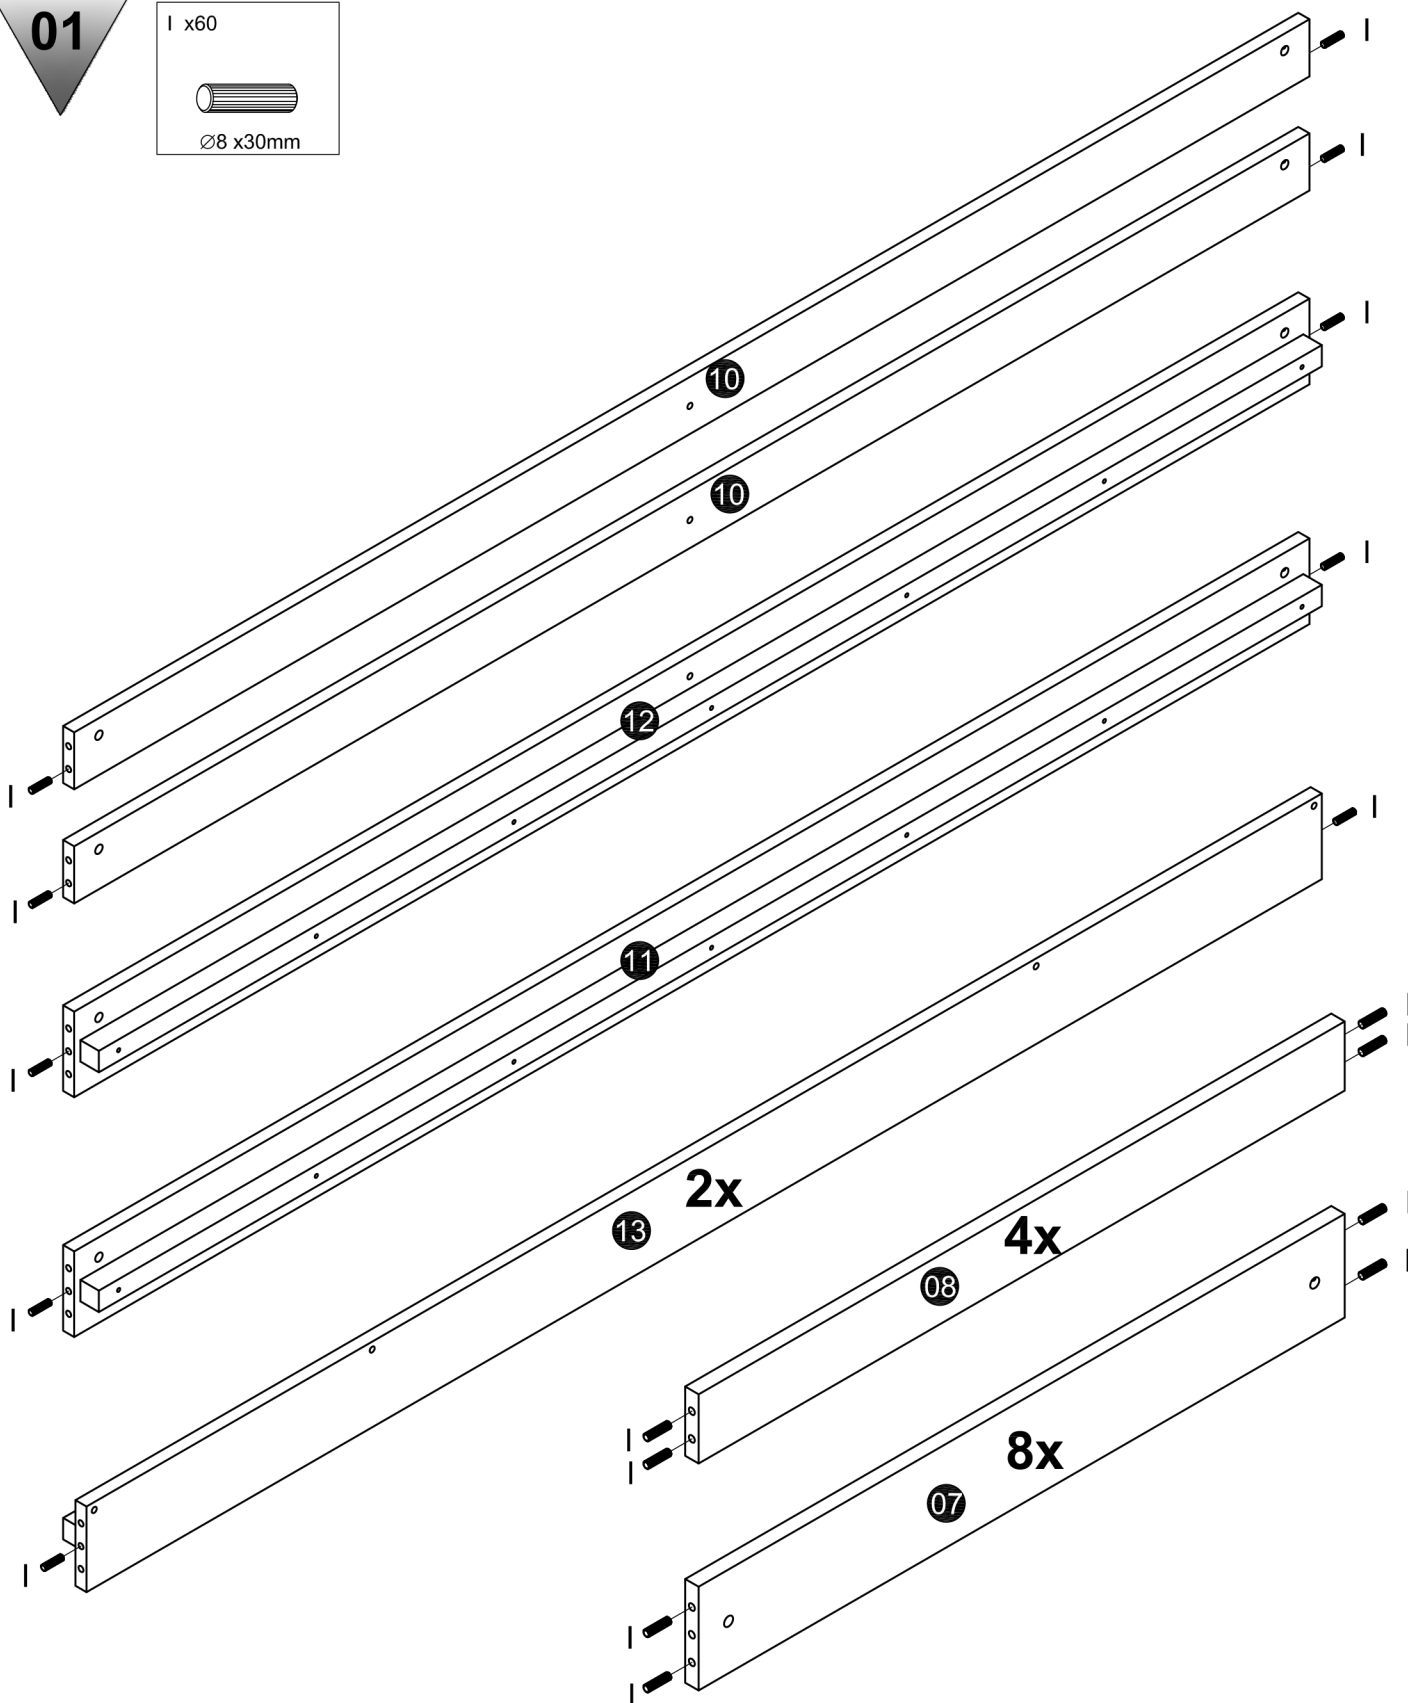


02

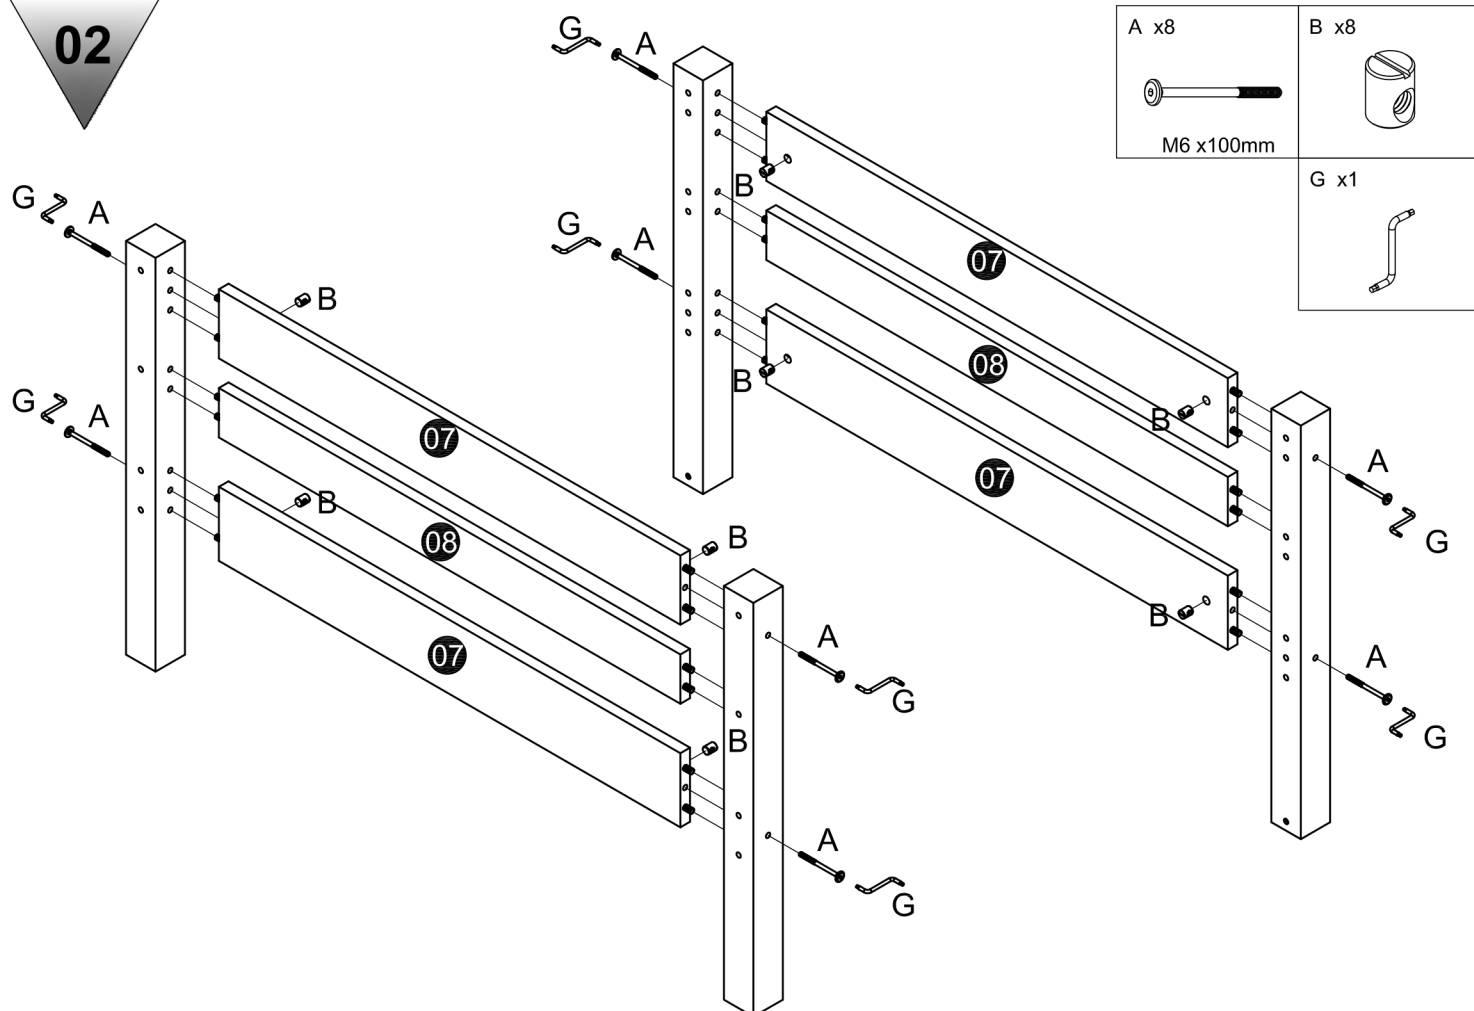


03

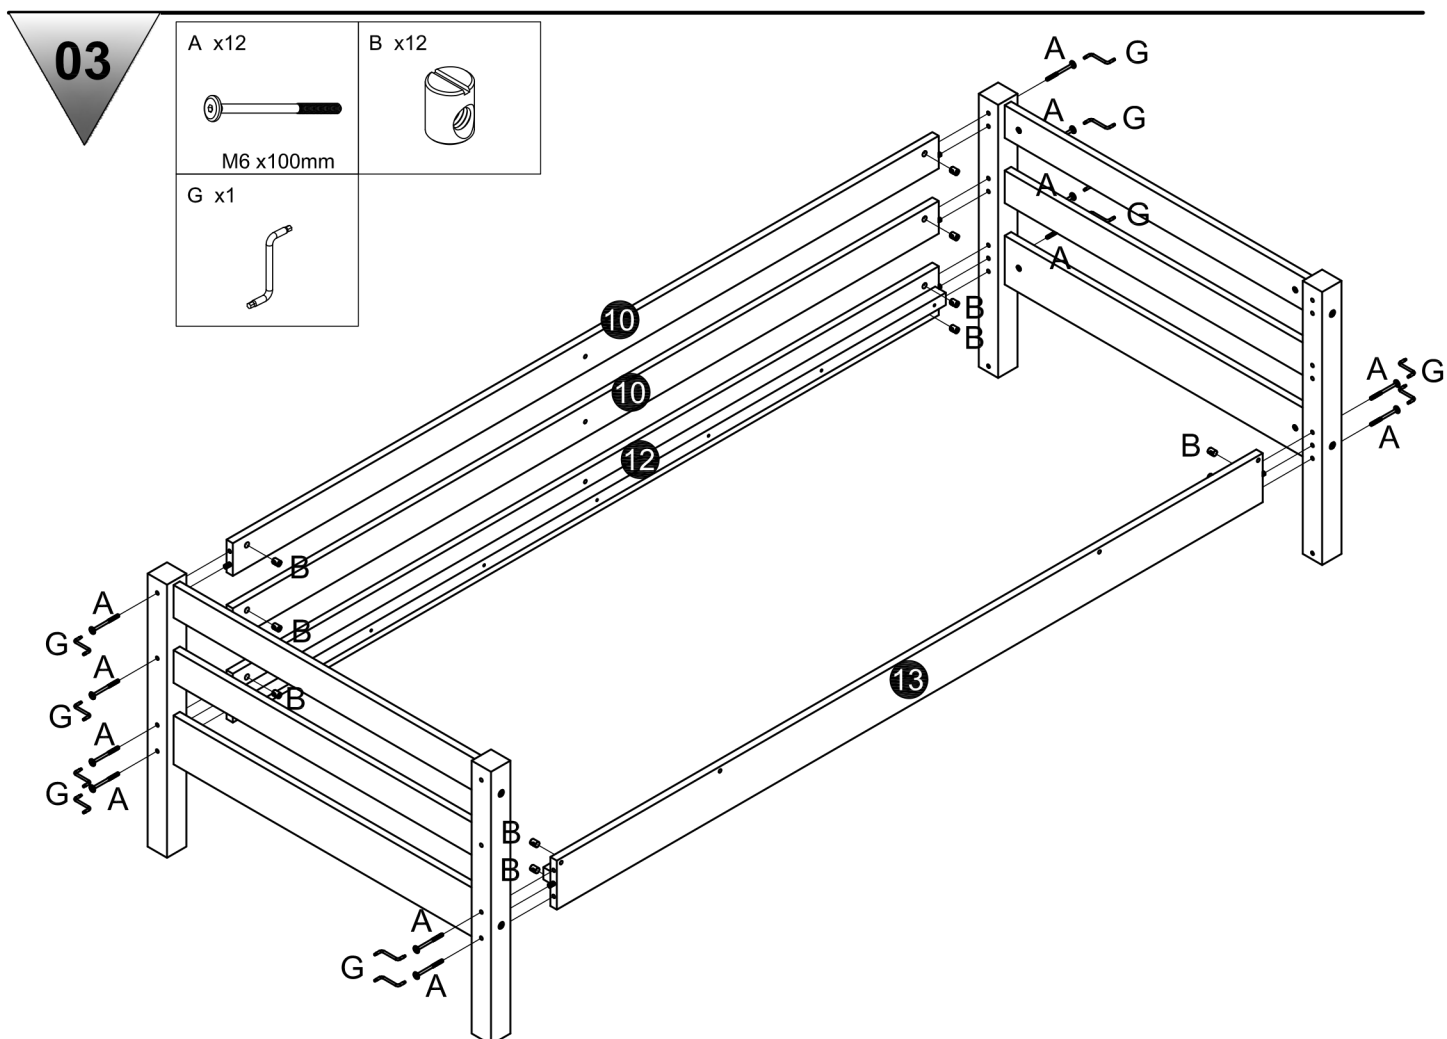


04

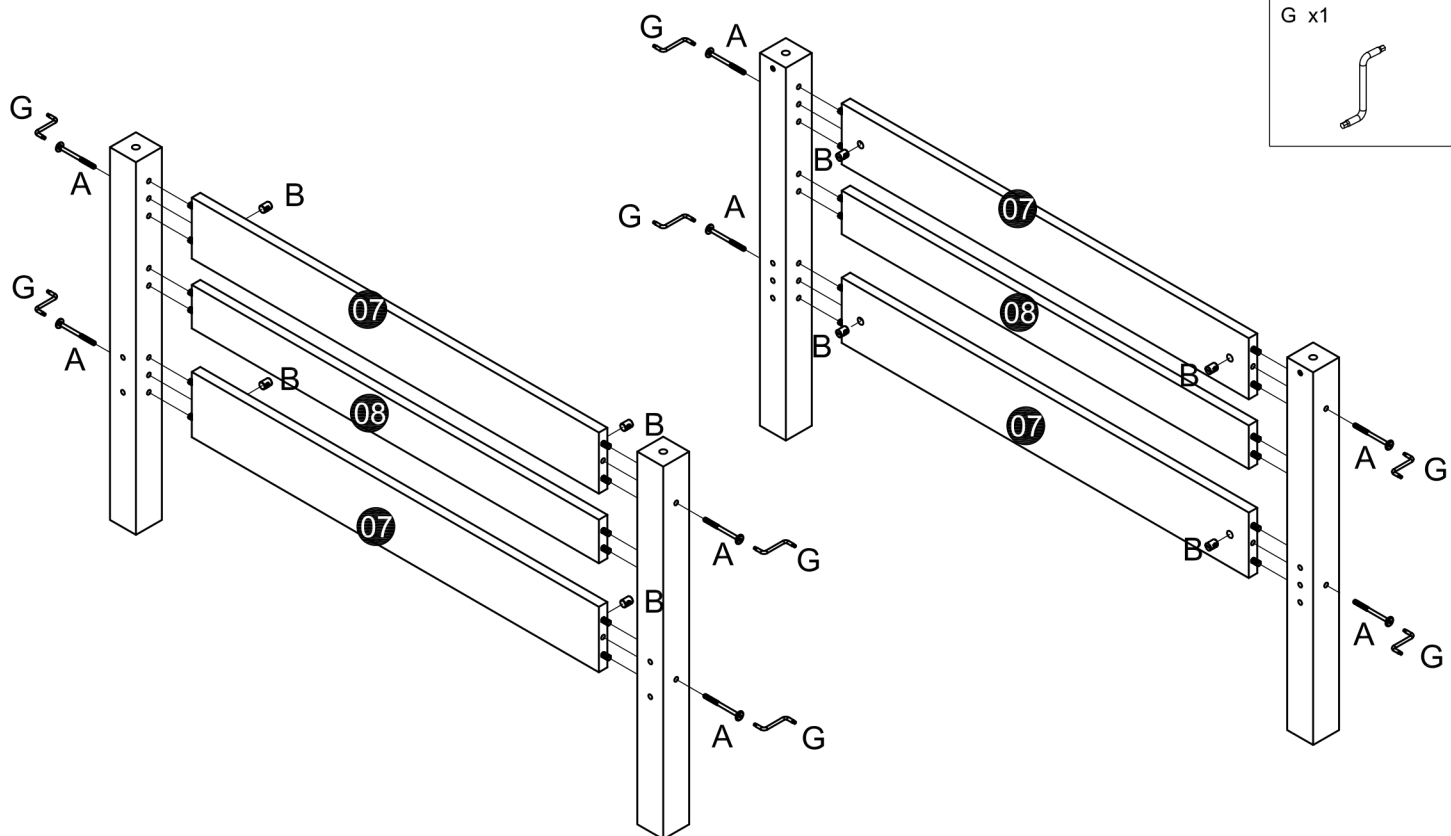

05

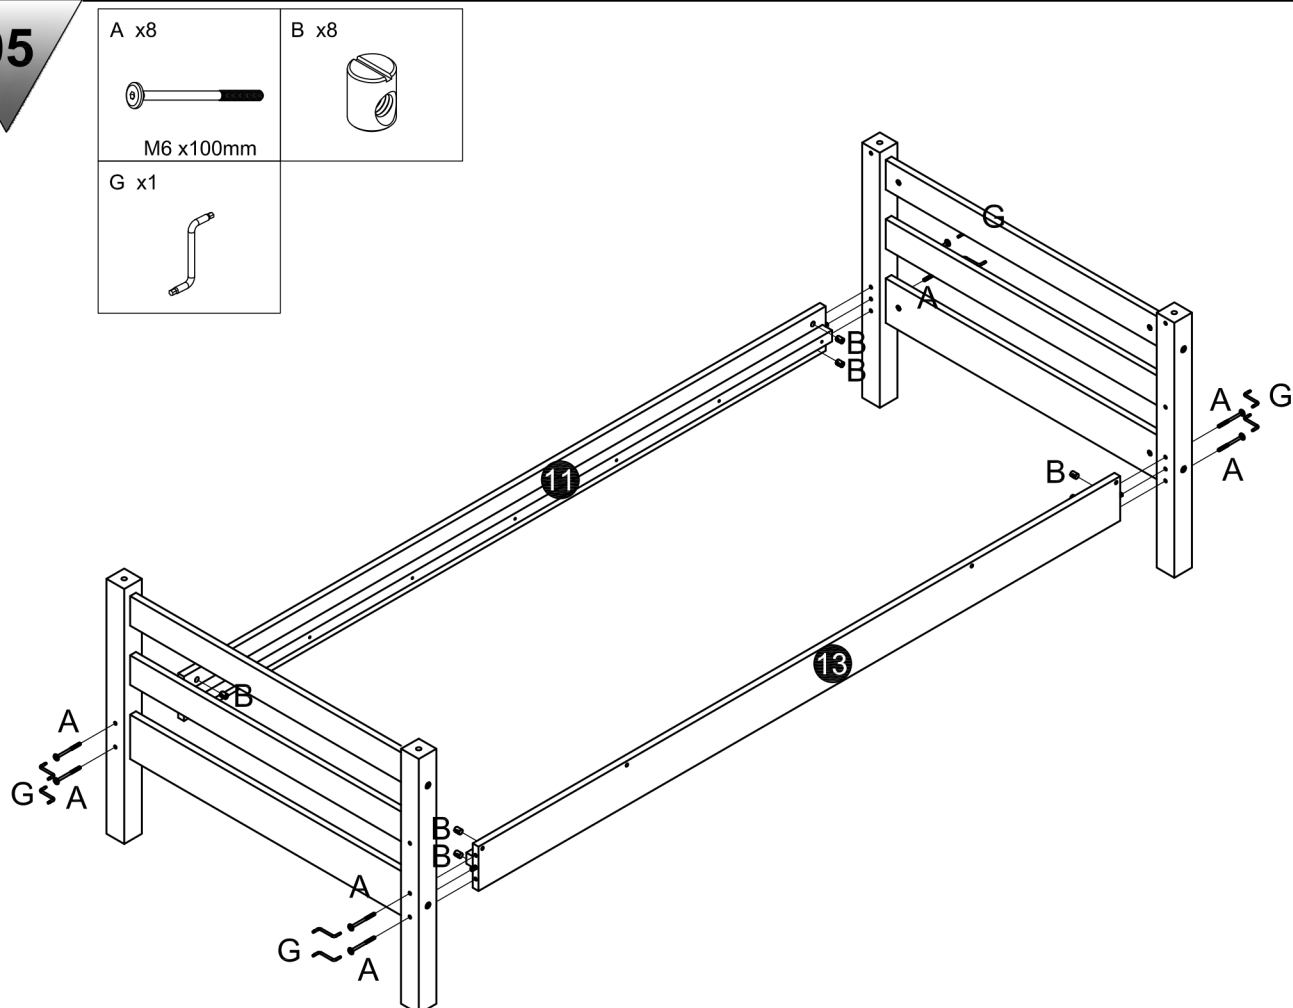

06

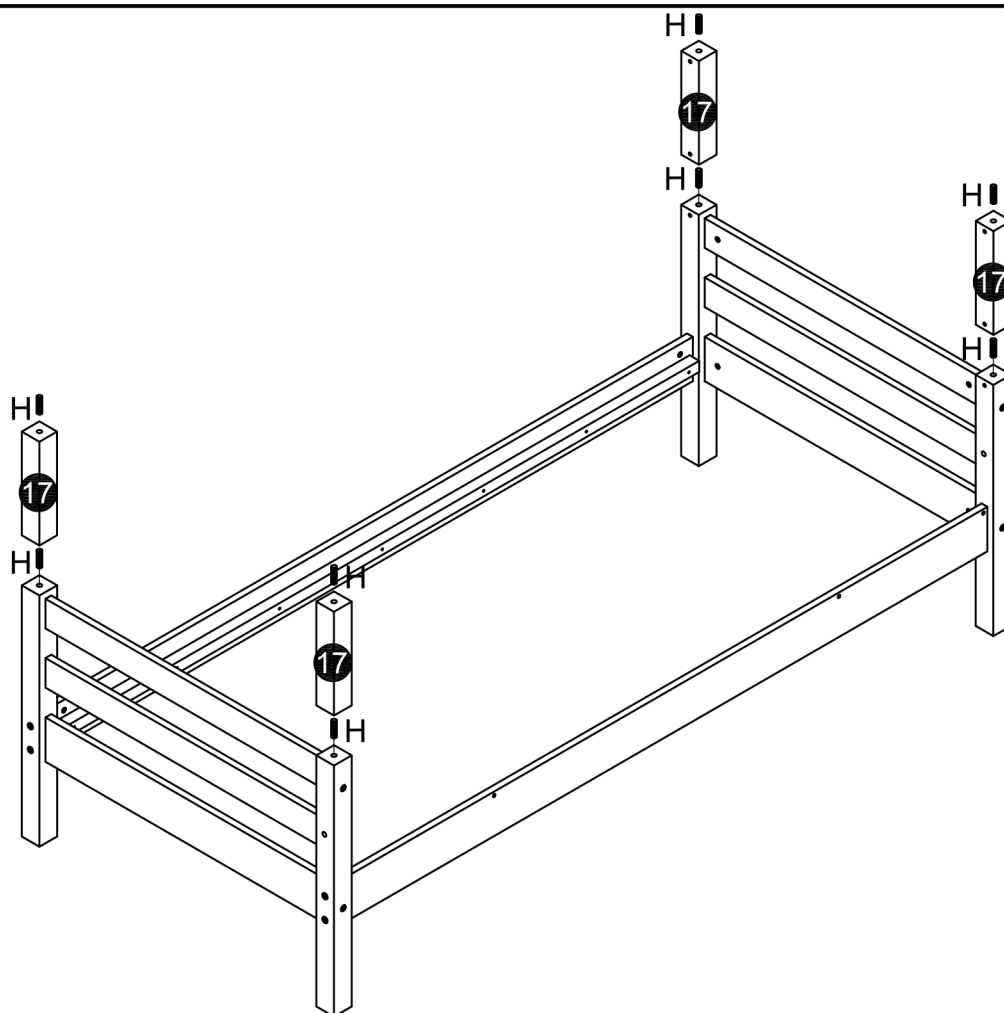

H x8




Ø12 x60mm

07

L x16



Ø4 x40mm

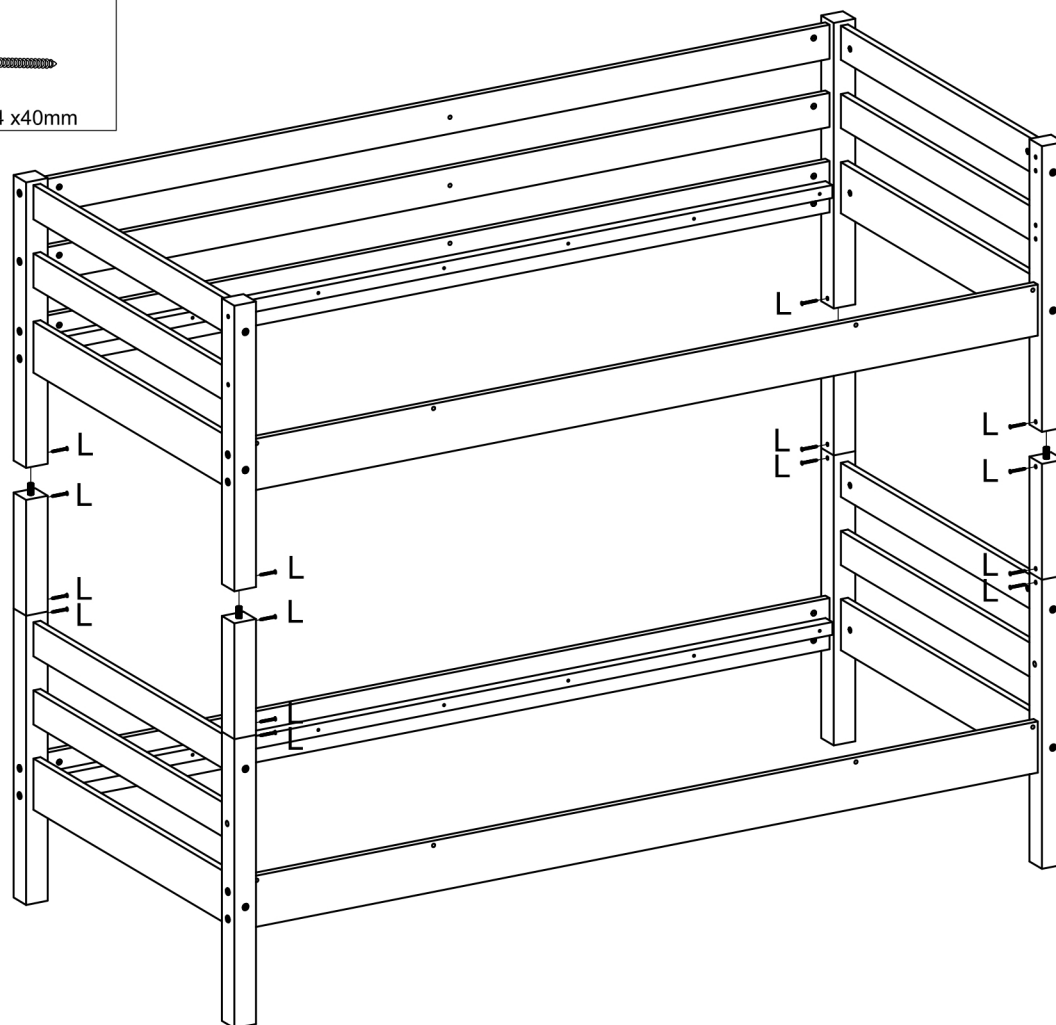

08


G x1



F x12



Ø7 x60mm

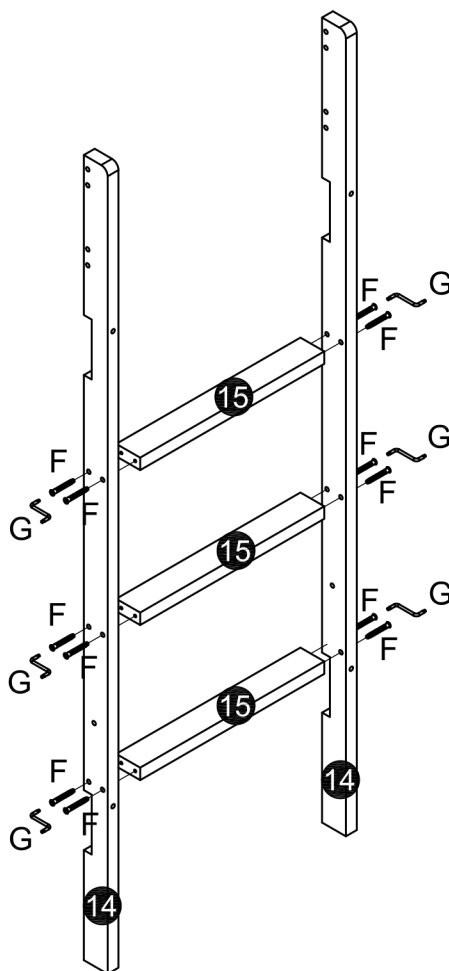


09

I x2




Ø8 x30mm


Option: A

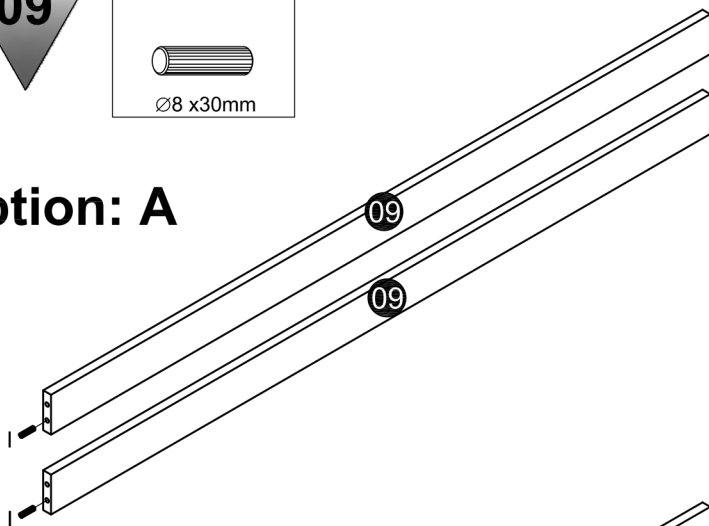


Option: A

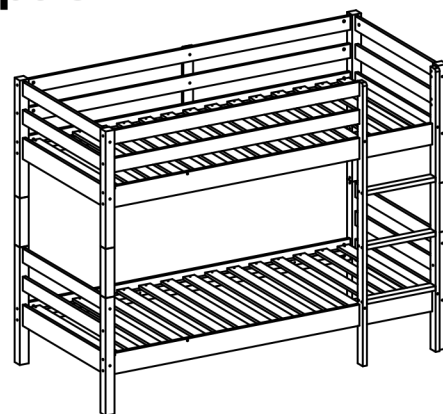

Option: B

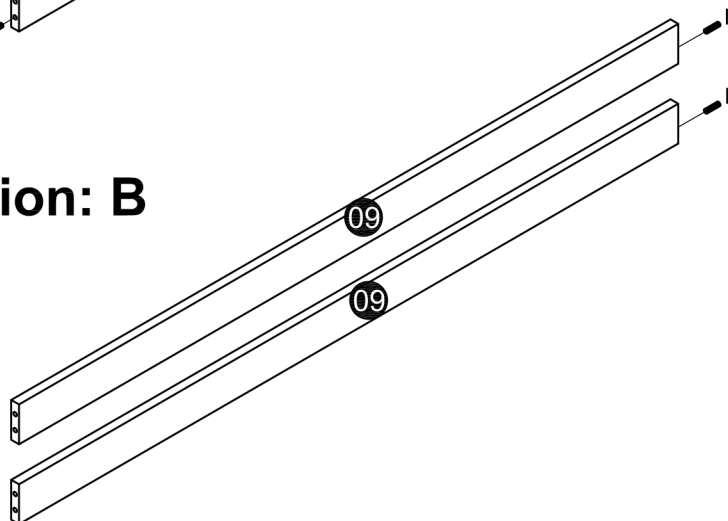



Option: B

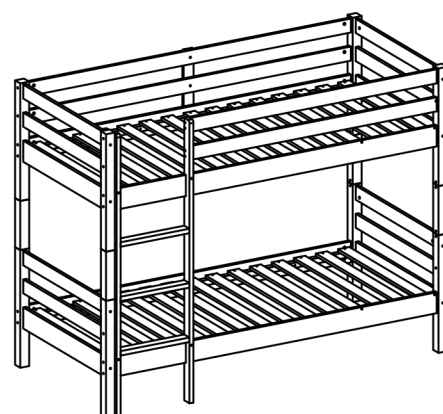

10


Option: A

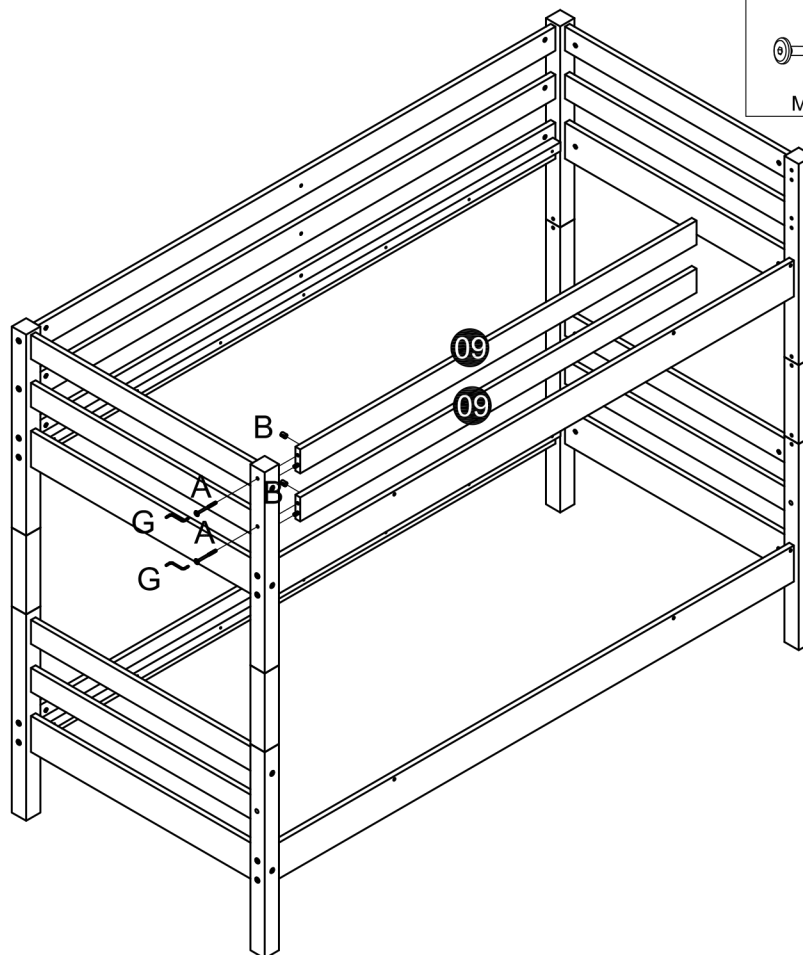

A x2  M6 x100mm	B x2 
	G x1 


11

Option: B

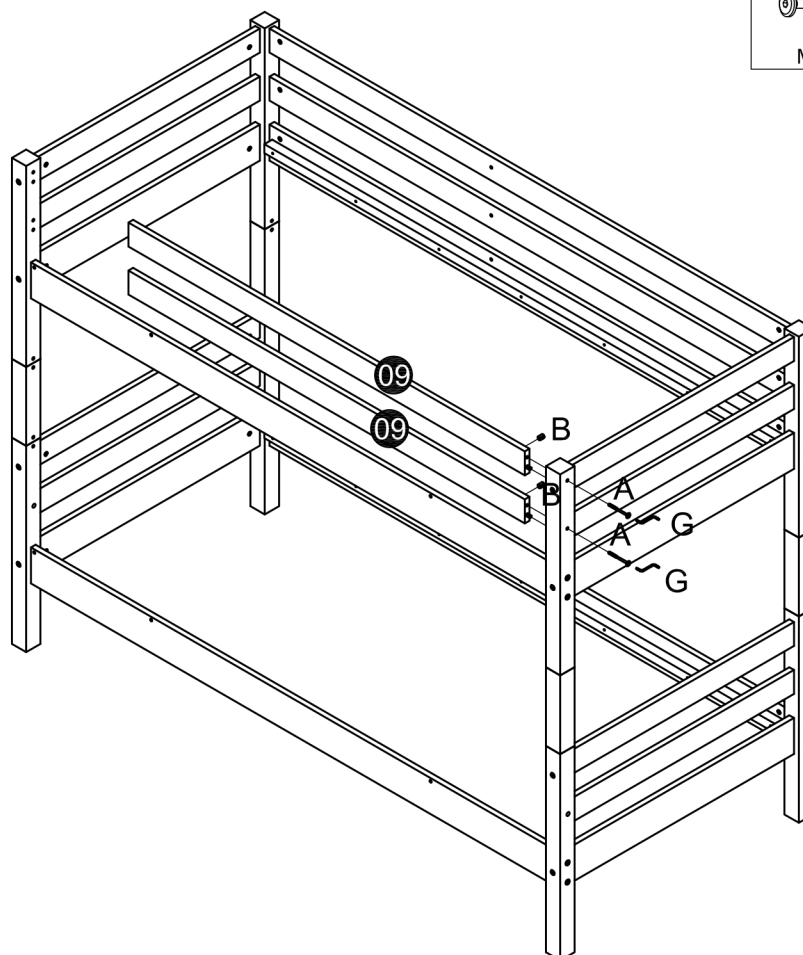


A x2  M6 x100mm	B x2 
	G x1 



12

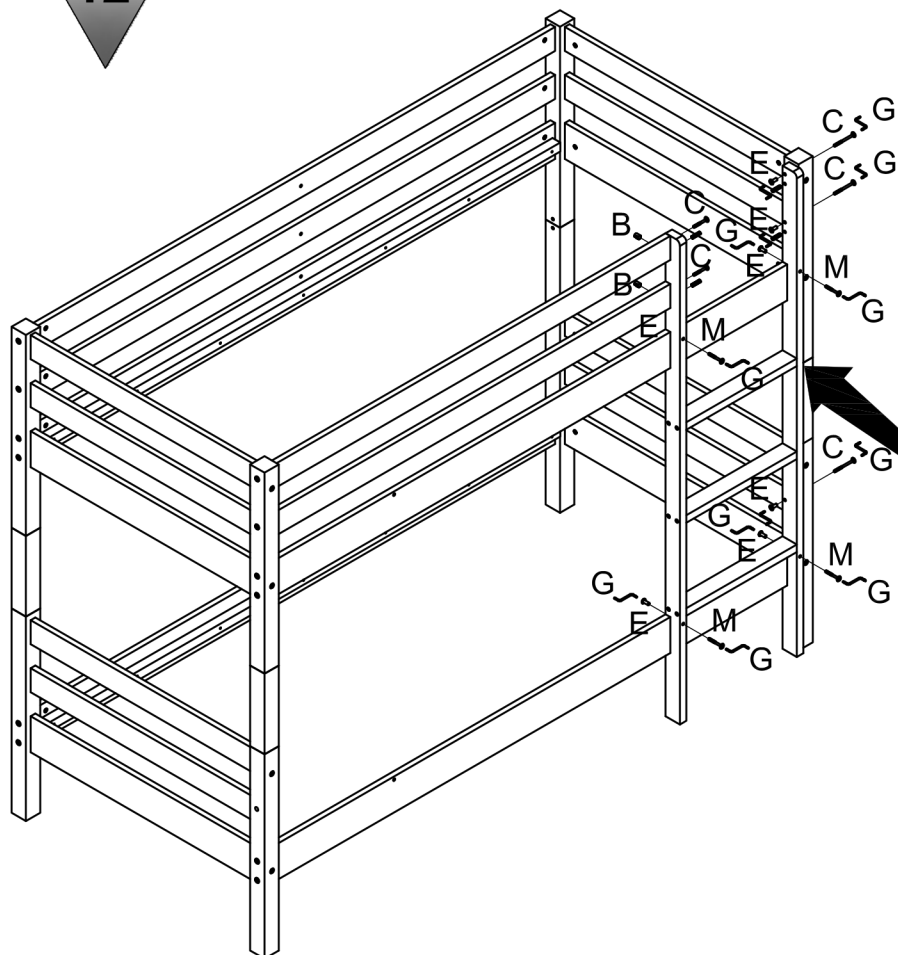


G x2 	M x4  M6 x50mm	E x7 
I x4  Ø8 x30mm	C x5  M6 x70mm	B x2 

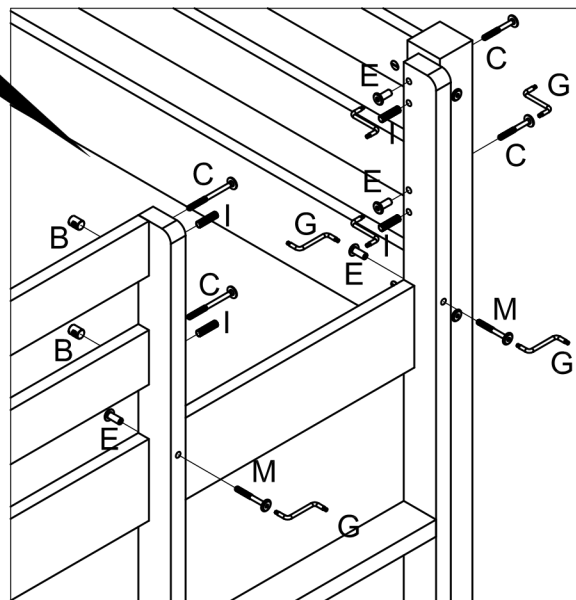

13

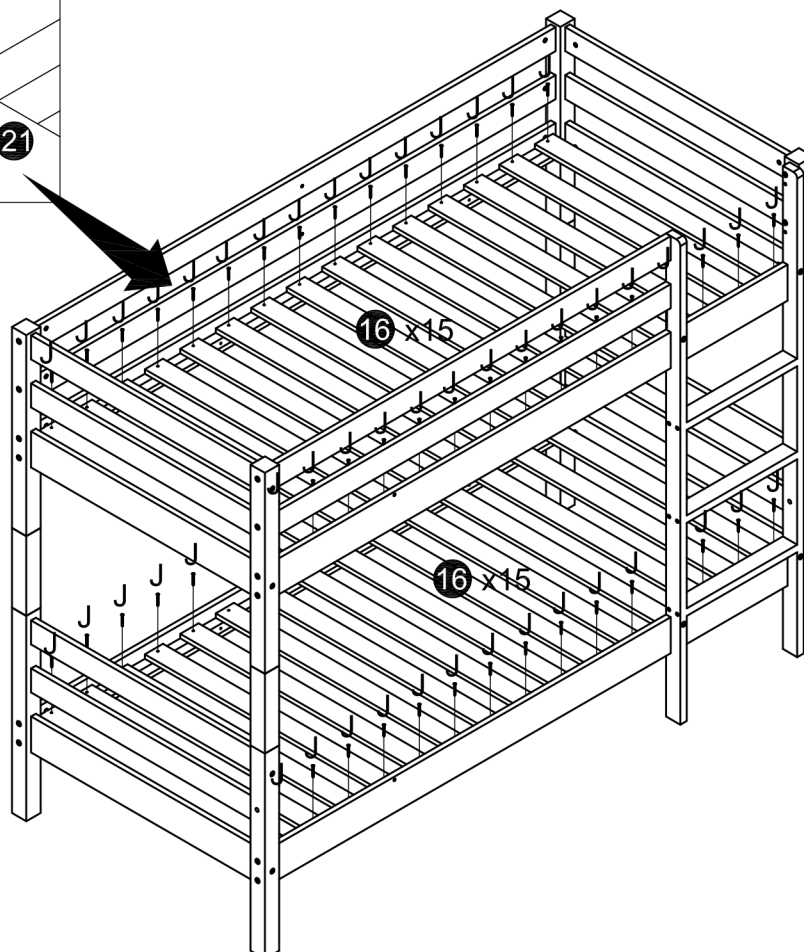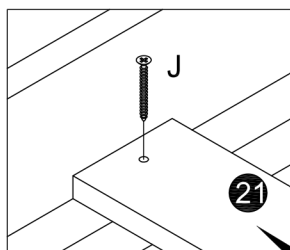

J x60  Ø4 x30mm
--

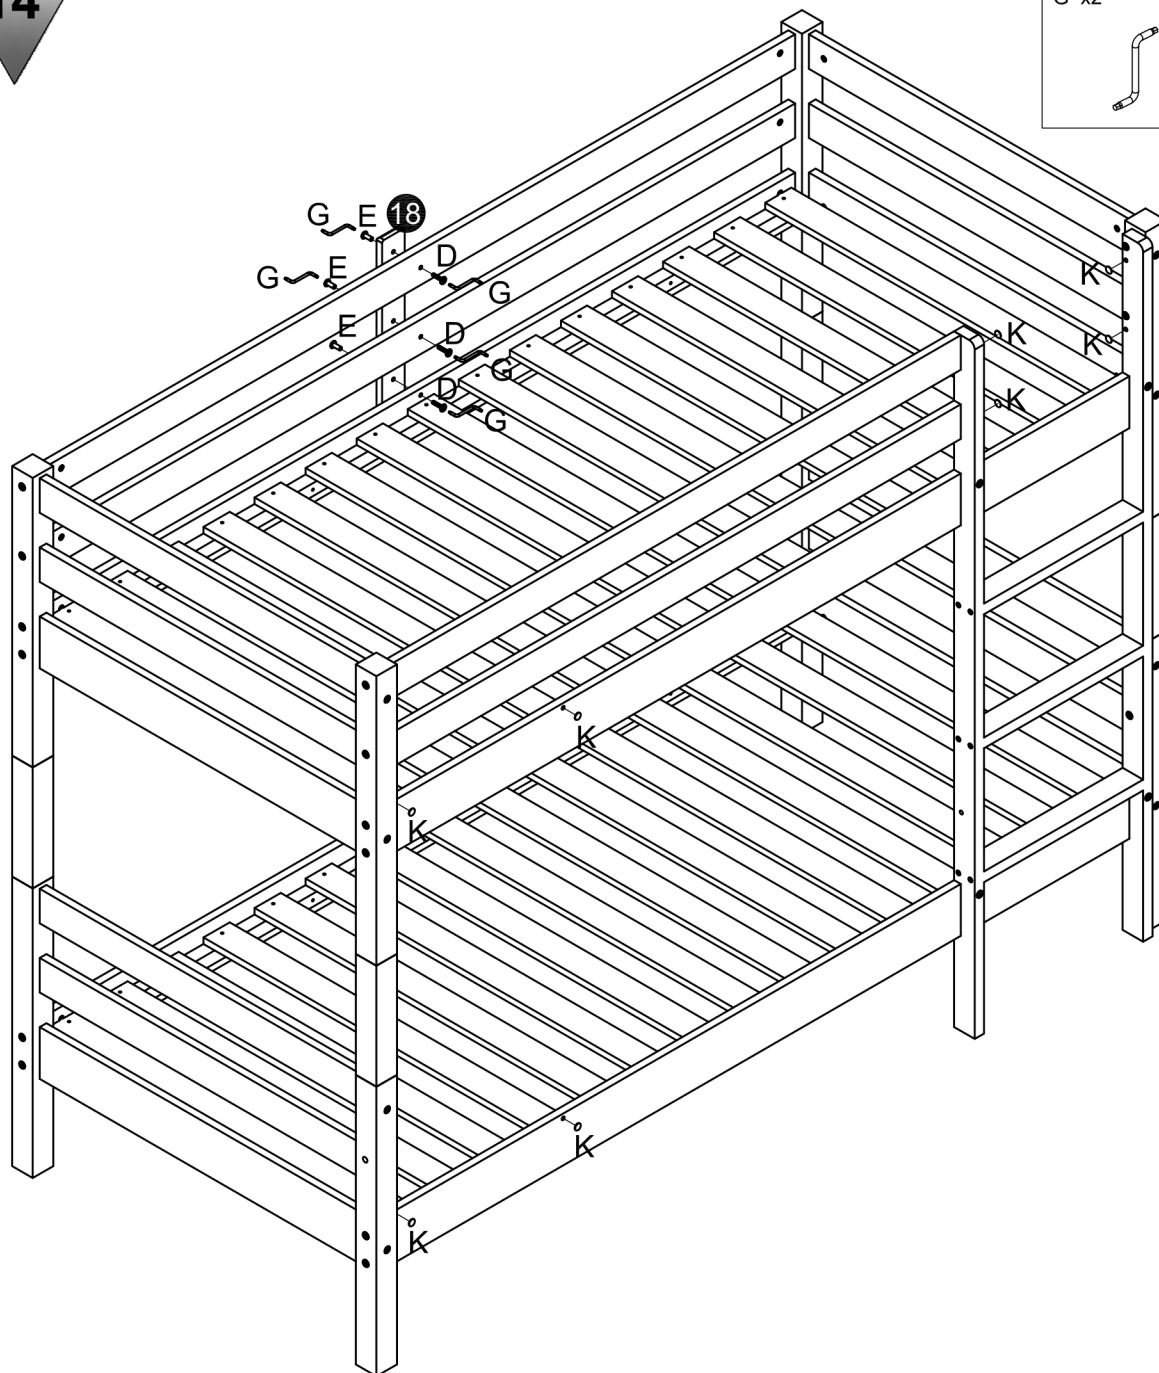

G x2



K x8



Ø8mm

E x3



D x3



M6 x25mm