

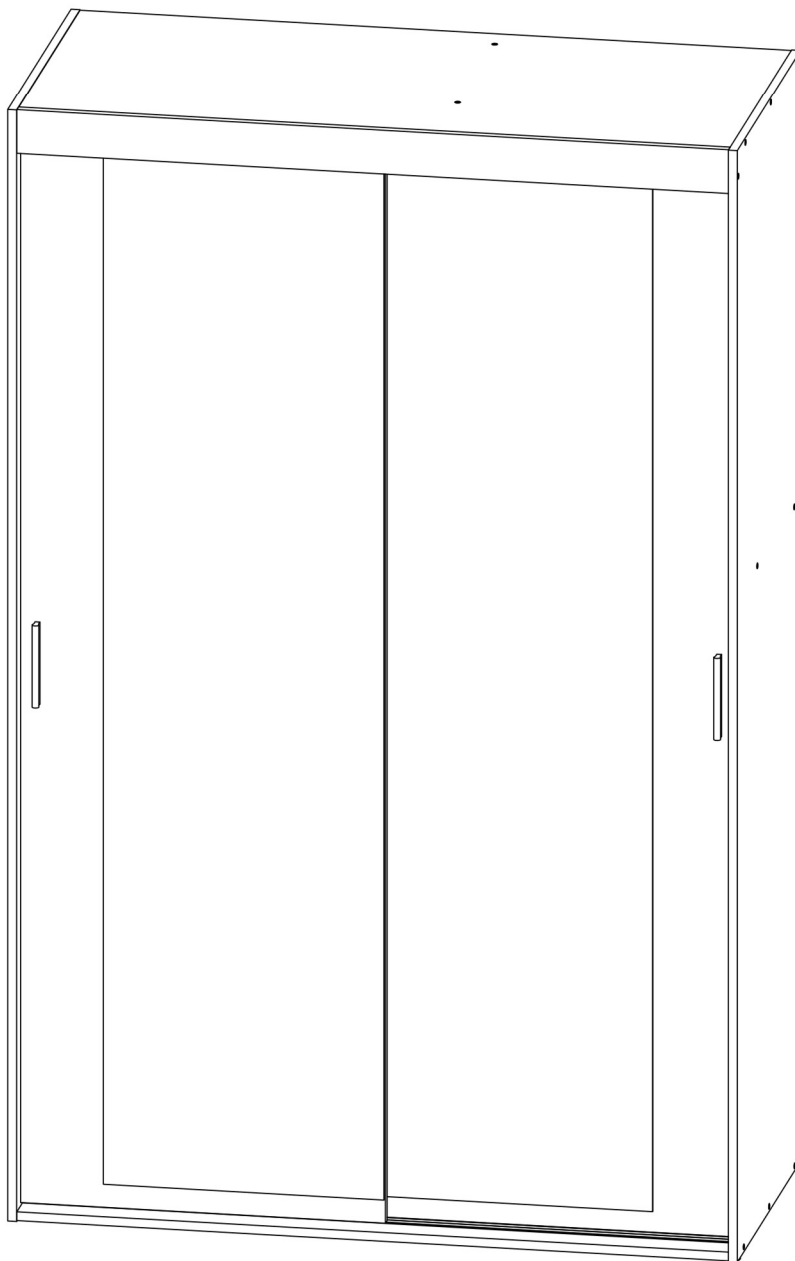
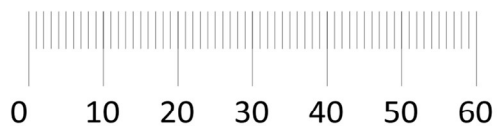
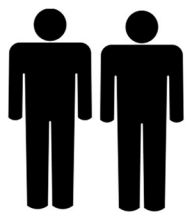
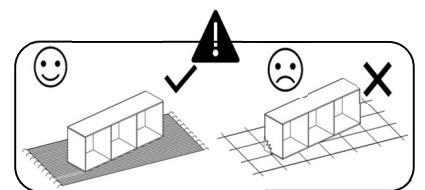


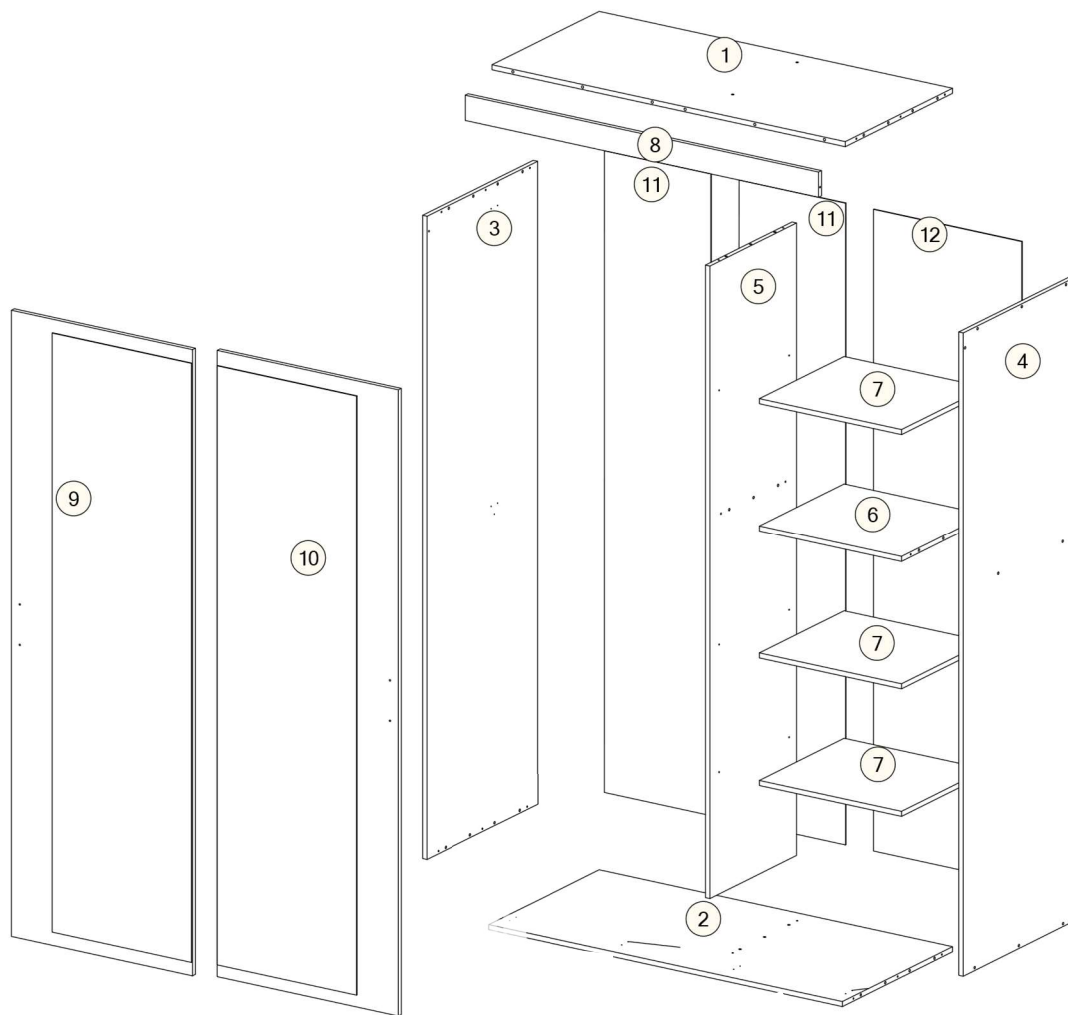


K 8x35 x34	F 7x50 x22	ZM x22	BL x20	D4 4x16 x28	D6 3x16 x28	RZ x4	N x6	G 2x20 x90	WG x4
WD x4	R x4	GL GLUE x1	KL x1	P1 4x25 x4	U x2	Y x1	B x12	DR x2	


1

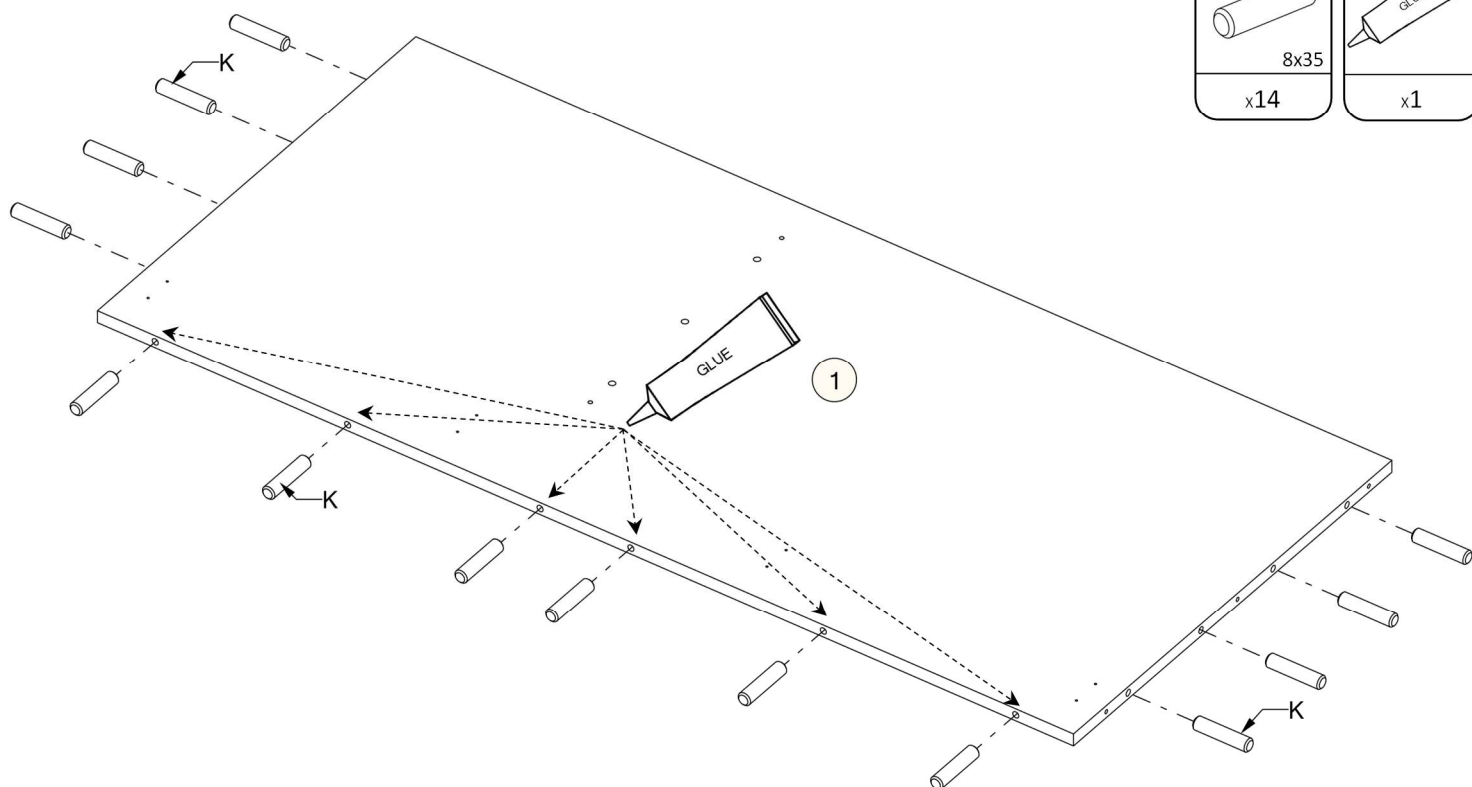


2

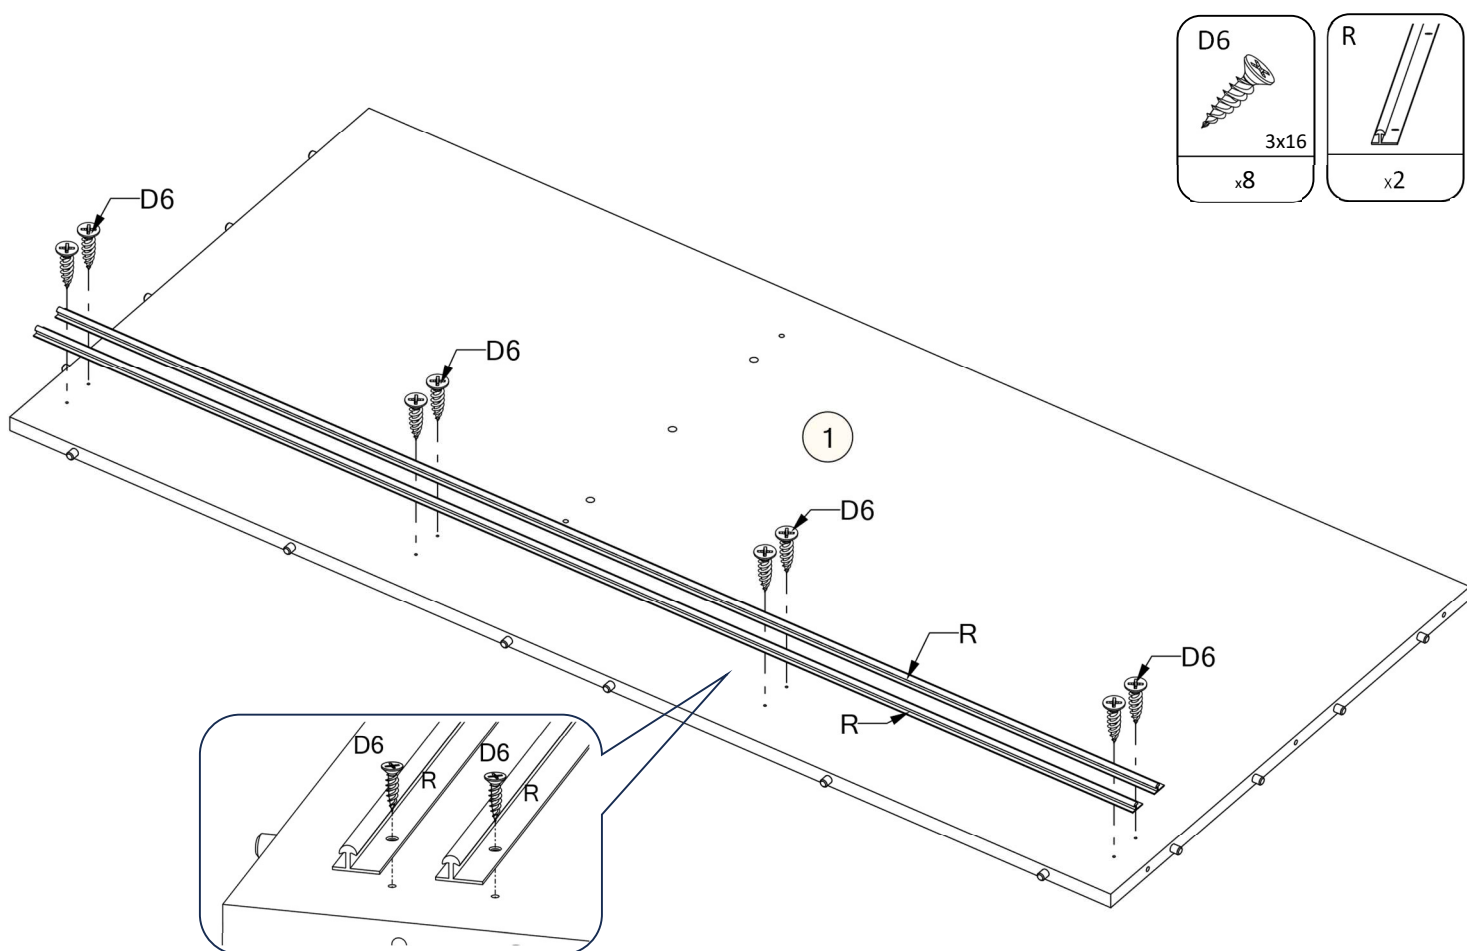

3

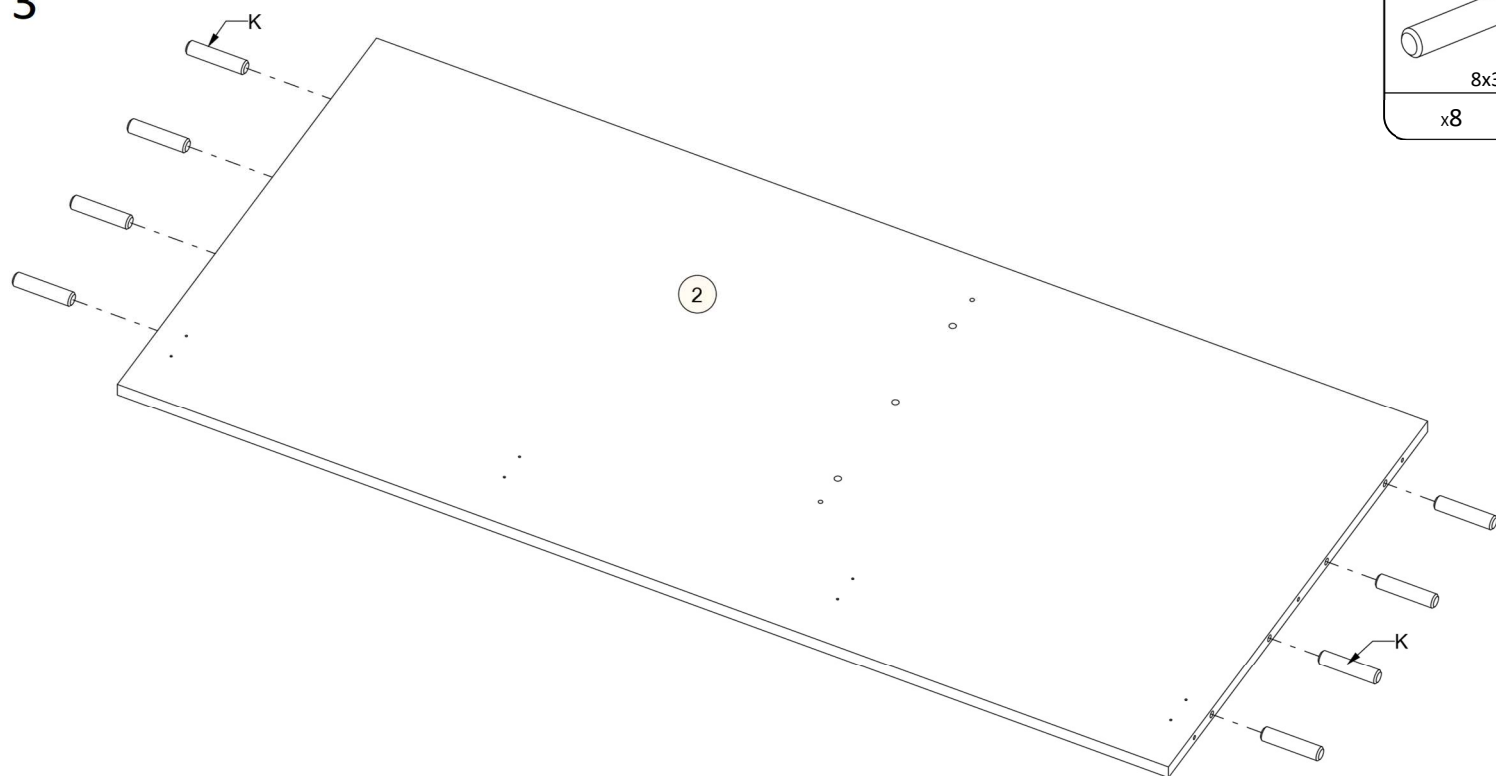

4

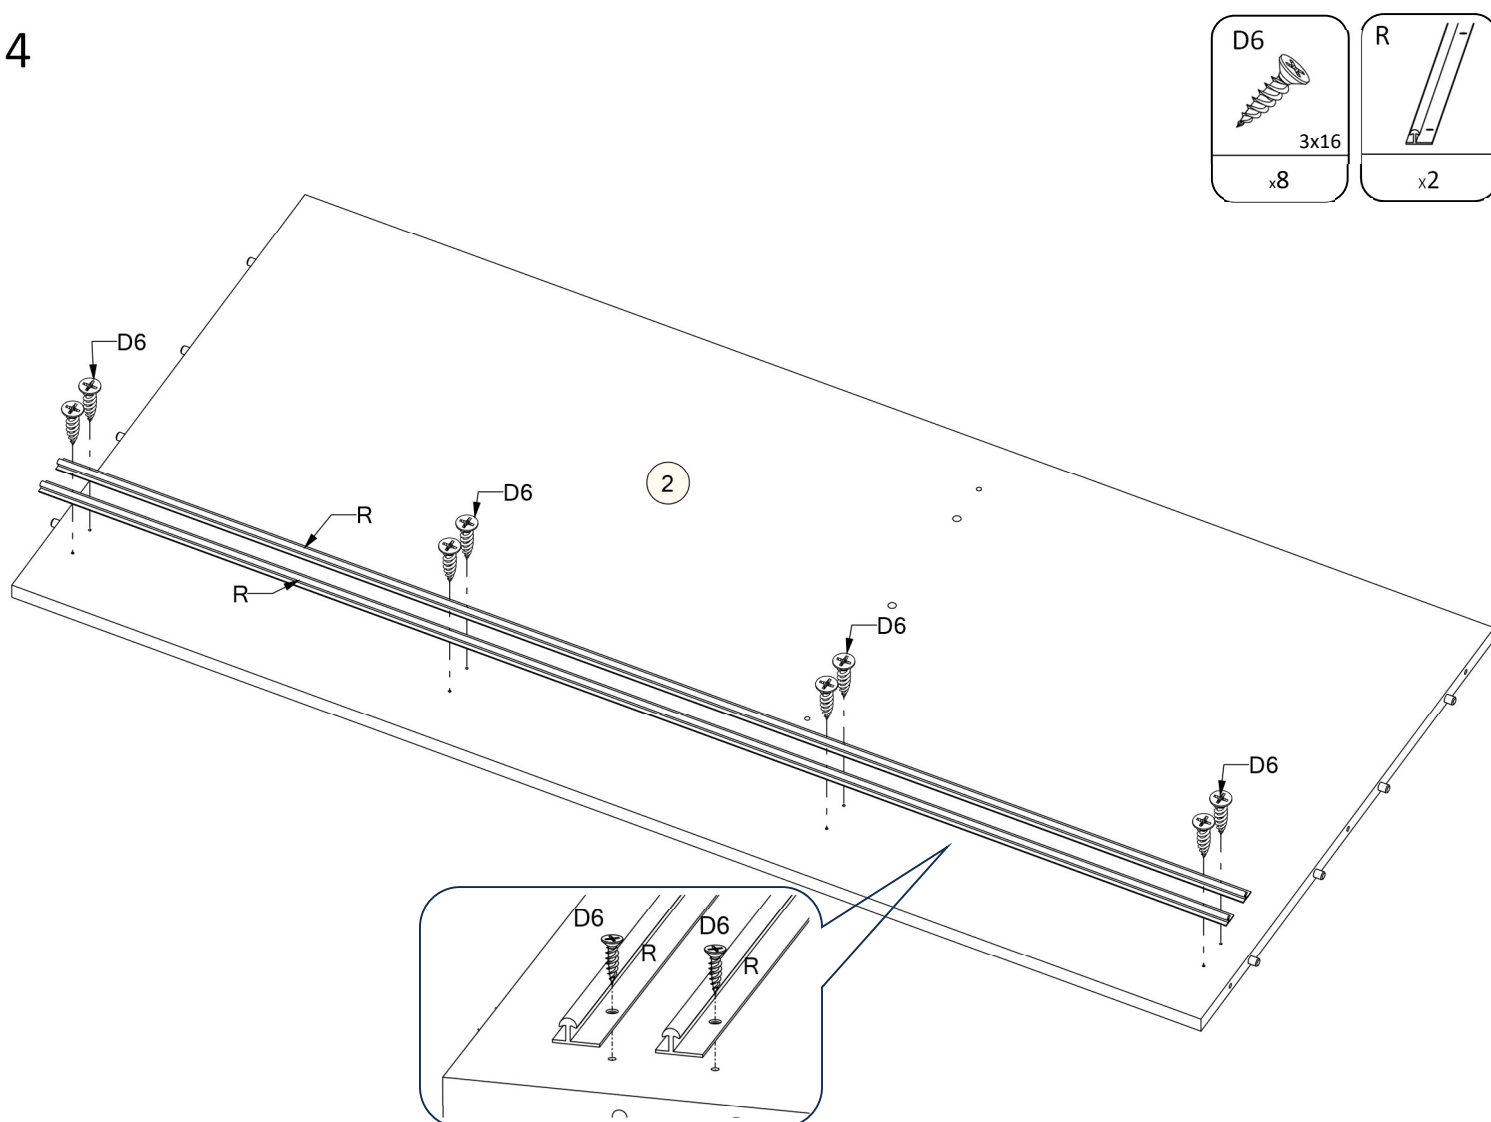

5

RZ

D4

D4

D4

RZ

RZ

D4

D4

D4

RZ

3

N

Nut

D4

4x16

Screw

RZ

Washer

x2


x6

x2


6

Diagram 6 illustrates the assembly of the bottom panel. The panel is shown with pre-drilled holes. Screws labeled 'N' are used to secure the panel to the frame. Screws labeled 'B' are used to secure the panel to the side rails. A circular callout '4' indicates a specific hole location. A legend in the top right corner shows that 'B' represents a screw (x6) and 'N' represents a nut (x2).



7

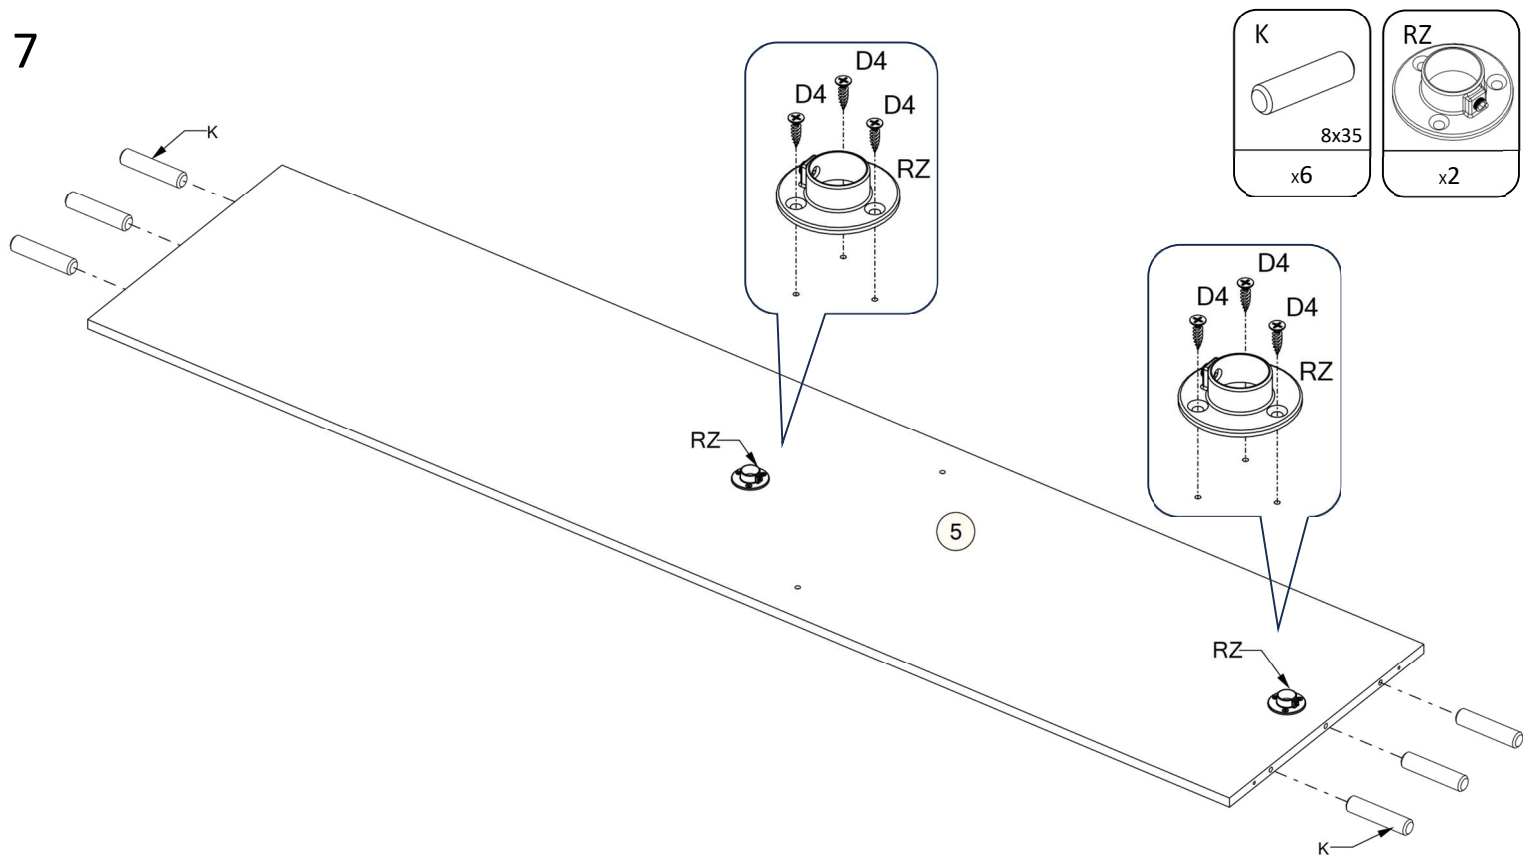




8

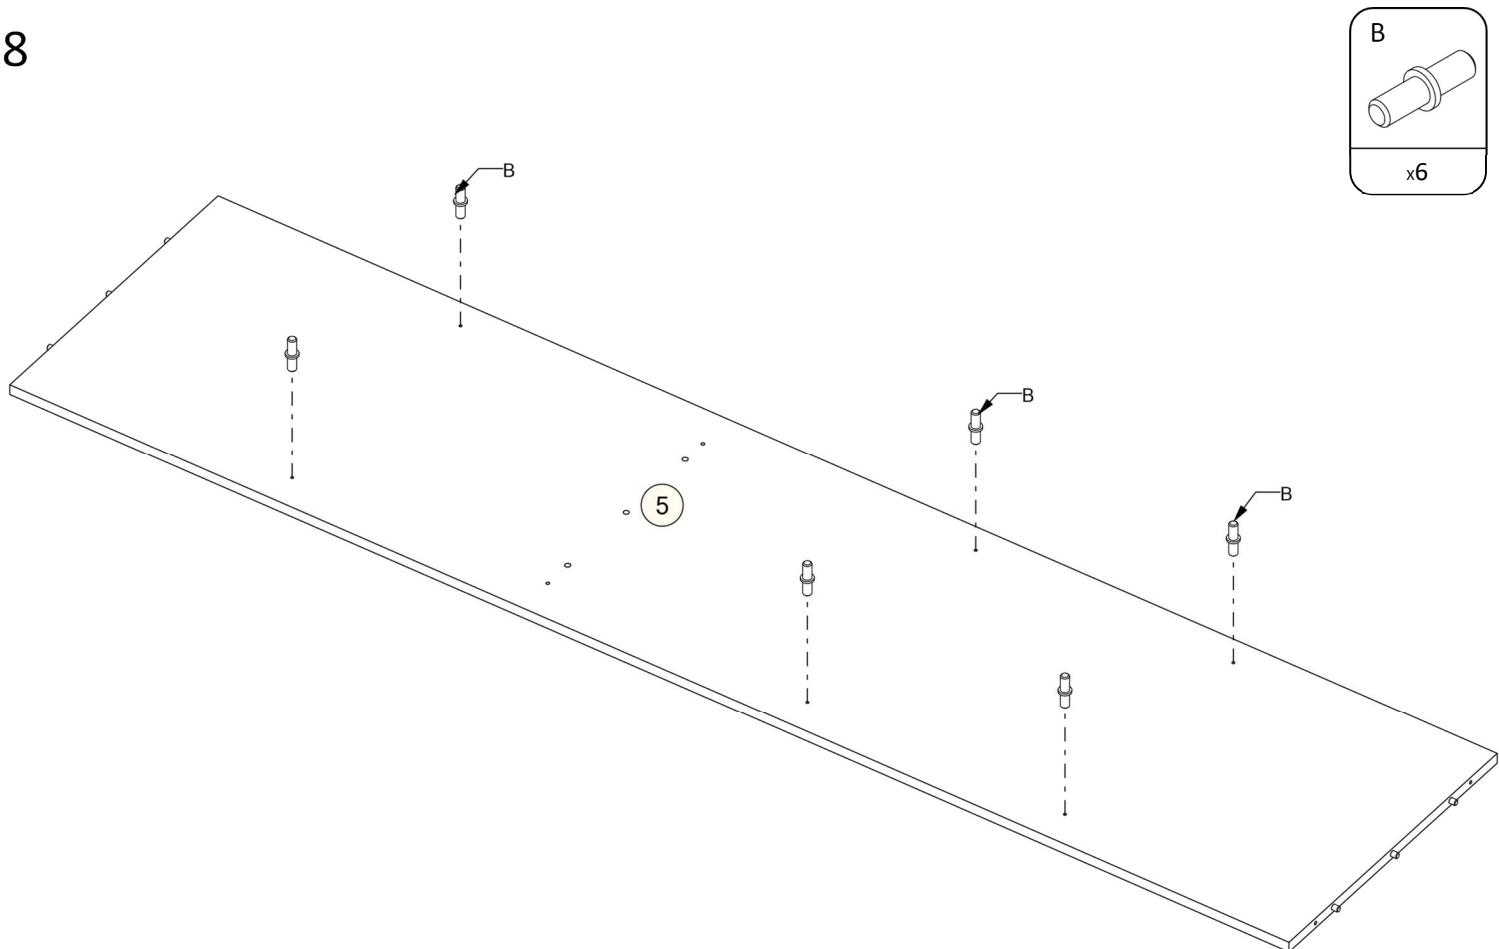




9

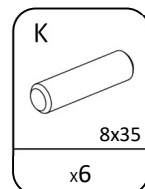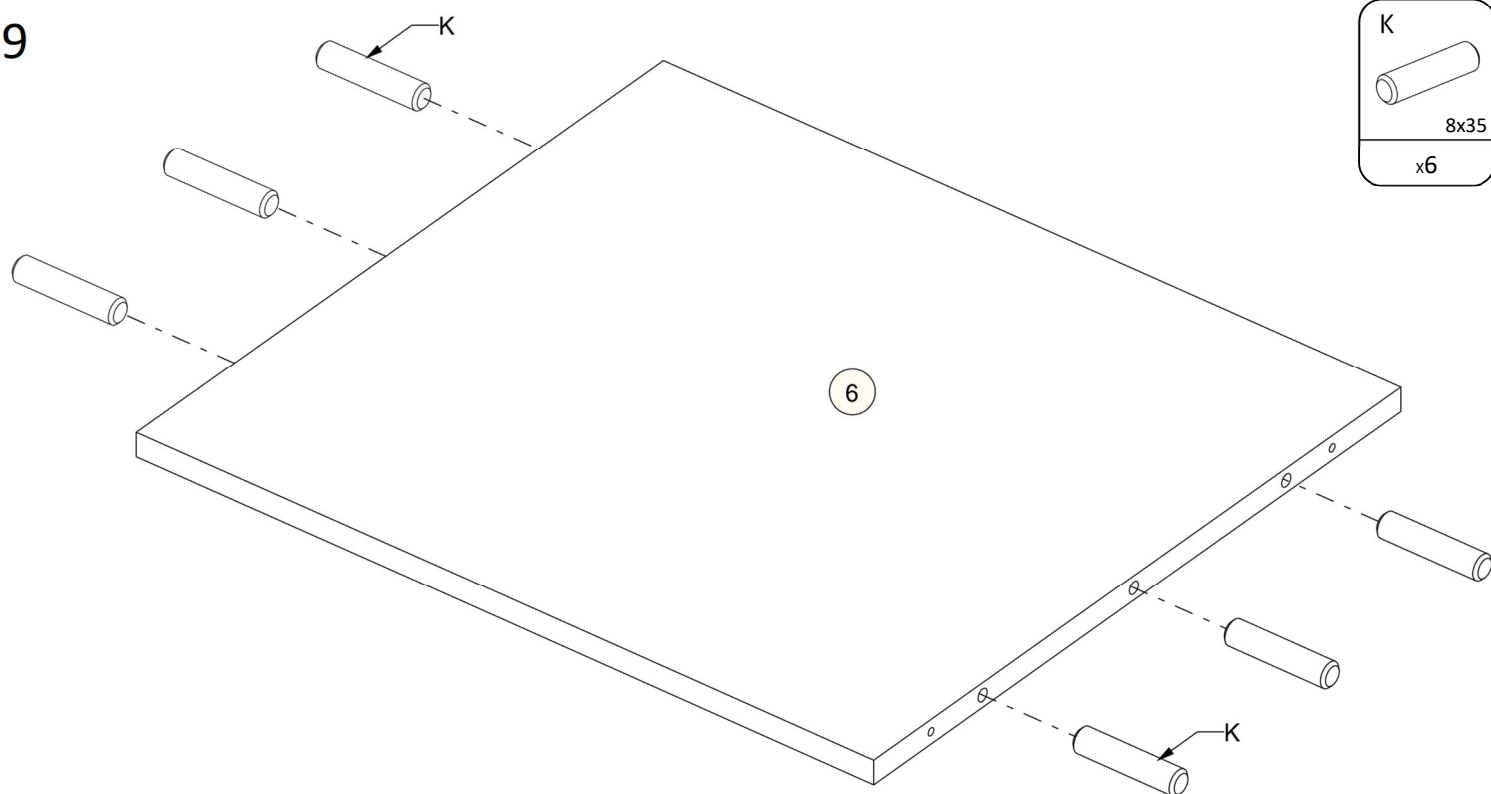





10

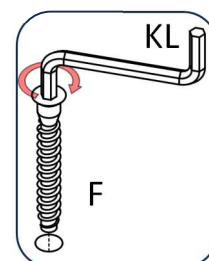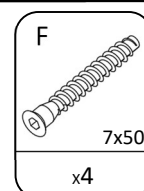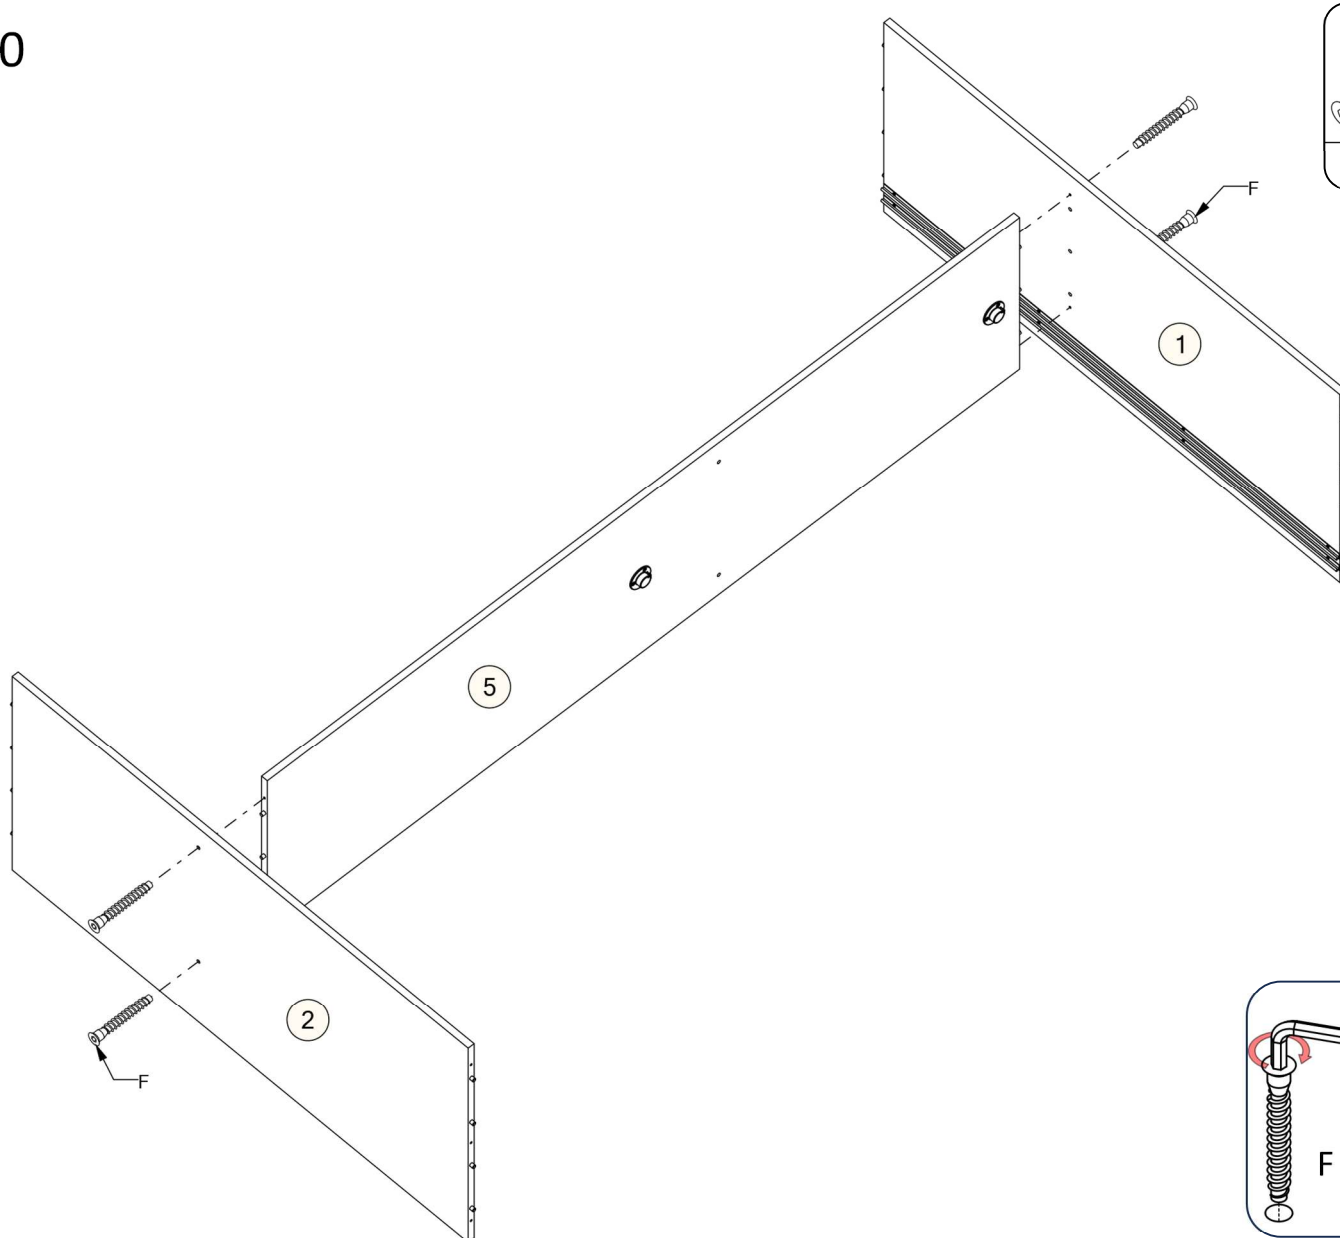


11

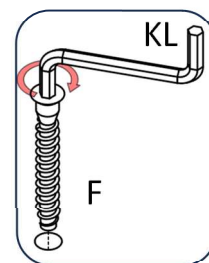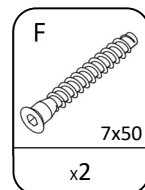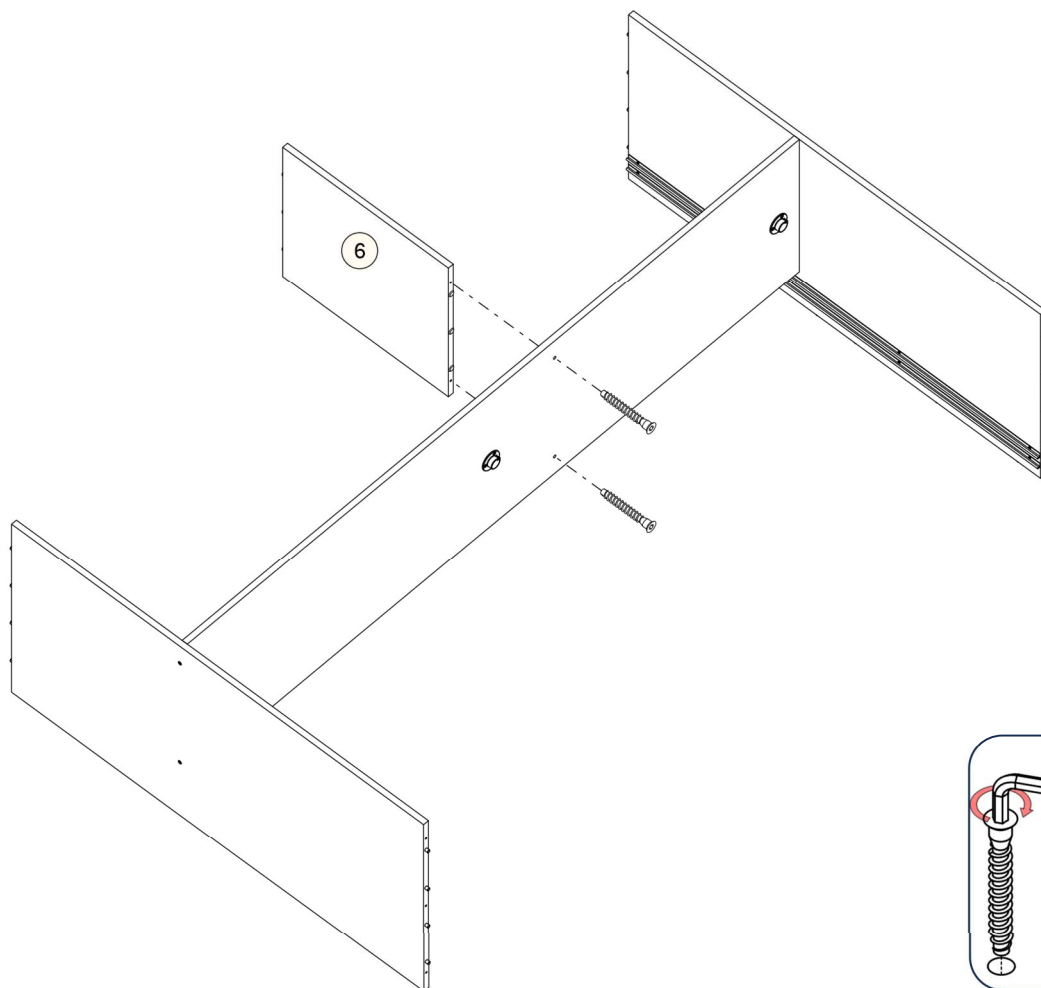


12

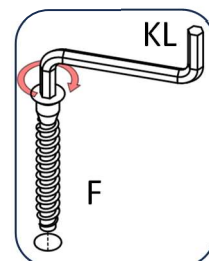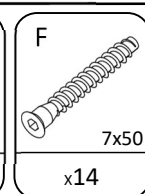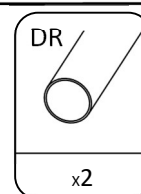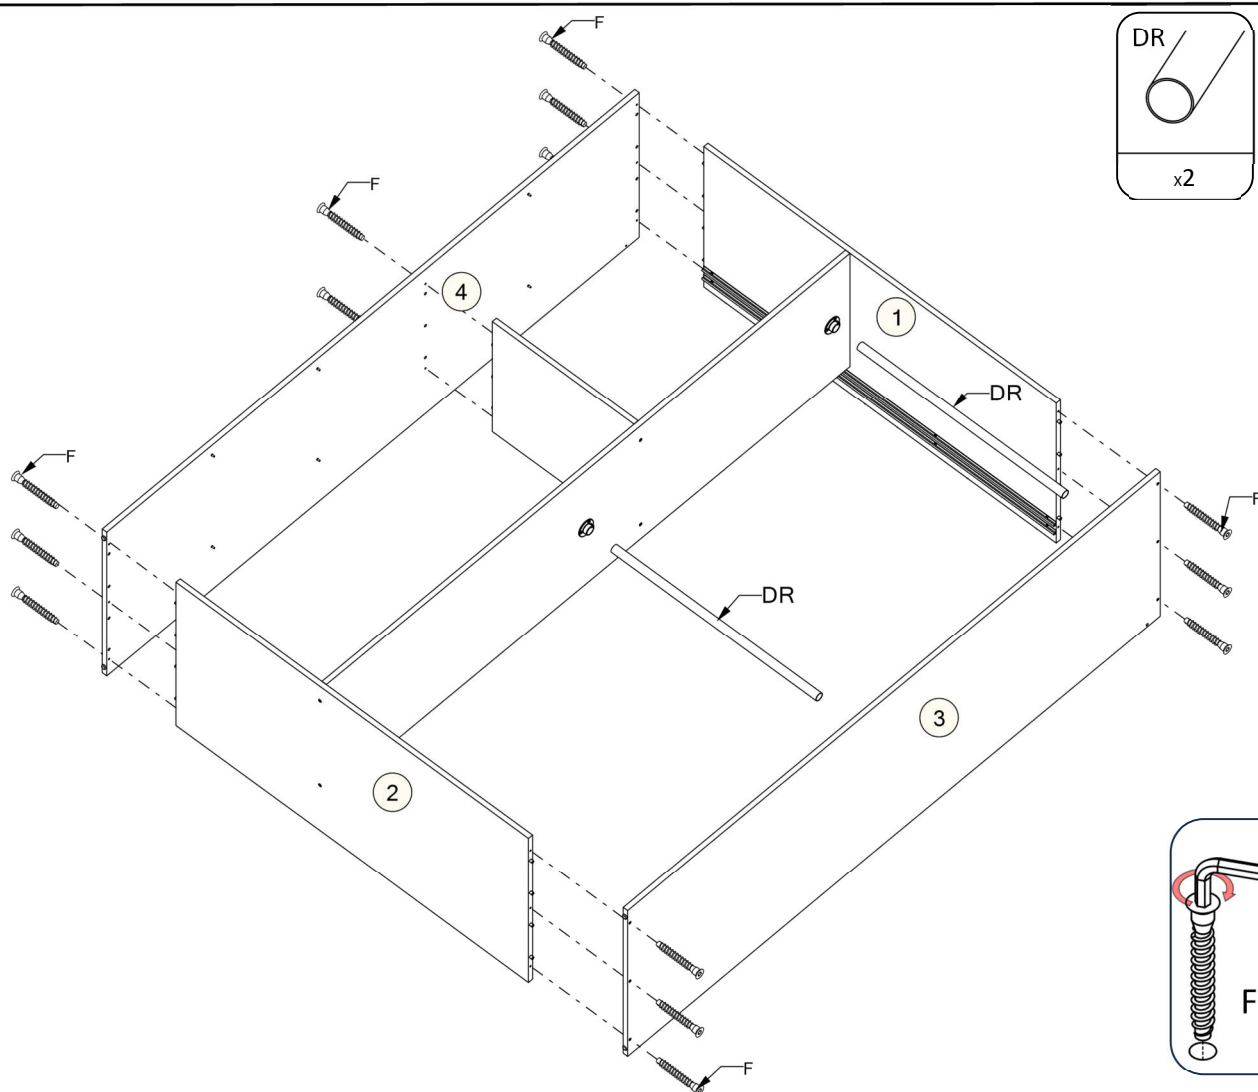


13

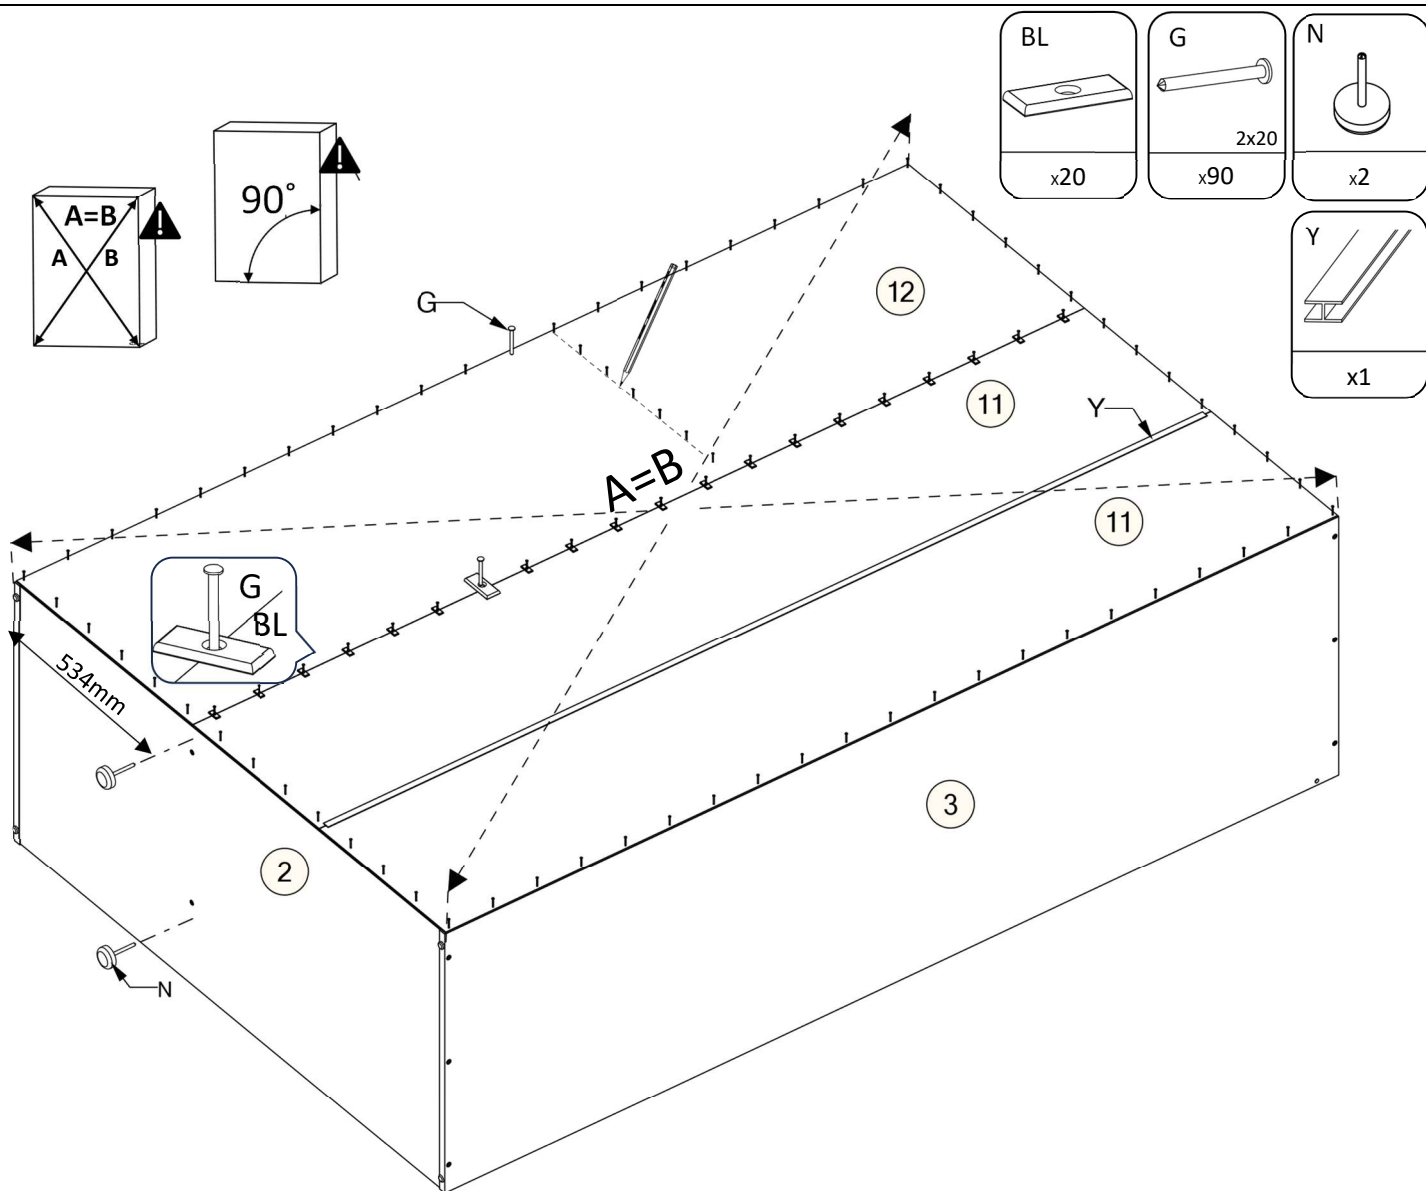








14

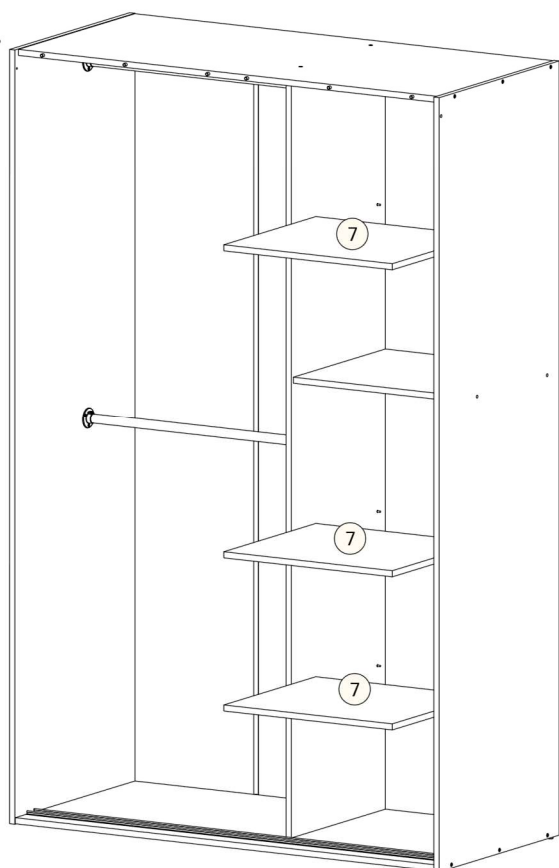








15



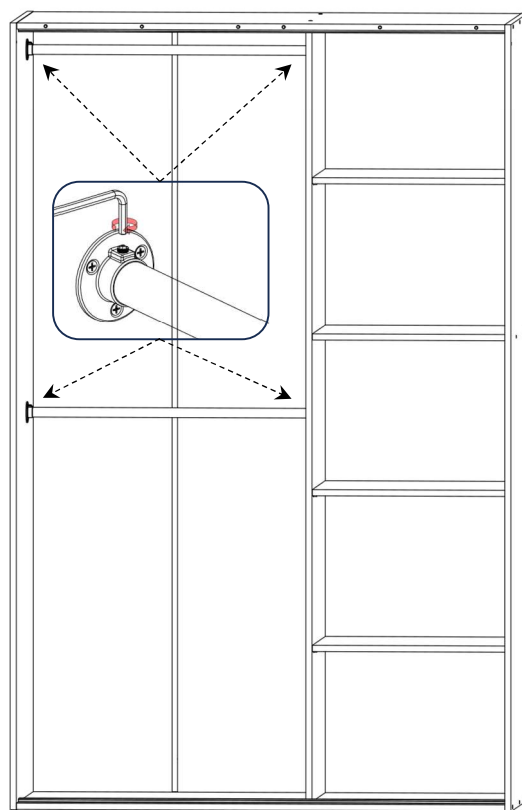


16

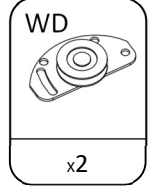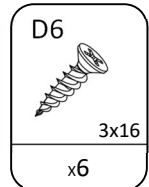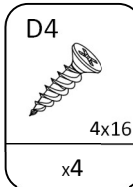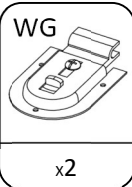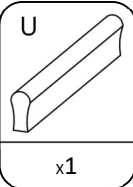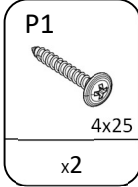
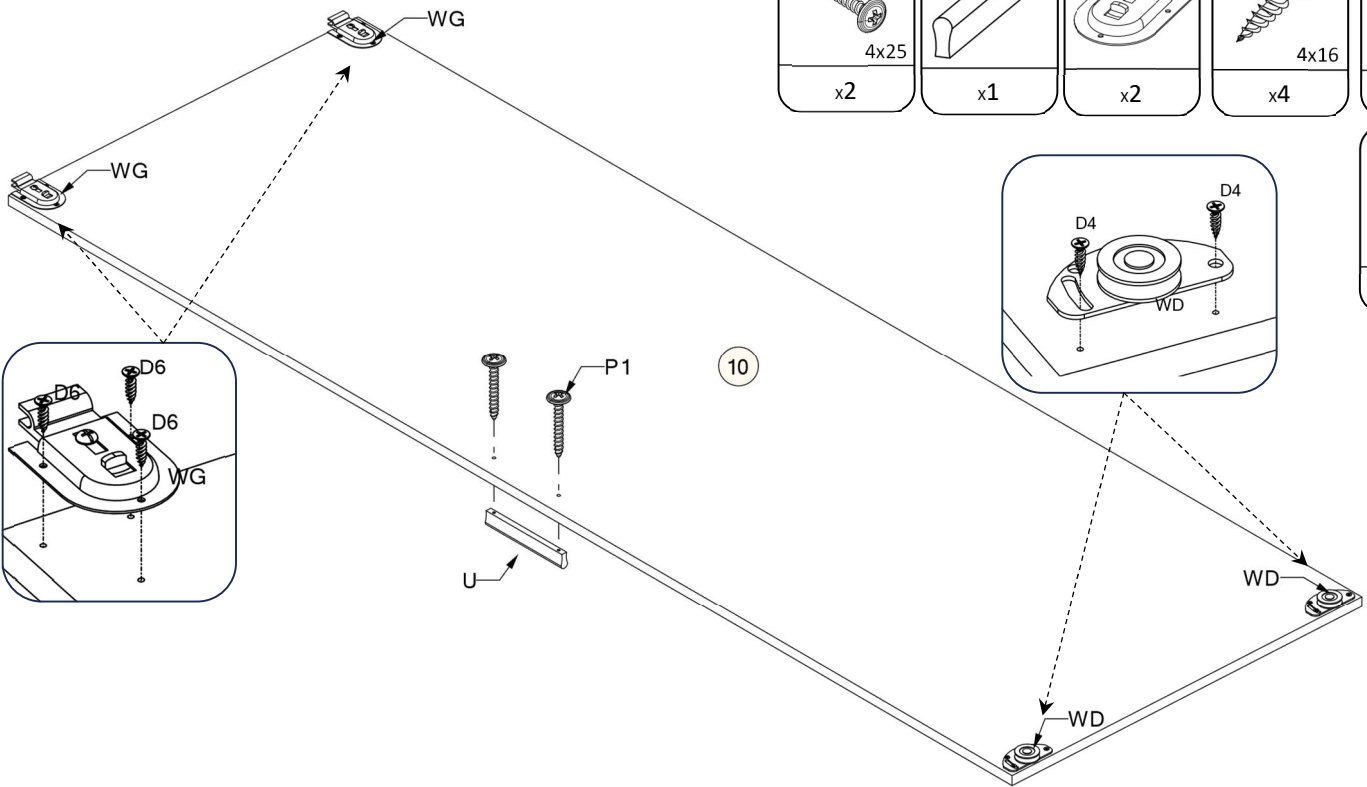


17

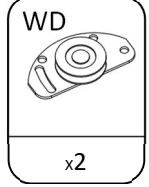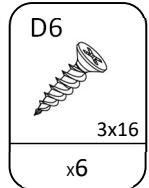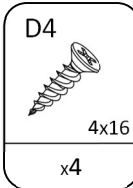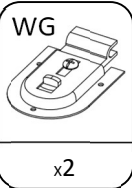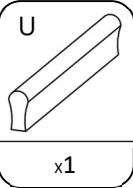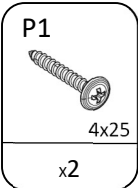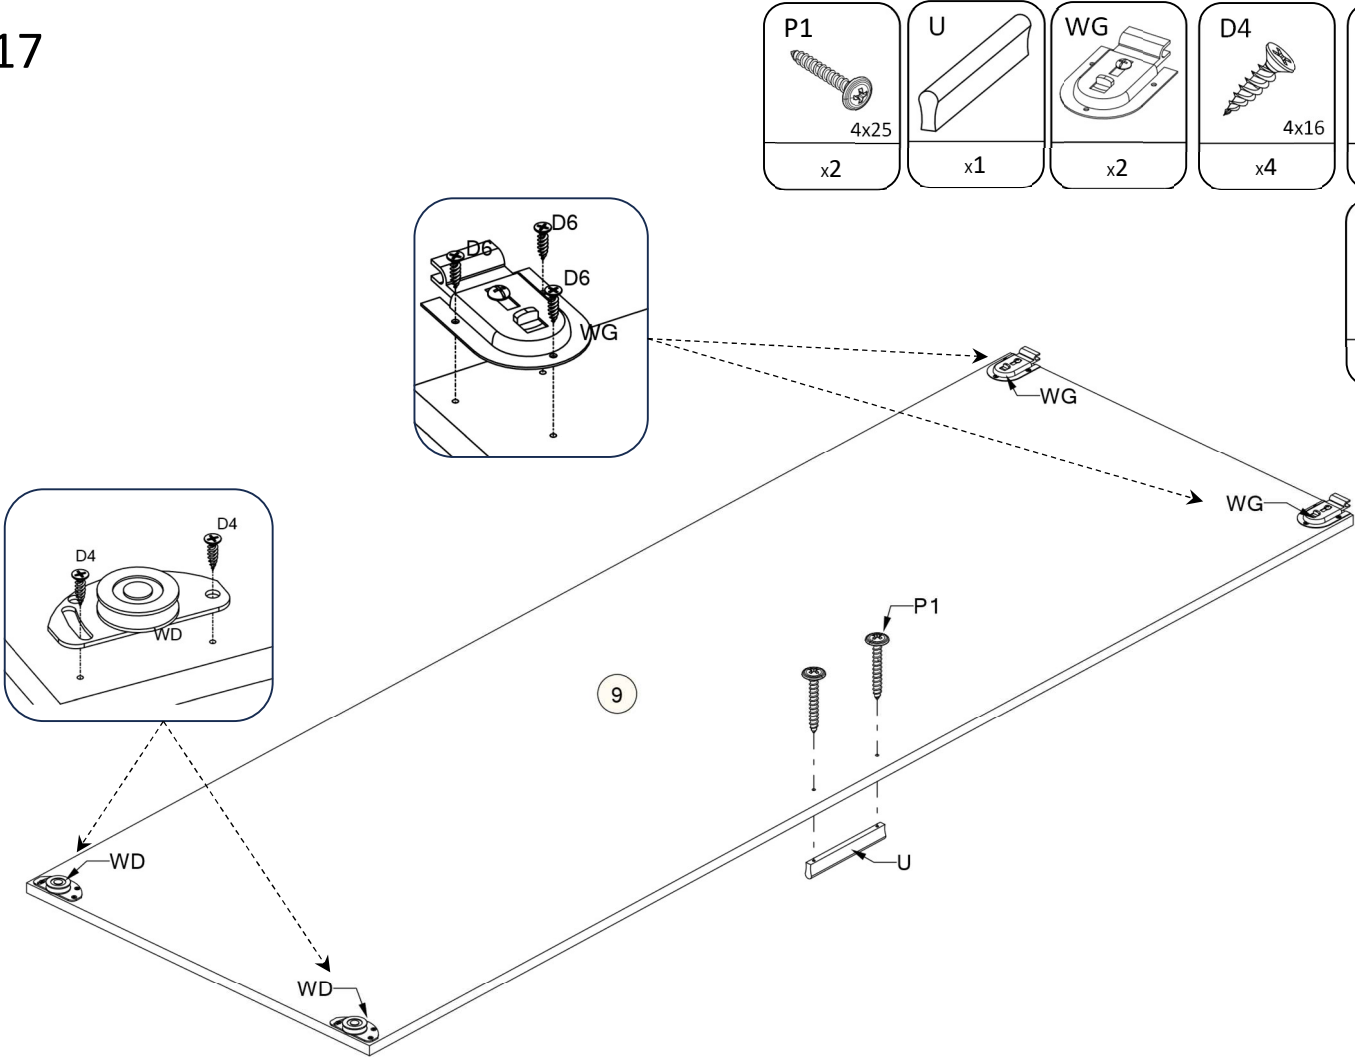

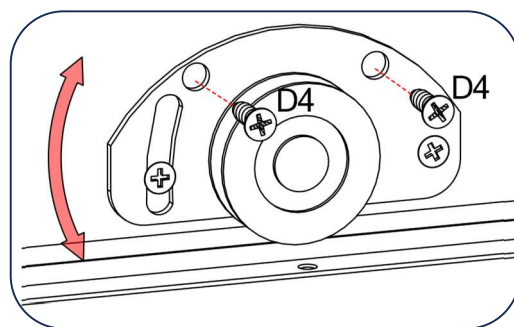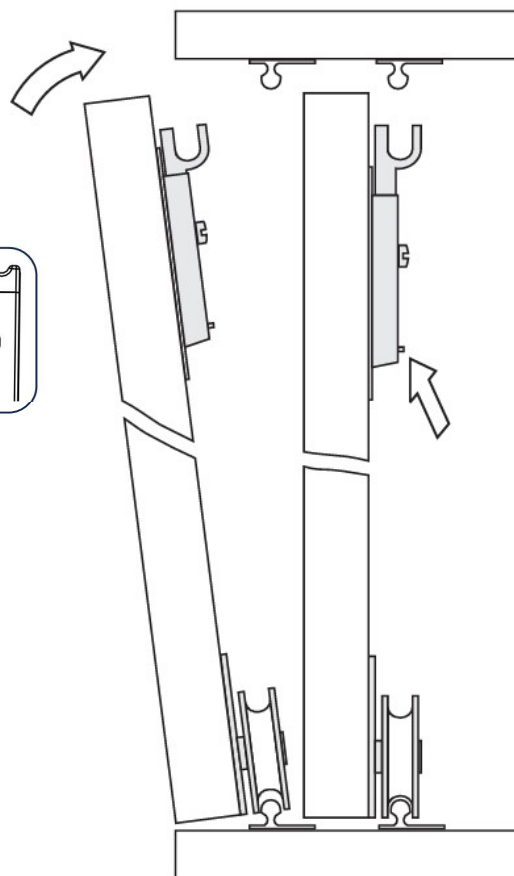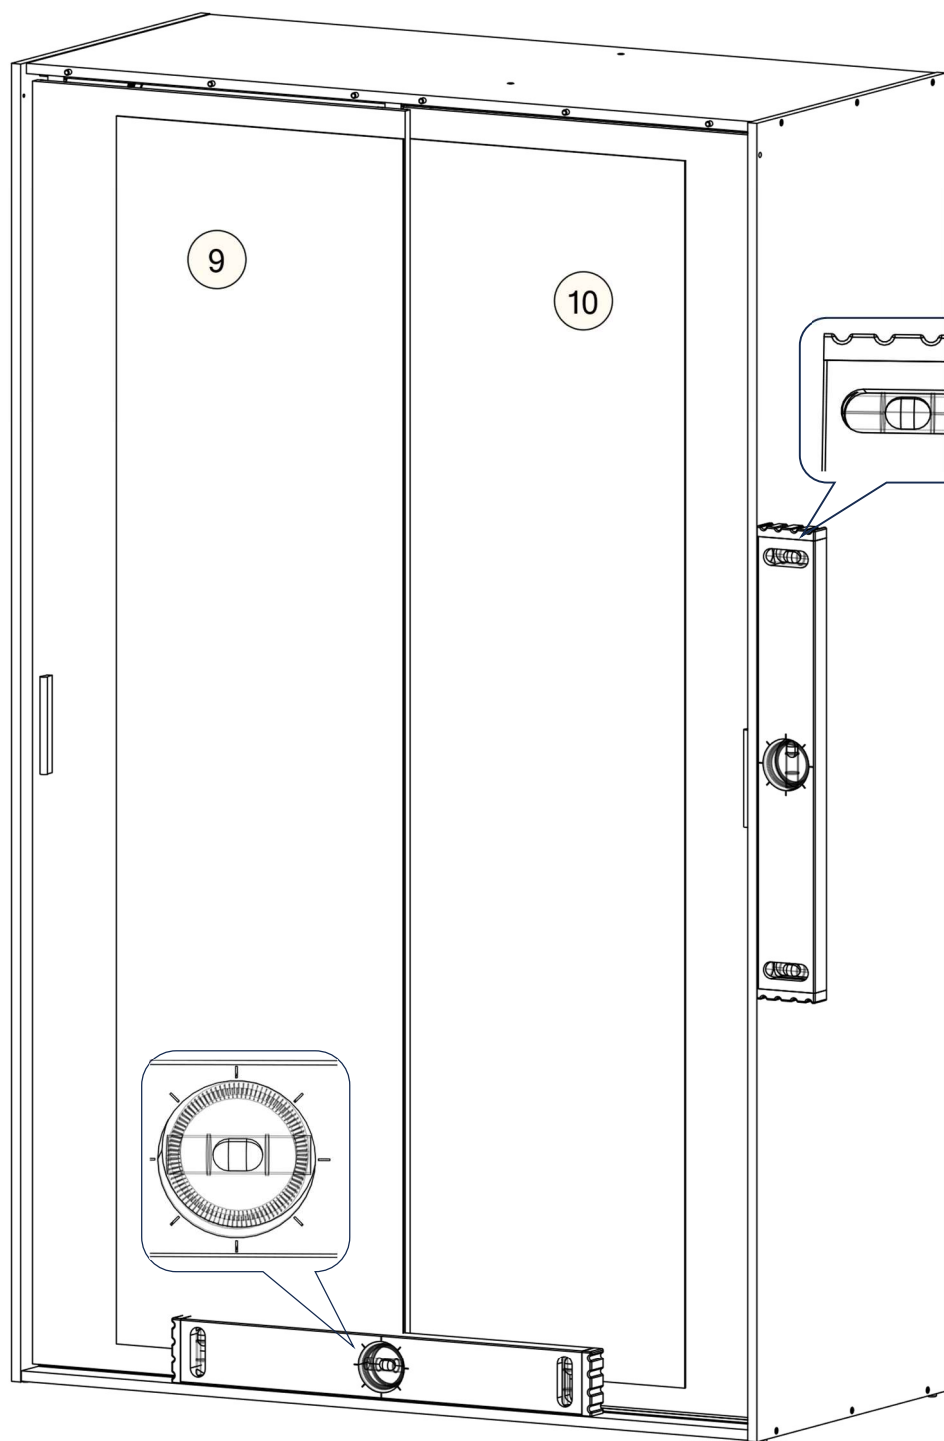

19

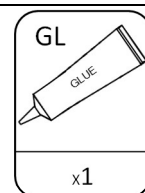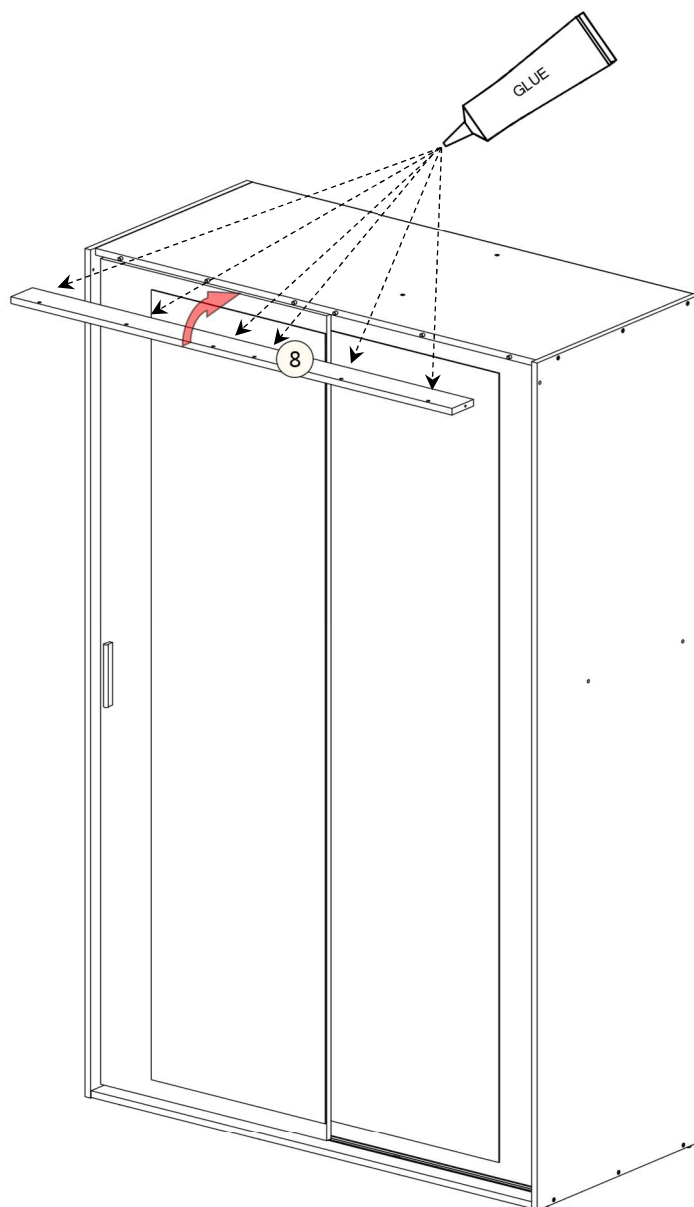

20

