



# ASSEMBLY INSTRUCTION










## NS 70 Nightstand

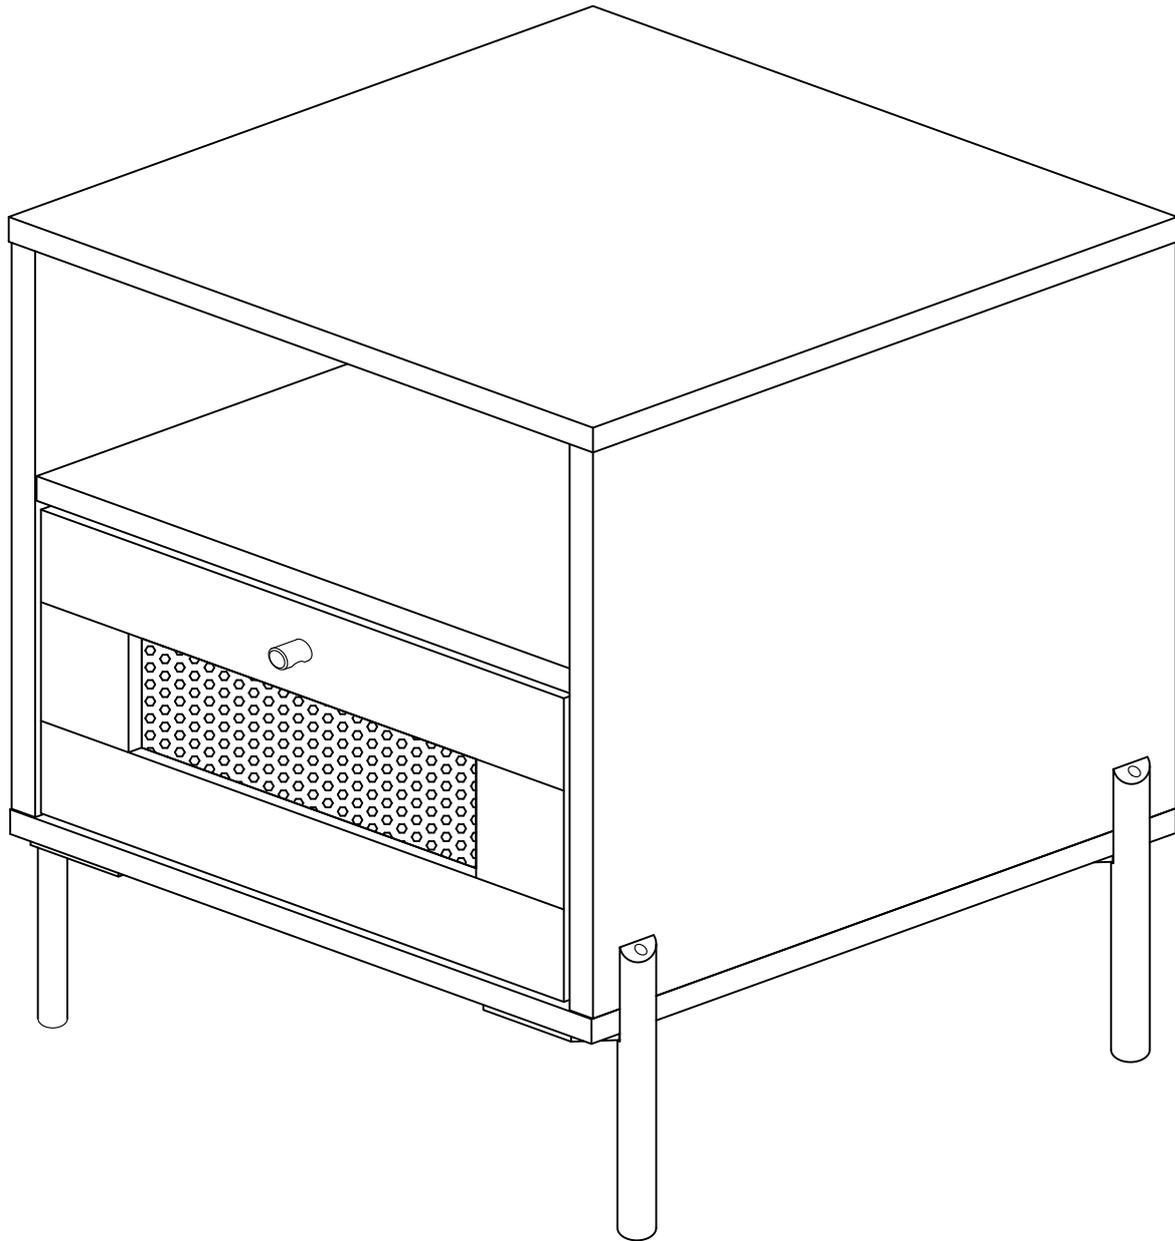

# ASSEMBLY INSTRUCTION

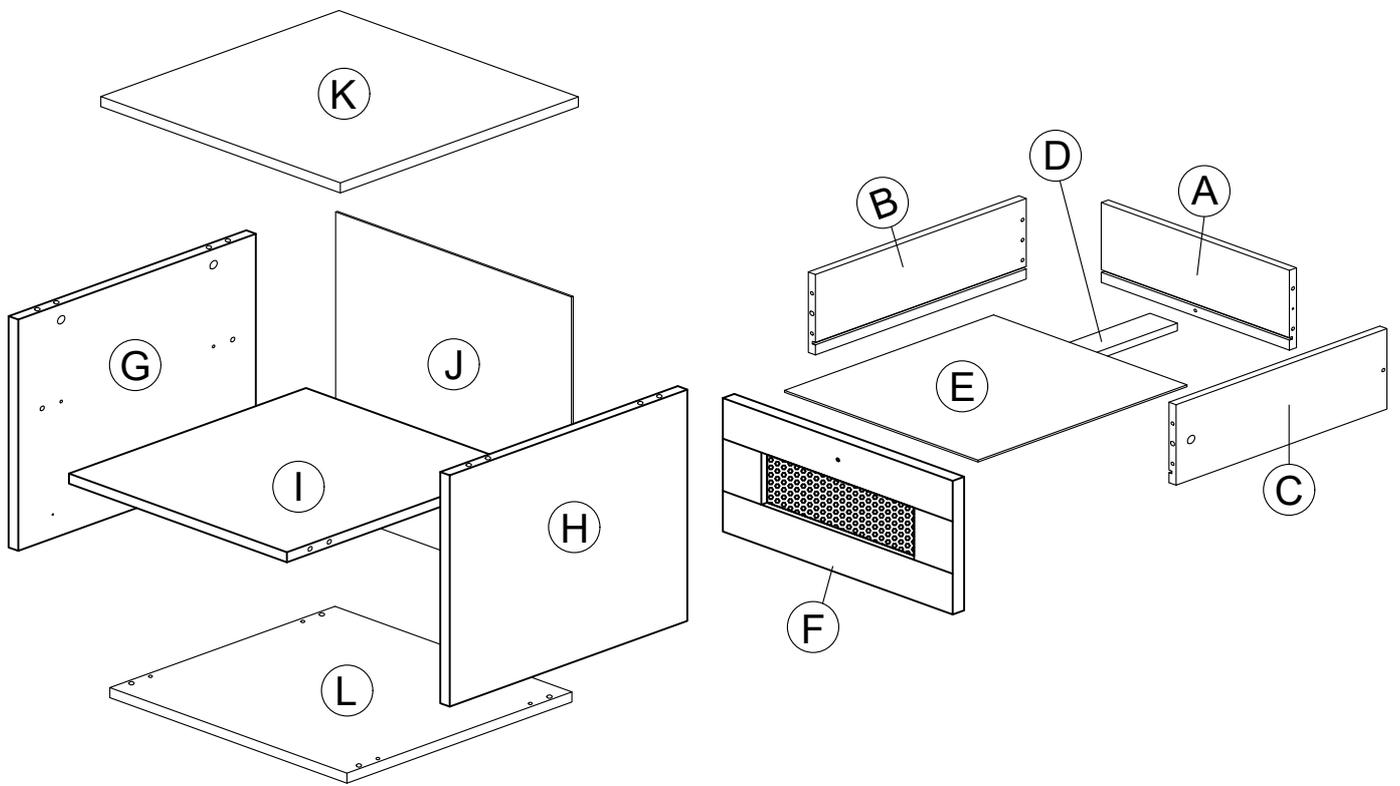

# ASSEMBLY INSTRUCTION

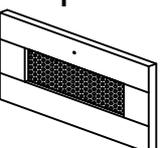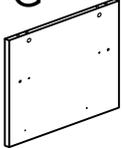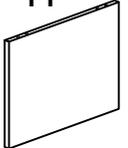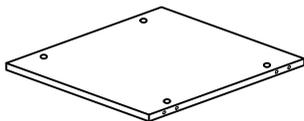
PART LIST			
A  Drawer Back 1 PC	B  Drawer Side L 1 PC	C  Drawer Side R 1 PC	D  Drawer Support 1 PC
E  Drawer Panel 1 PC	F  Drawer Head 1 PC	G  Side Panel L 1 PC	H  Side Panel R 1 PC
I  Middle Panel 1 PC	J  Back Panel 1 PC	K  Top Panel 1 PC	L  Bottom Panel 1 PC
HARDWARE LIST			
1  Camlock 15MM 12 PCS	2  Camlock Bolt 15MM 12 PCS	3  M8x25MM Wood Dowel 12 PCS	4  M6x30MM Wood Dowel 8 PCS
5  CB Screw M3.5x12MM 12 PCS	6  CB Screw M3.5x16MM 16 PCS	7  M4x38MM Screw 2 PCS	8  Csk M6x50MM 4 PCS
9  Handle Screw M4x22MM 1 PC	10  Metal Handle C 1 PC	11  Nail 5/8 15 PCS	12  M4 Allen Key 1 PC
13  Drawer Slide 12" 1 SET	14  Metal Leg 4 PCS	15  Black P/H Screw M4x20MM 4 PCS	

# ASSEMBLY INSTRUCTION

## Step 1

Required/Requis/Requerido


x8

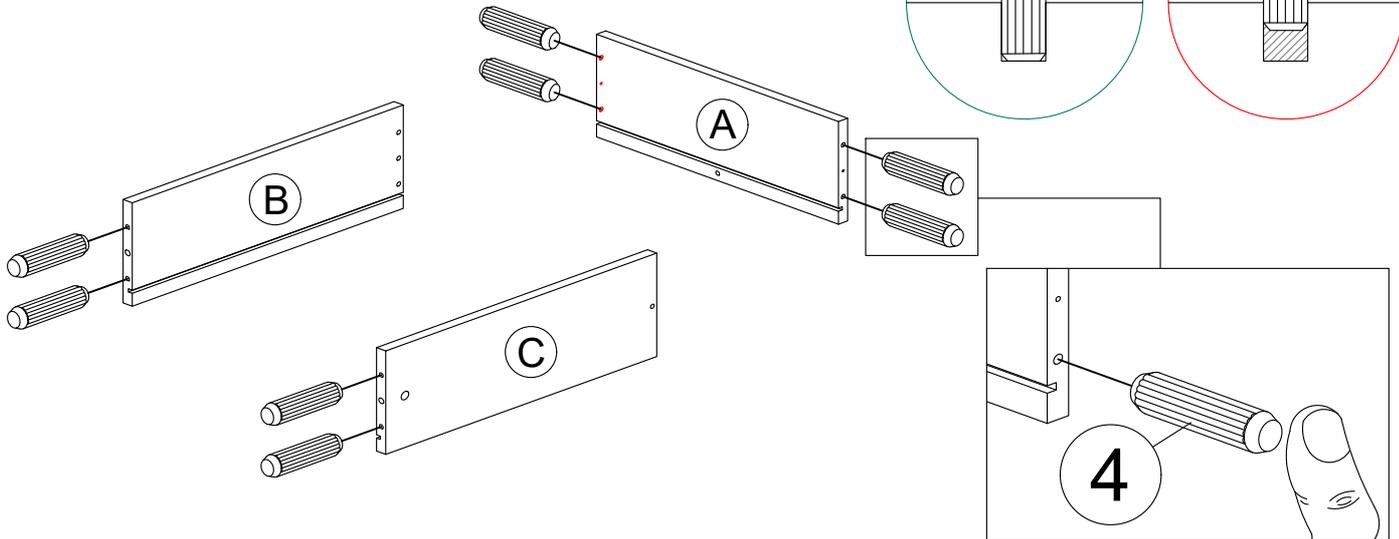

## Step 2

Required/Requis/Requerido

x4

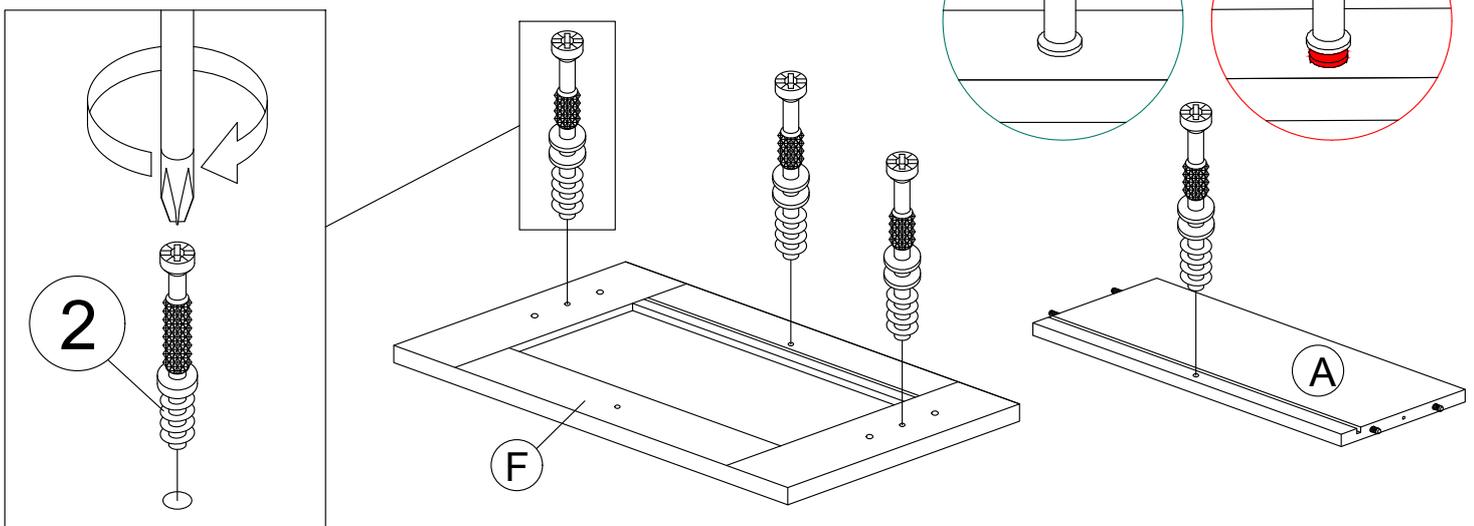


Back View

# ASSEMBLY INSTRUCTION

## Step 3

Required/Requis/Requerido


x4

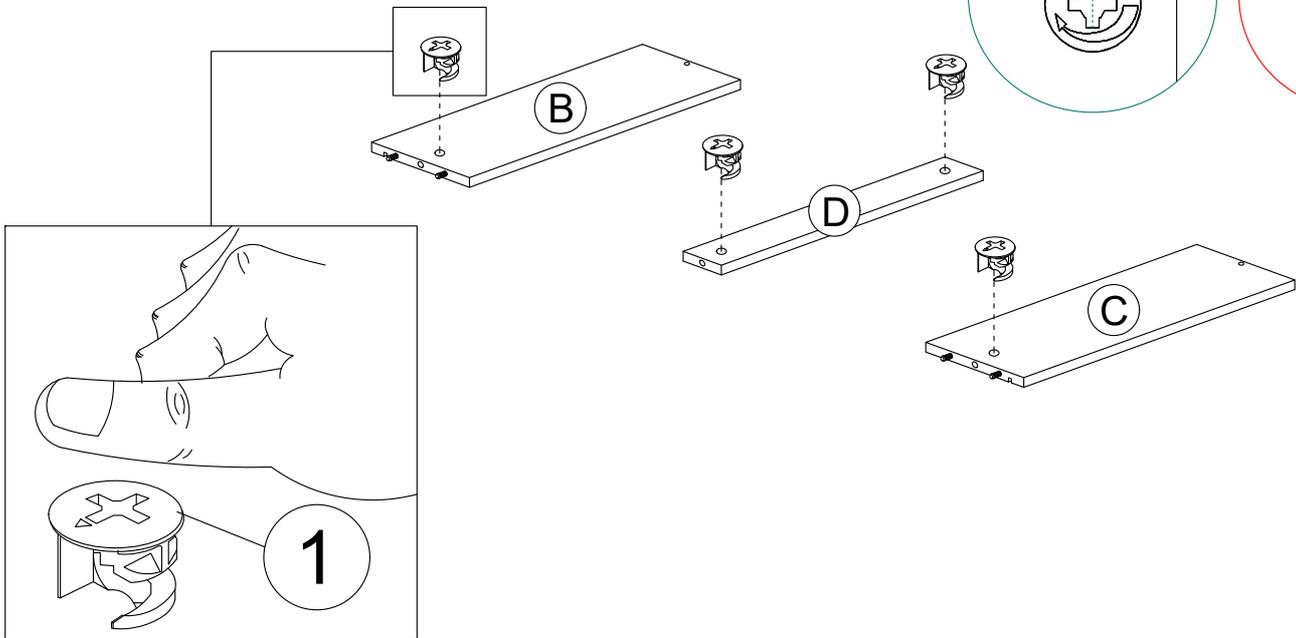

## Step 4


Required/Requis/Requerido

x2

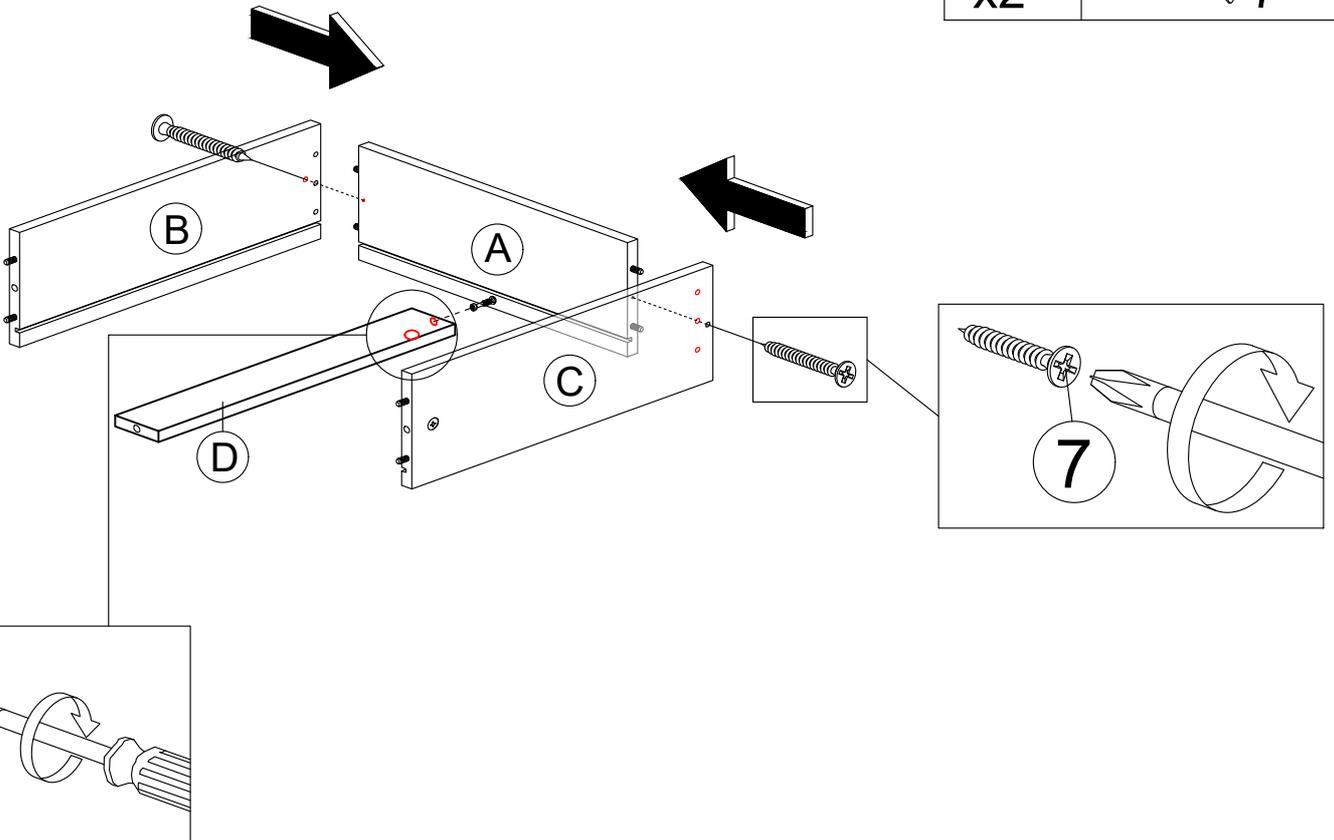


# ASSEMBLY INSTRUCTION


## Step 5

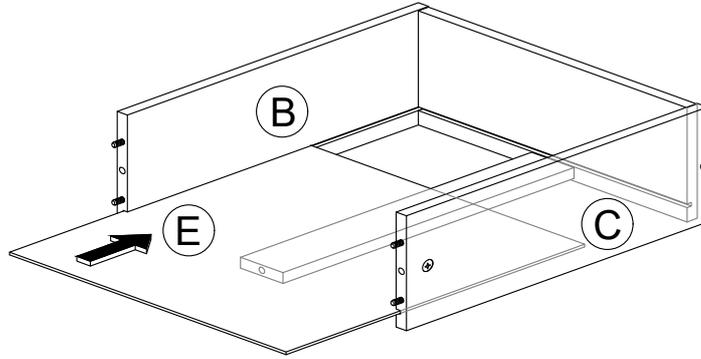


## Step 6

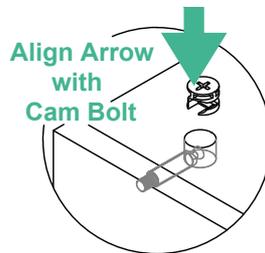



Press The  
Cam Lock

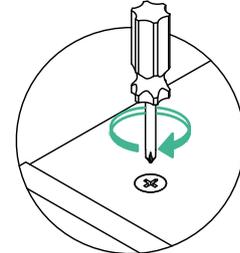

Tighten It  
Clockwise

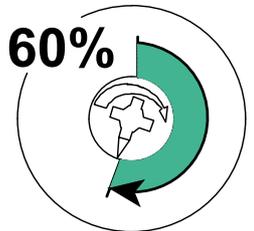

60%  
60-Degree  
Rotation Lock

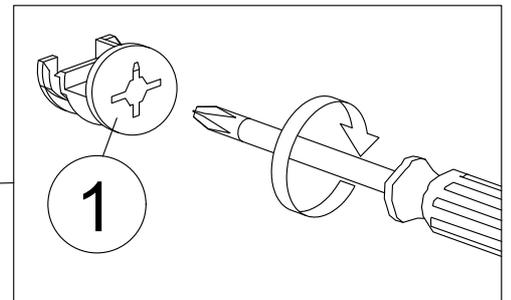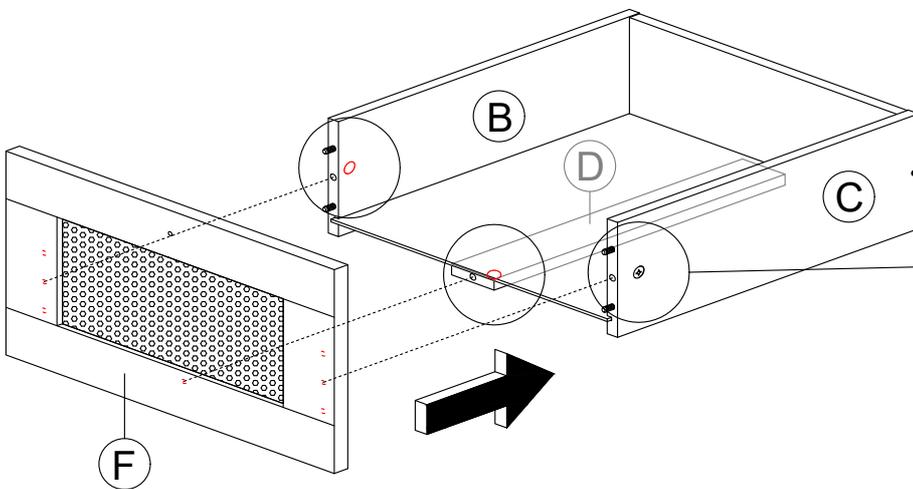




# ASSEMBLY INSTRUCTION

## Step 7

Required/Requis/Requerido

x12  5

x2  13B

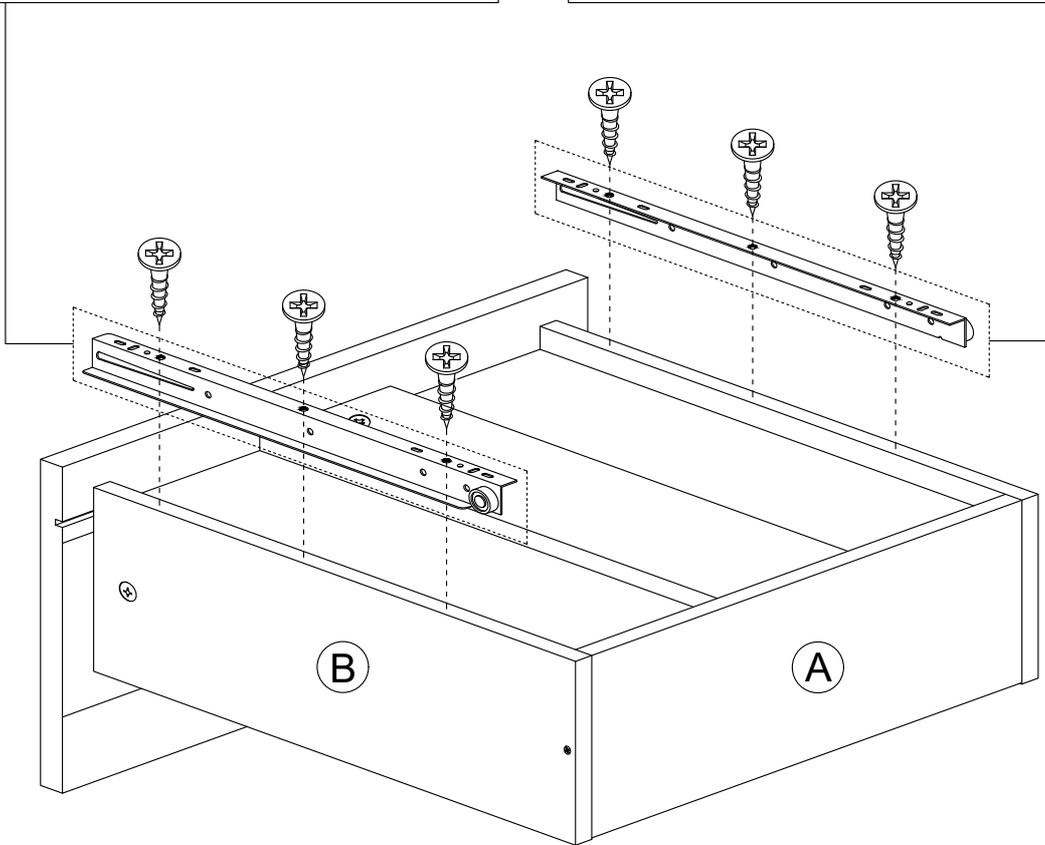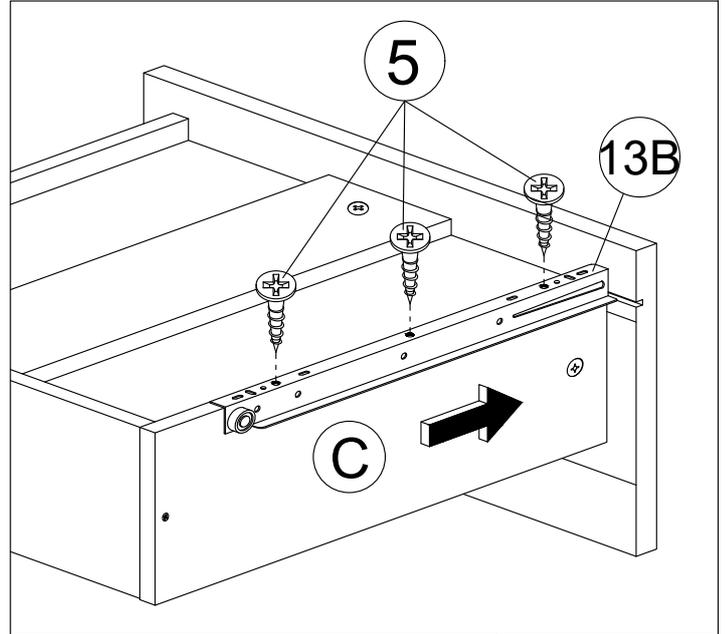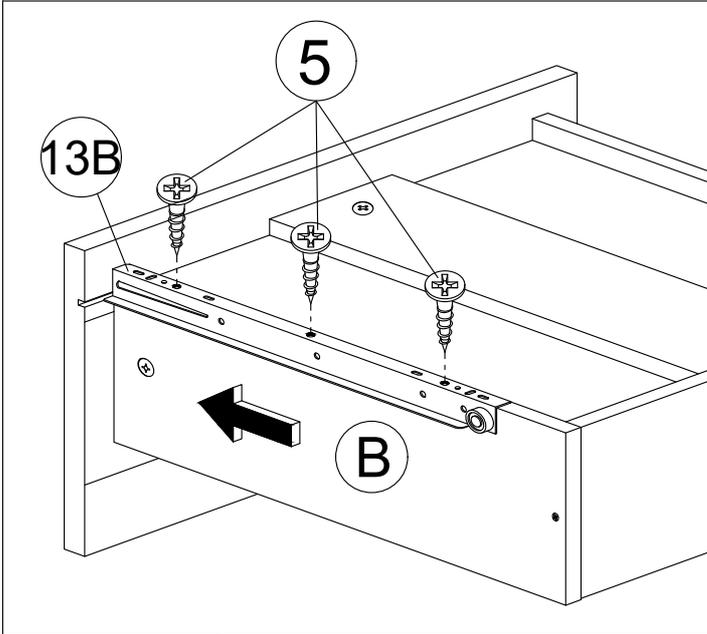

Bottom View



# ASSEMBLY INSTRUCTION

## Step 8

Required/Requis/Requerido

x2  10



x2  9

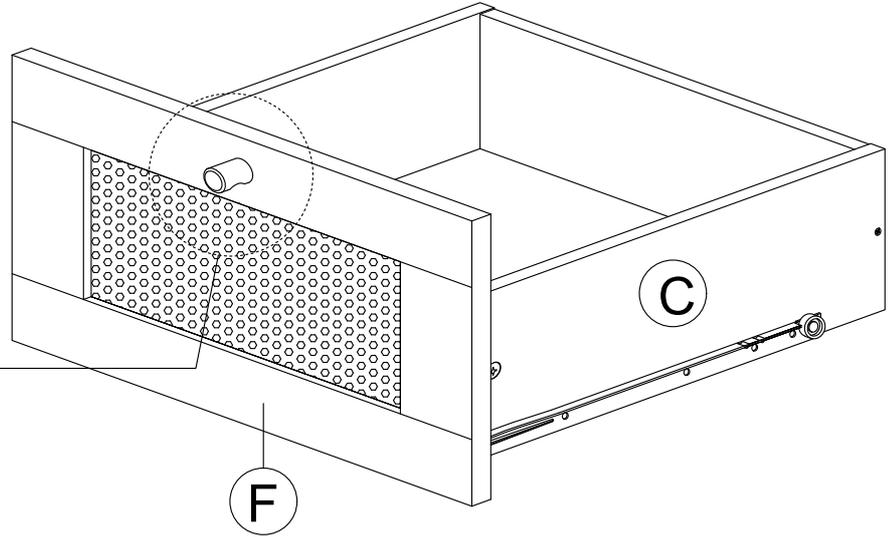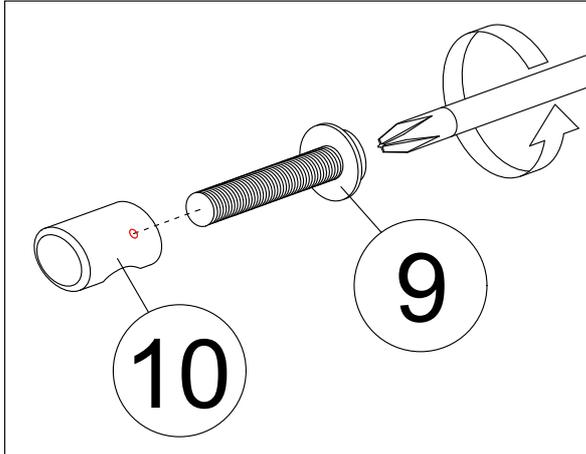

## Step 9


Required/Requis/Requerido

x10  3

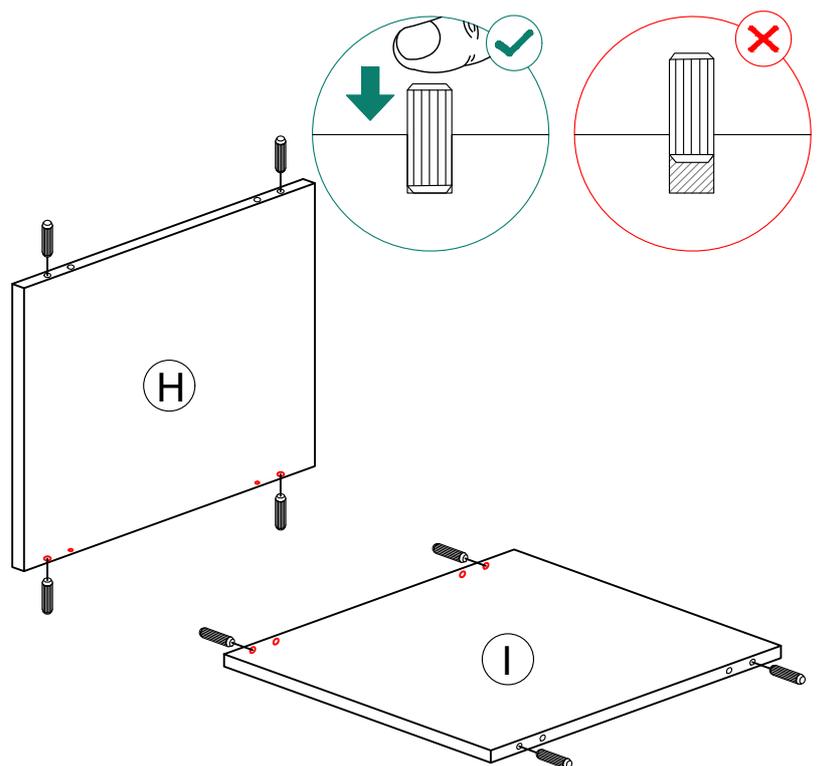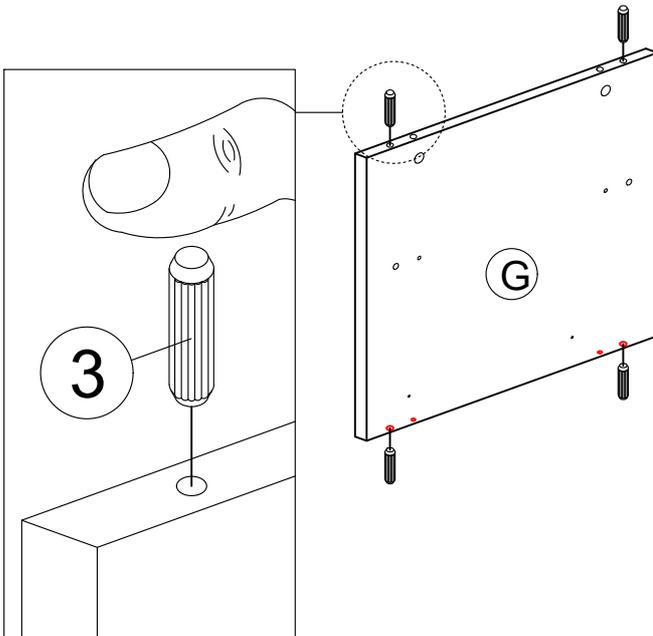

# ASSEMBLY INSTRUCTION

## Step 10

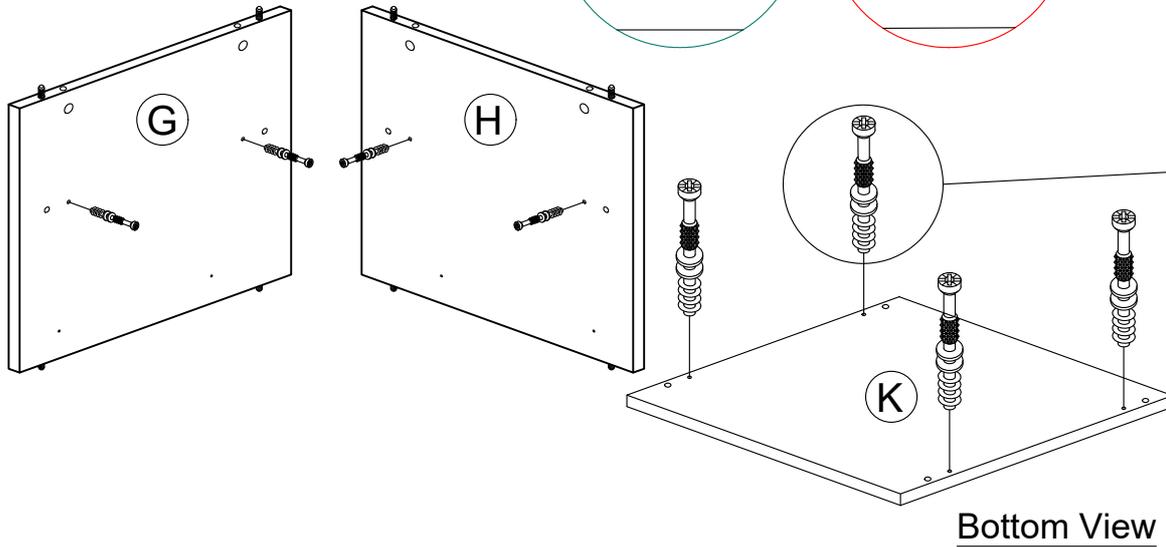


Required/Requis/Requerido

x8

 2

## Step 11

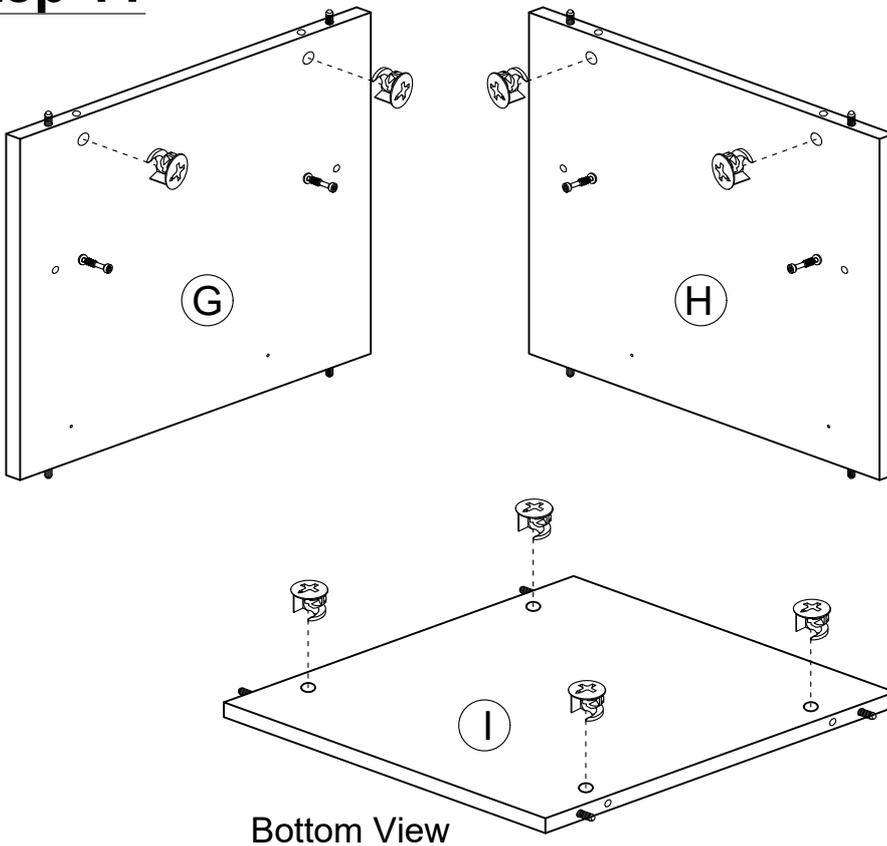


Required/Requis/Requerido

x8

 1

# ASSEMBLY INSTRUCTION

## Step 12

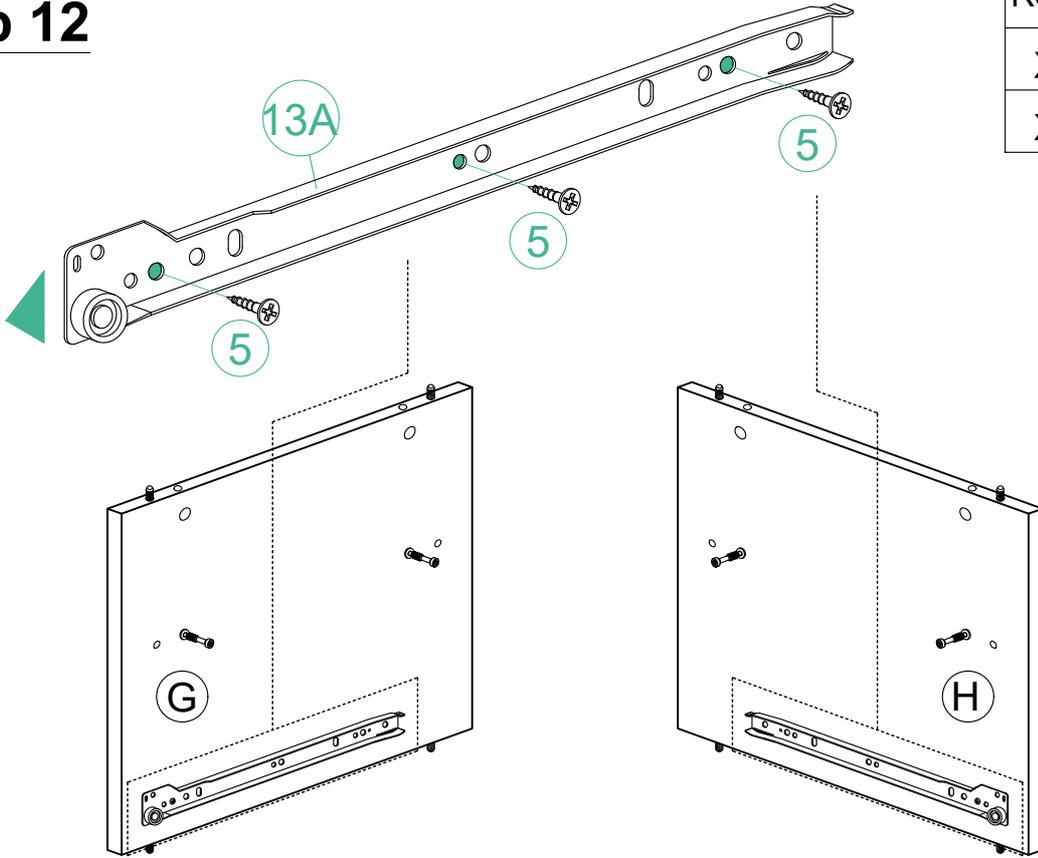


Required/Requis/Requerido


x6  5

x1  13A


## Step 13

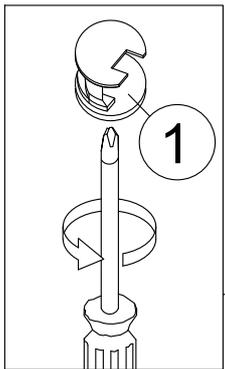


1

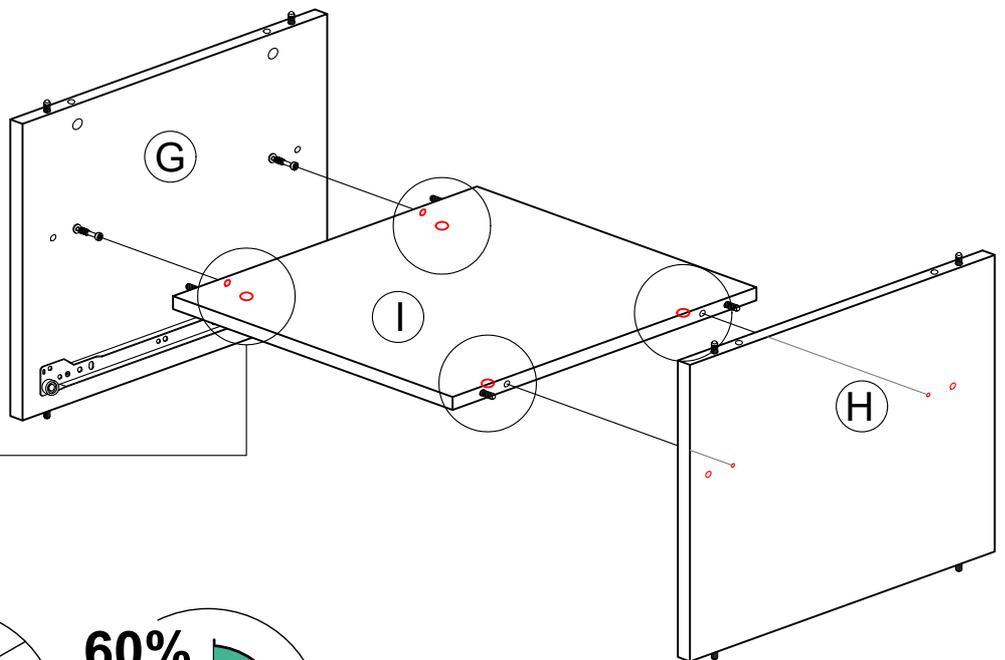


Align Arrow  
with  
Cam Bolt

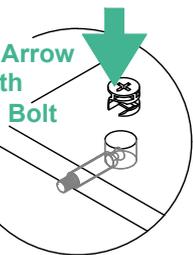

Press The  
Cam Lock

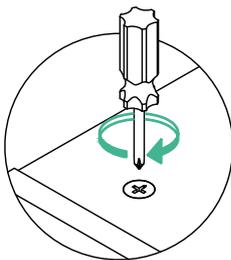



Tighten It  
Clockwise

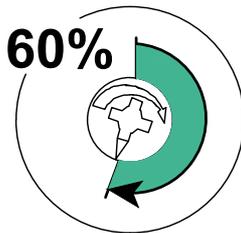


60%  
60-Degree  
Rotation Lock

# ASSEMBLY INSTRUCTION


## Step 14

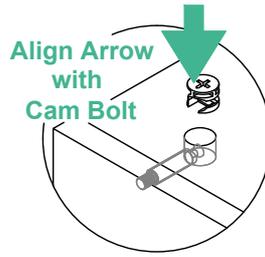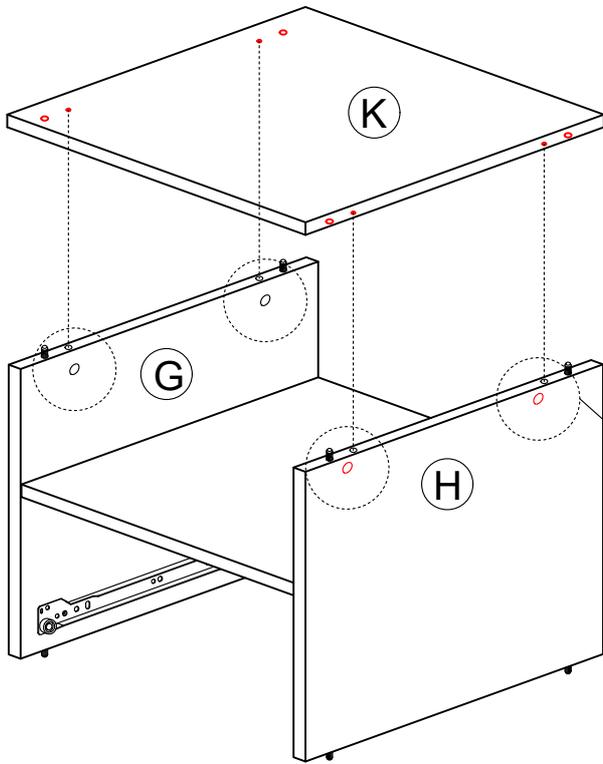


Press The Cam Lock

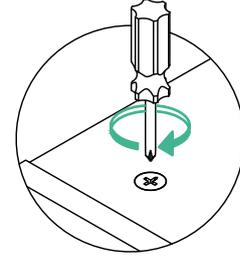

Tighten It Clockwise

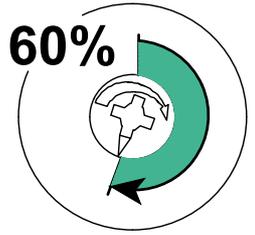


60-Degree Rotation Lock


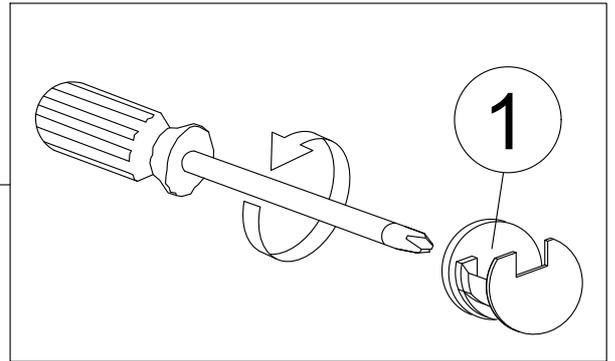


## Step 15

Required/Requis/Requerido

x4  8

x1  12

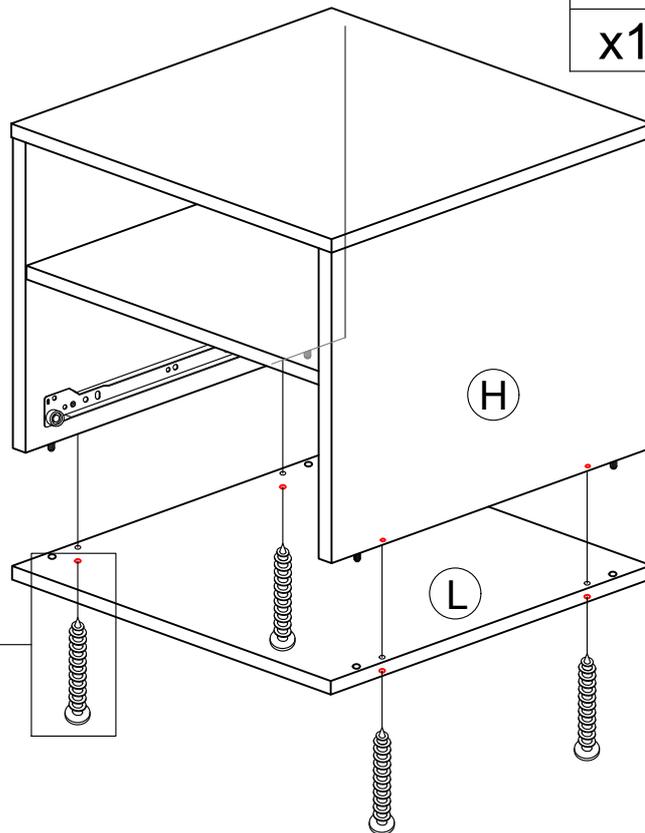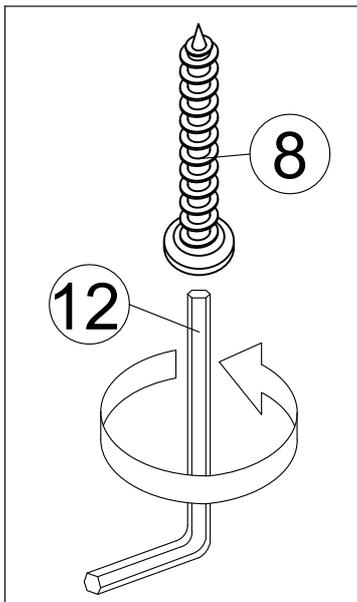

Lie Down First  
Before Screw



# ASSEMBLY INSTRUCTION

## Step 16

Required/Requis/Requerido

x16  6

x4  14

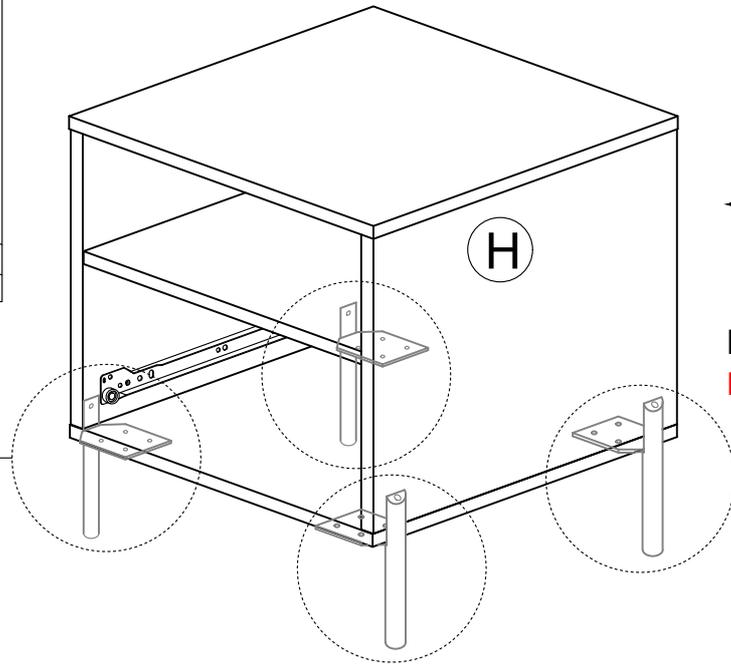
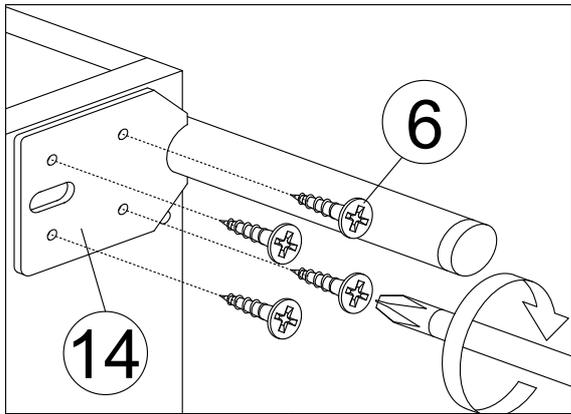


Lie Down First  
Before Screw

## Step 17

Required/Requis/Requerido

x12  11

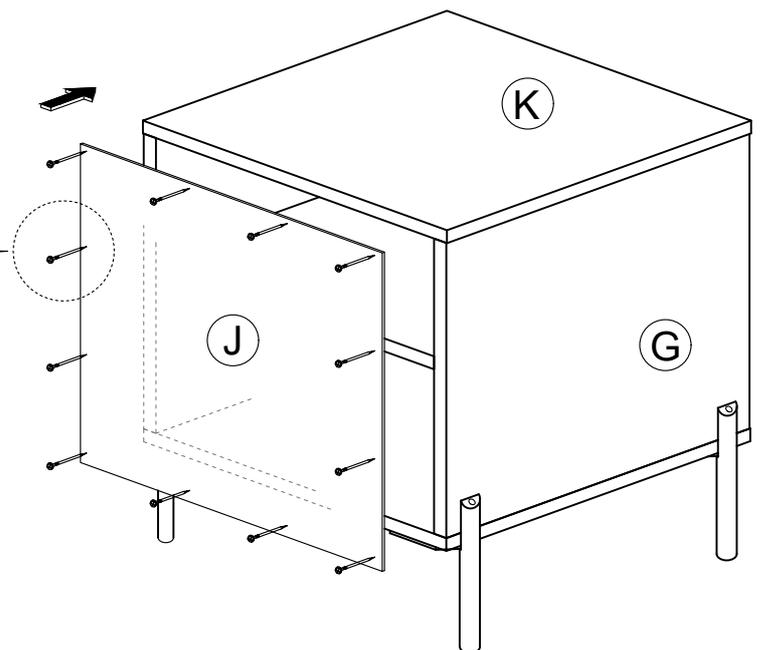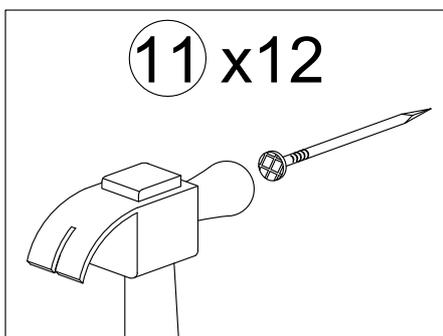

Back View


# ASSEMBLY INSTRUCTION

## Step 18

Required/Requis/Requerido

x4

 15

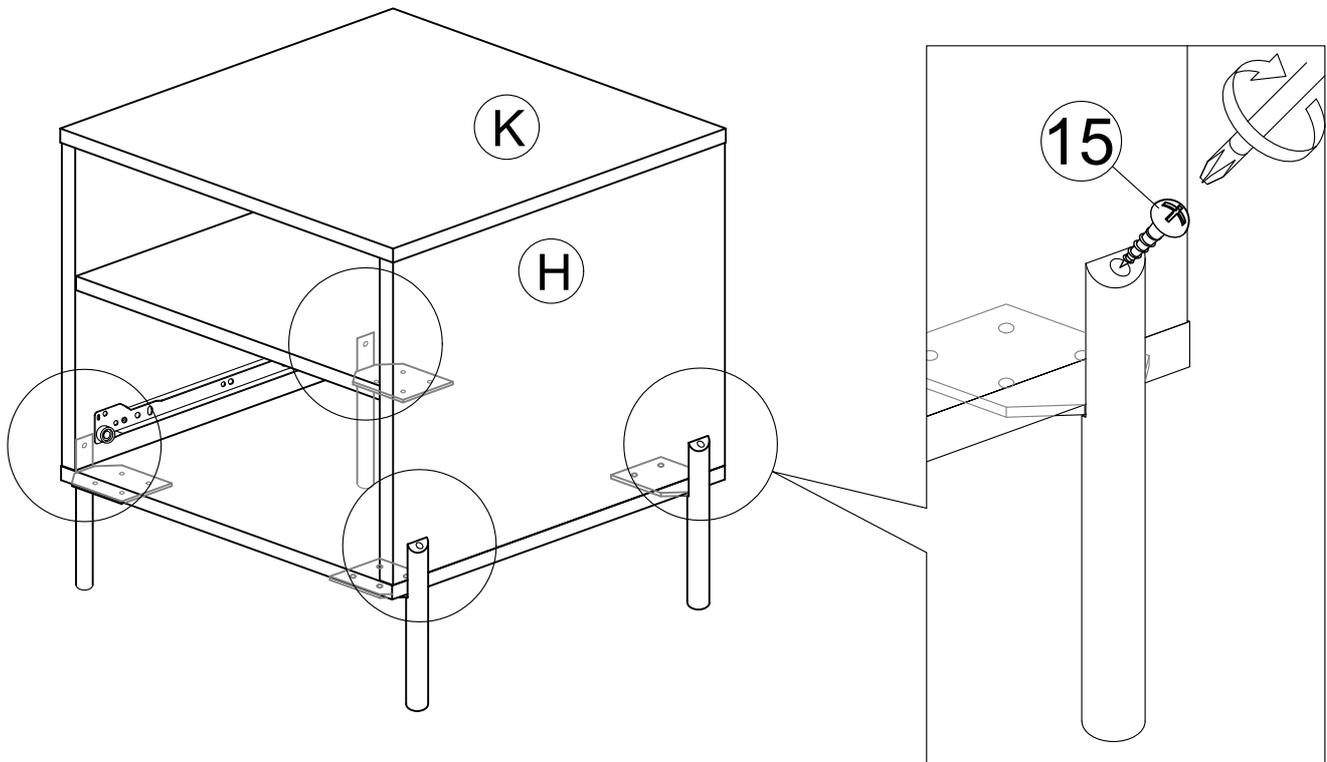

## Completed

