


POSSINA

Assembly Instruction

Model : PH 7606

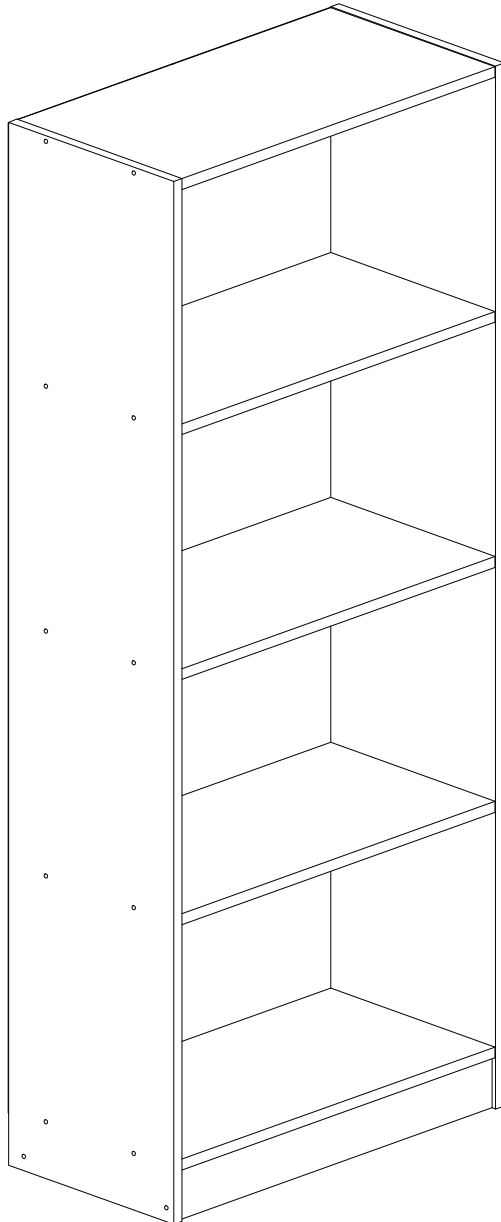


Hardware List			
No.	SHAPE	DESCRIPTION	Qty.
A		8x25mm Dowel (Wood)	28Pcs
B		15MM Myfix Minifix	2Sets
C		M4x45mm Screw	24Pcs
D		5/8 Nail With Pin	6Pcs
E		6/8 Power Pin	38Pcs
F		Sticker	24Pcs

Part List			
No.	Descriptions		Qty.
1	Side Left Panel	1435x300x15	1PC
2	Side Right Panel	1435x300x15	1PC
3	Partition Panel	570x299x15	4PCS
4	Bottom Panel	570x299x15	1PC
5	Leg Panel	70x570x15	2PCS
6	Back Panel	1362x298.5x2.5	2PCS

Assembly Instruction


Part List

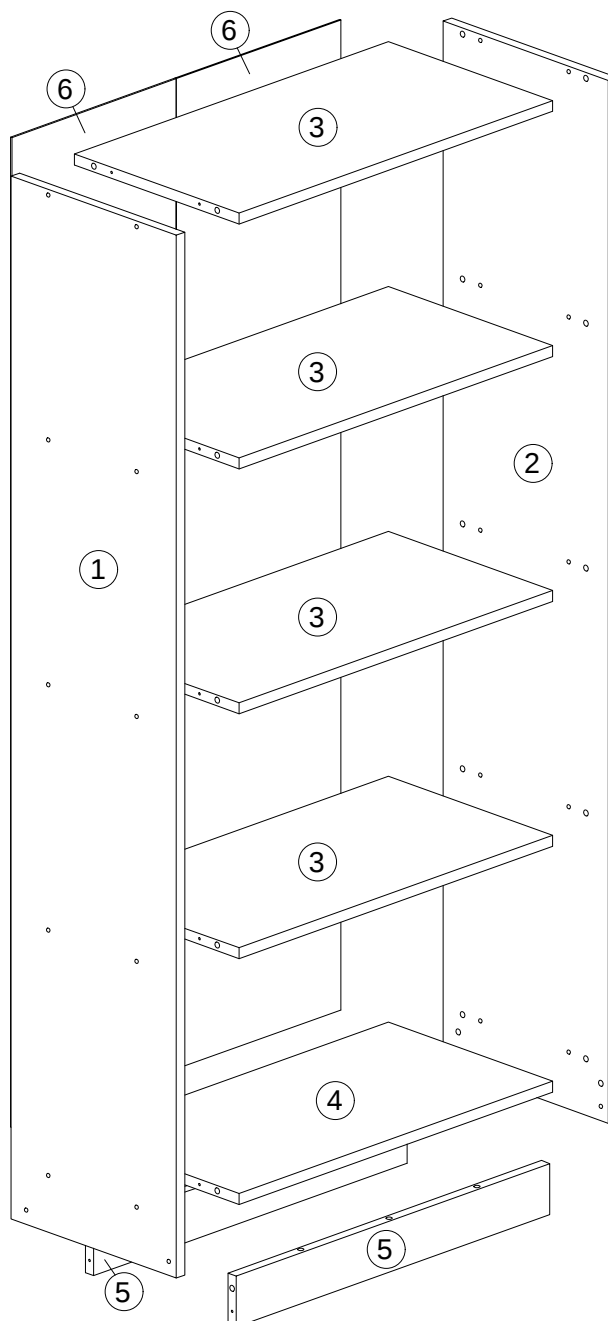

Assembly Instruction


Step 1

A		8x25mm Dowel (Wood)	28Pcs
---	---	---------------------	-------

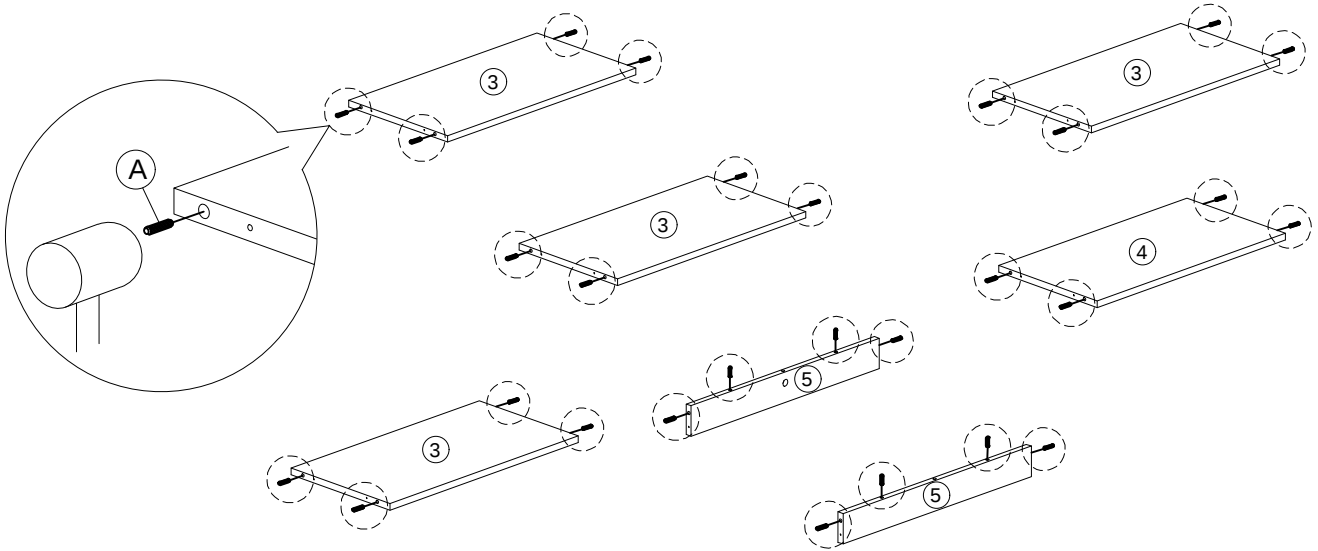


Step 2

B		Myfix	2Pcs
---	---	-------	------

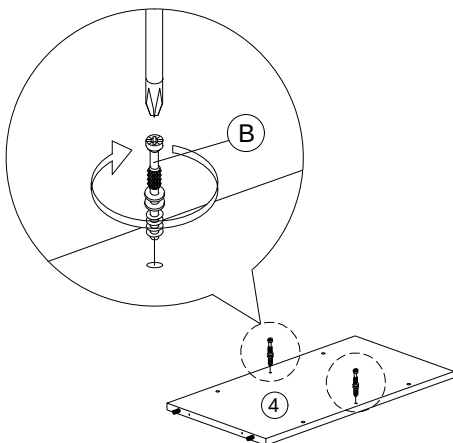

Step 3

B		Minifix	2Pcs
---	---	---------	------

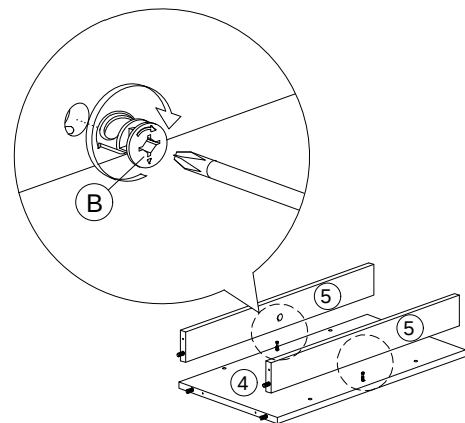


Assembly Instruction

Step 4

C		M4x45mm Screw	12Pcs
---	---	---------------	-------


F		Sticker	12Pcs
---	---	---------	-------

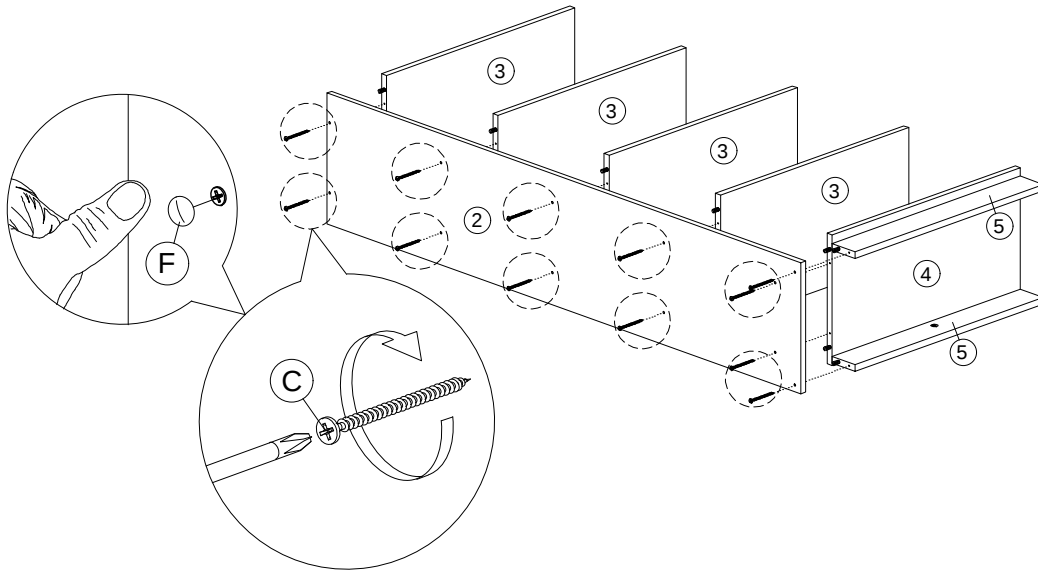

Step 5

C		M4x45mm Screw	12Pcs
---	---	---------------	-------


F		Sticker	12Pcs
---	---	---------	-------

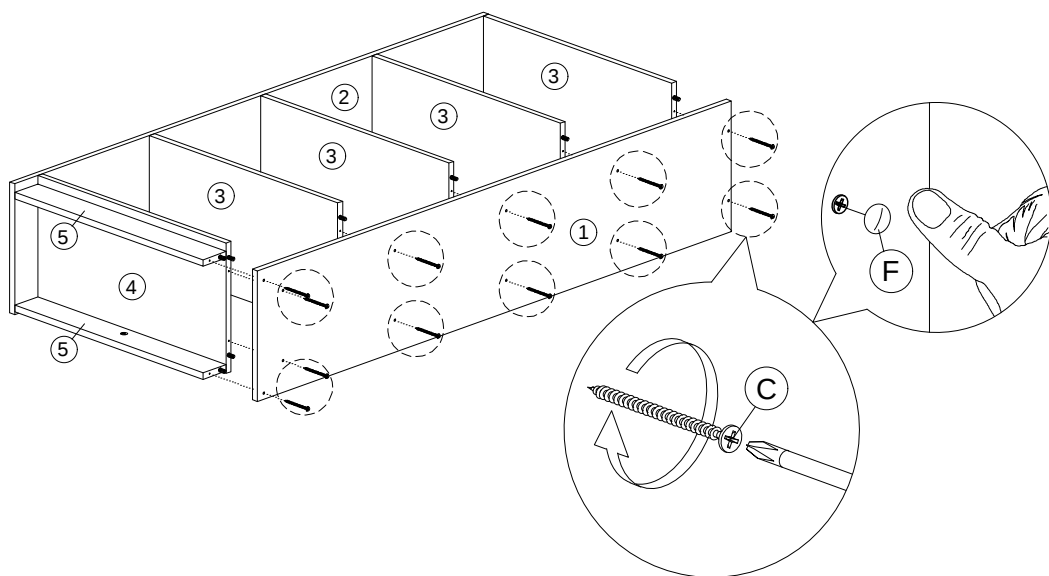

Assembly Instruction

Step 6

E		6/8 Power Pin	38Pcs
---	---	---------------	-------

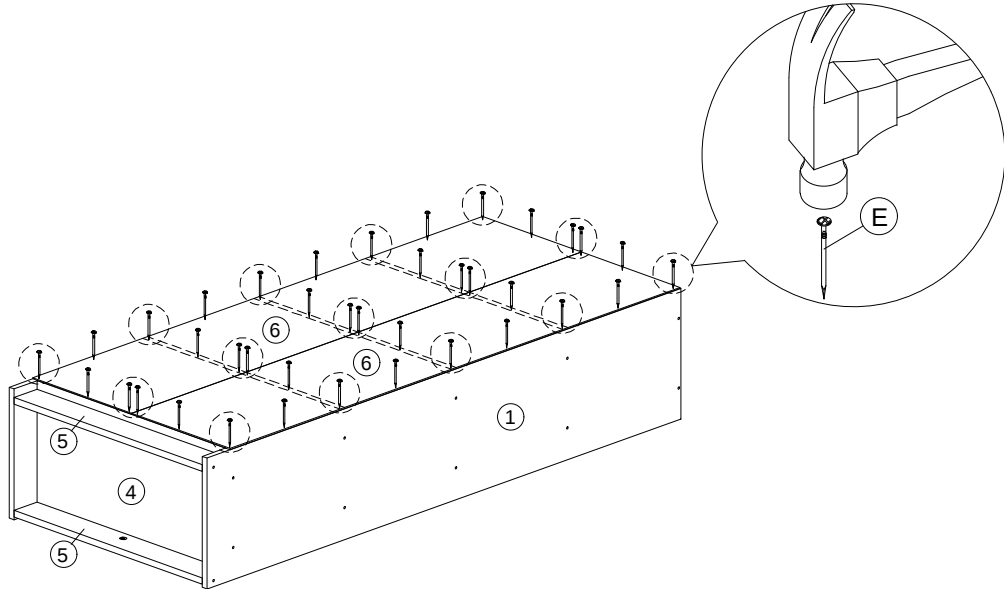

Step 7

D		5/8 Nail With Pin	6Pcs
---	---	-------------------	------

