

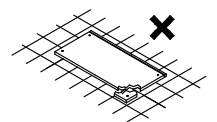
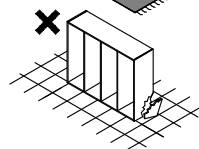
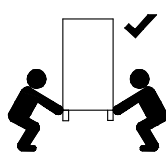
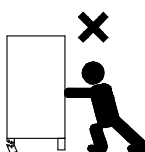
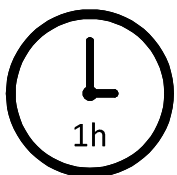
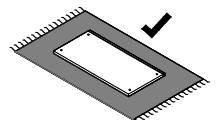
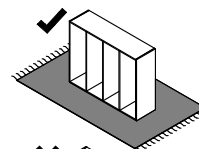
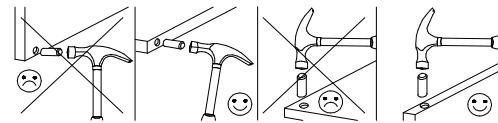
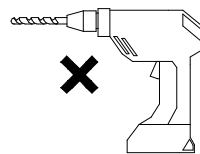
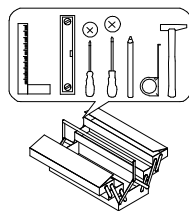
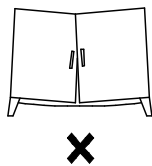
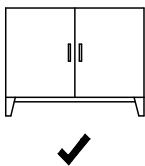


ELORA

R-16/17

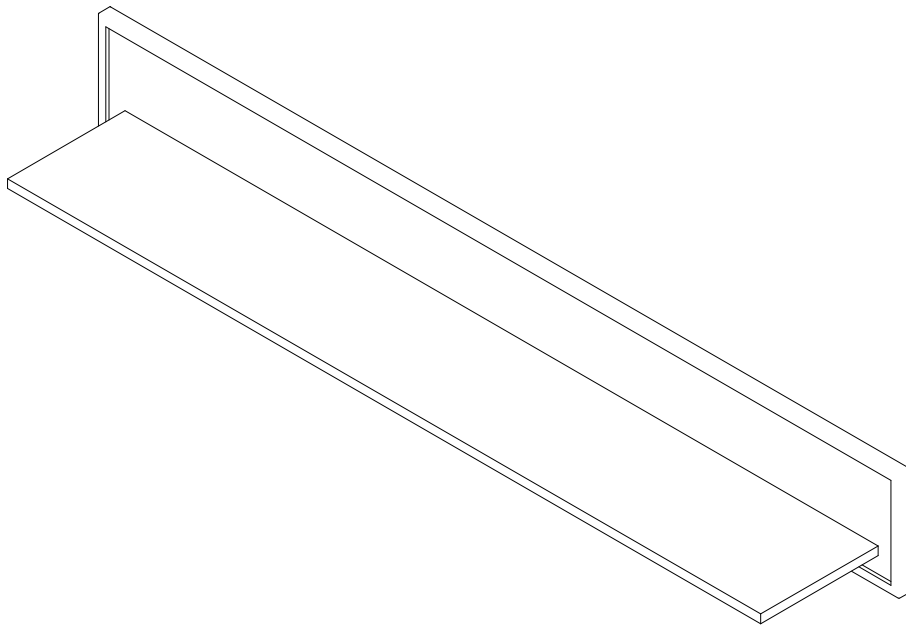







1500x200/1200x200




1410x220/1110x220

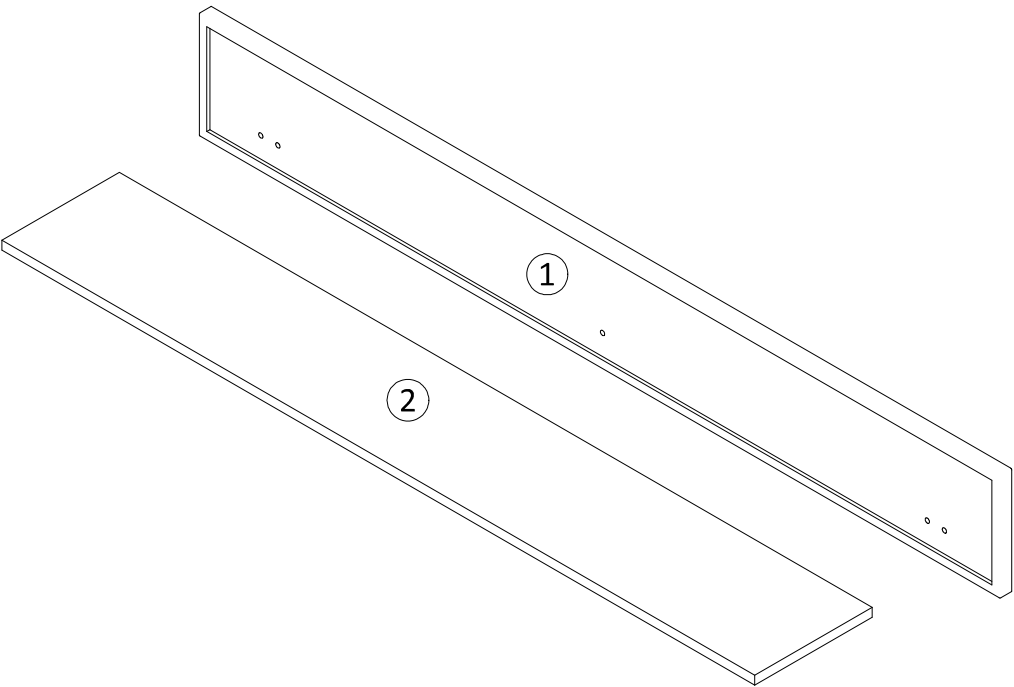


 KF	 K	 E2	 ZM	 KL
7x50	8x45	6.3x9		SW4
3x	2x	4x	2x	1x


1

	
ZW	E2
2x	4x

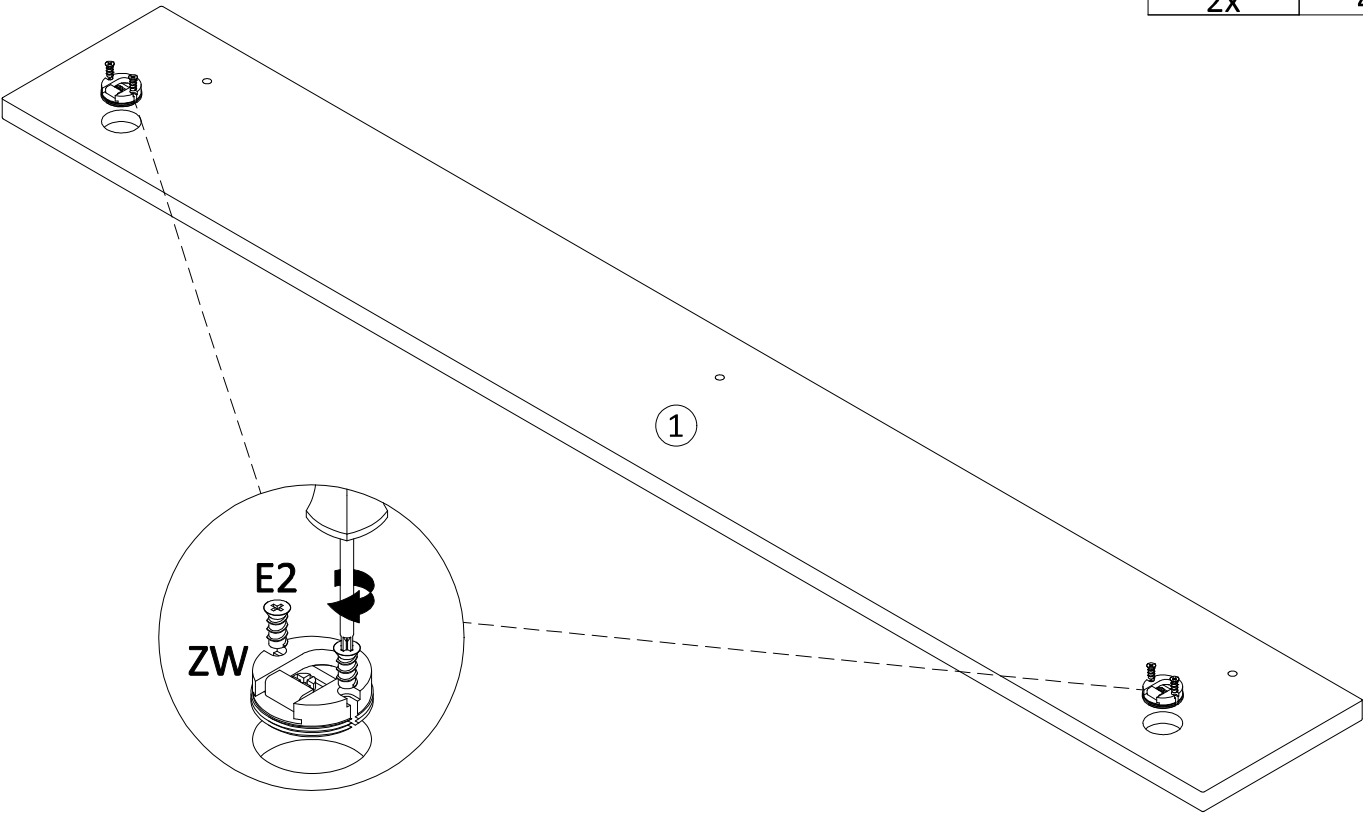


2



K
2x

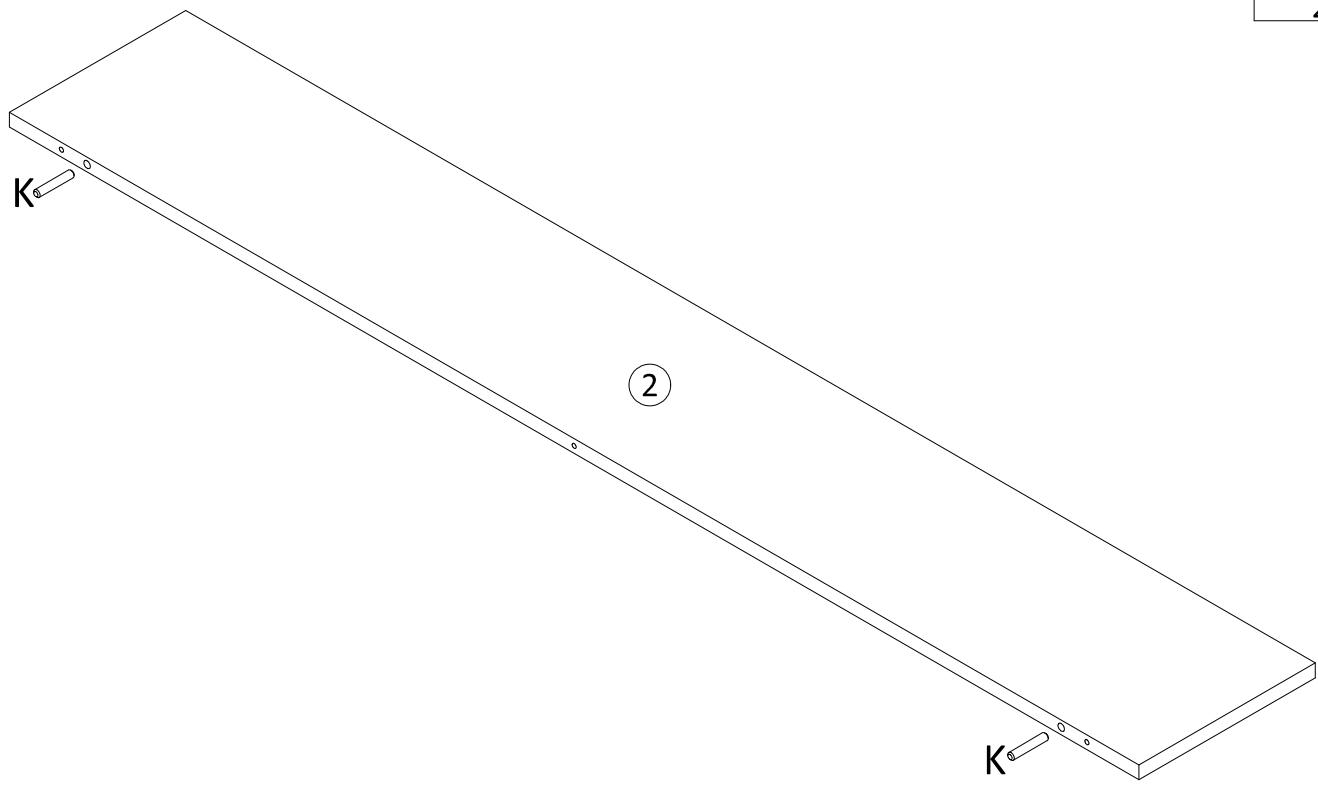


3

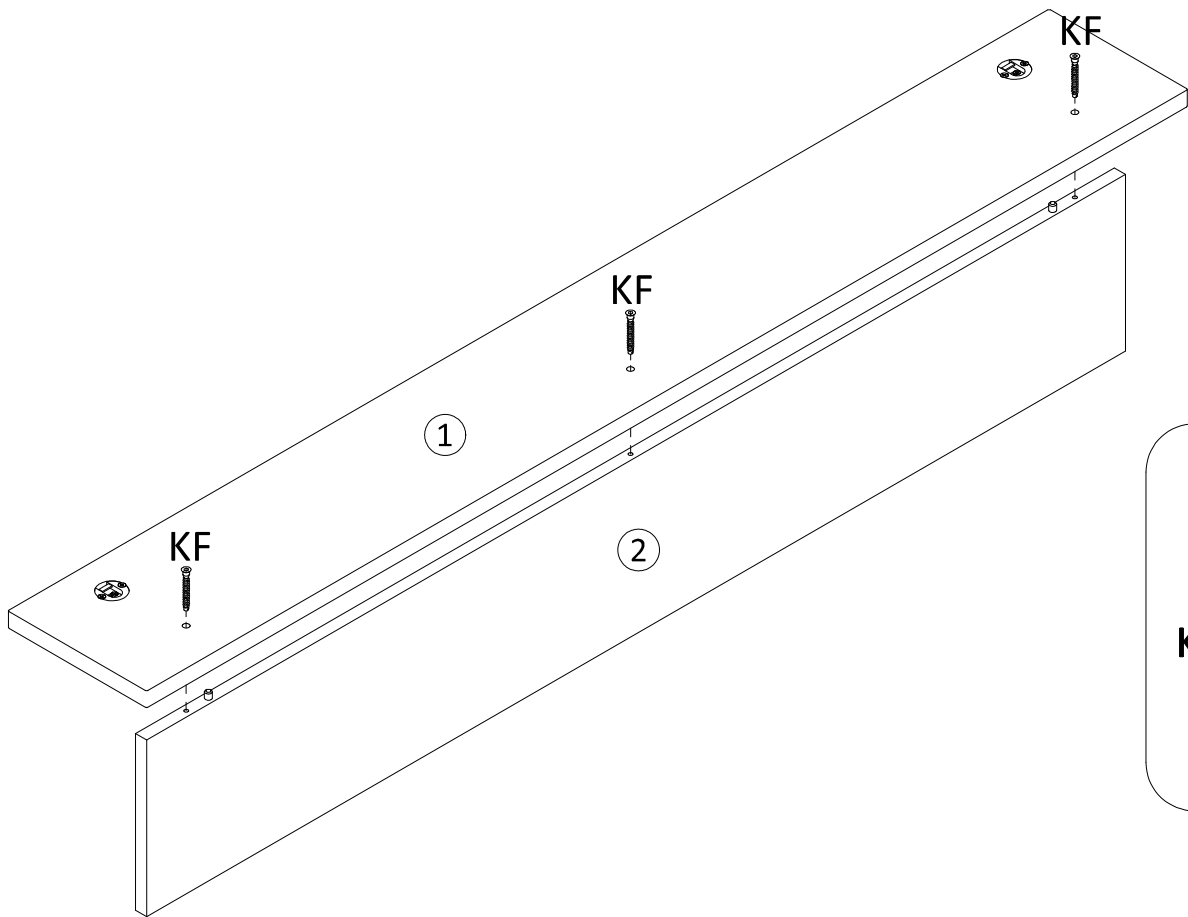

KF	KL
3x	1x

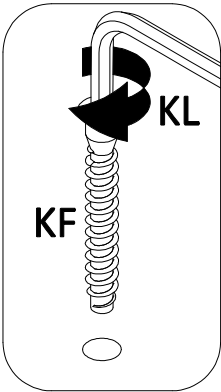

4

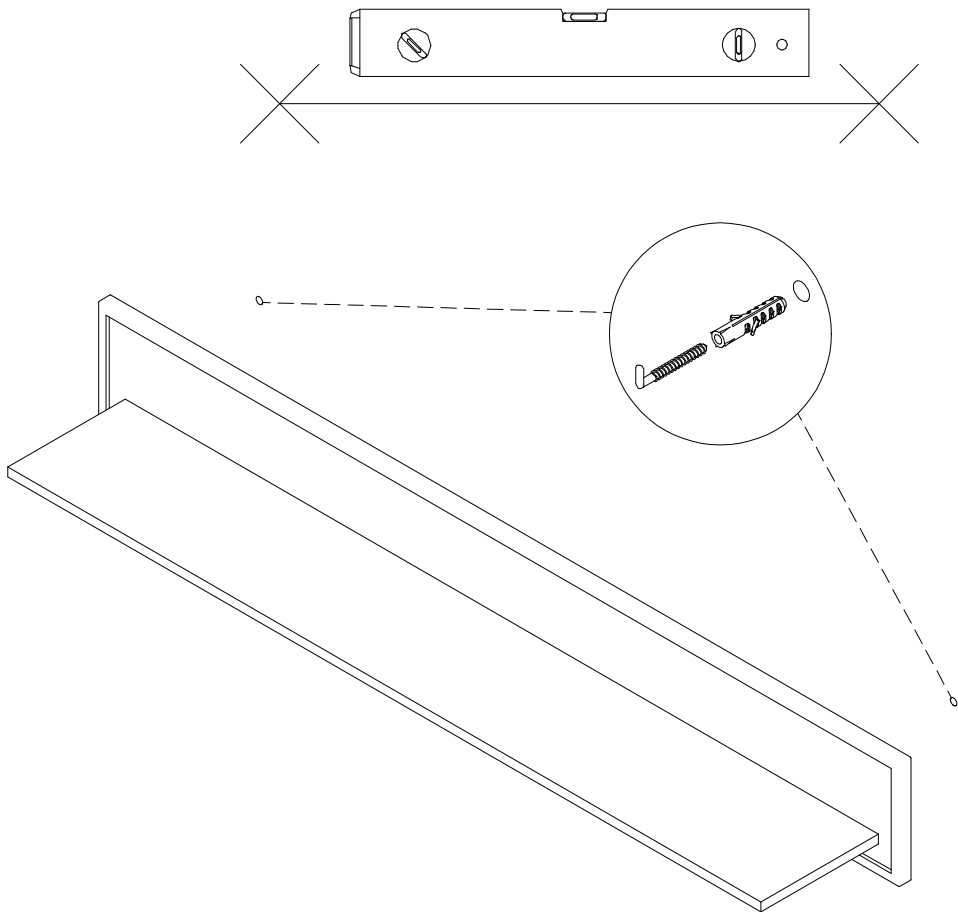

1. A power drill is shown being used to drill a hole into the wall.
2. A bracket (KL) is shown being attached to the wall using a screw (KF).

