



ASSEMBLY INSTRUCTION

DC 38











4 Drawers

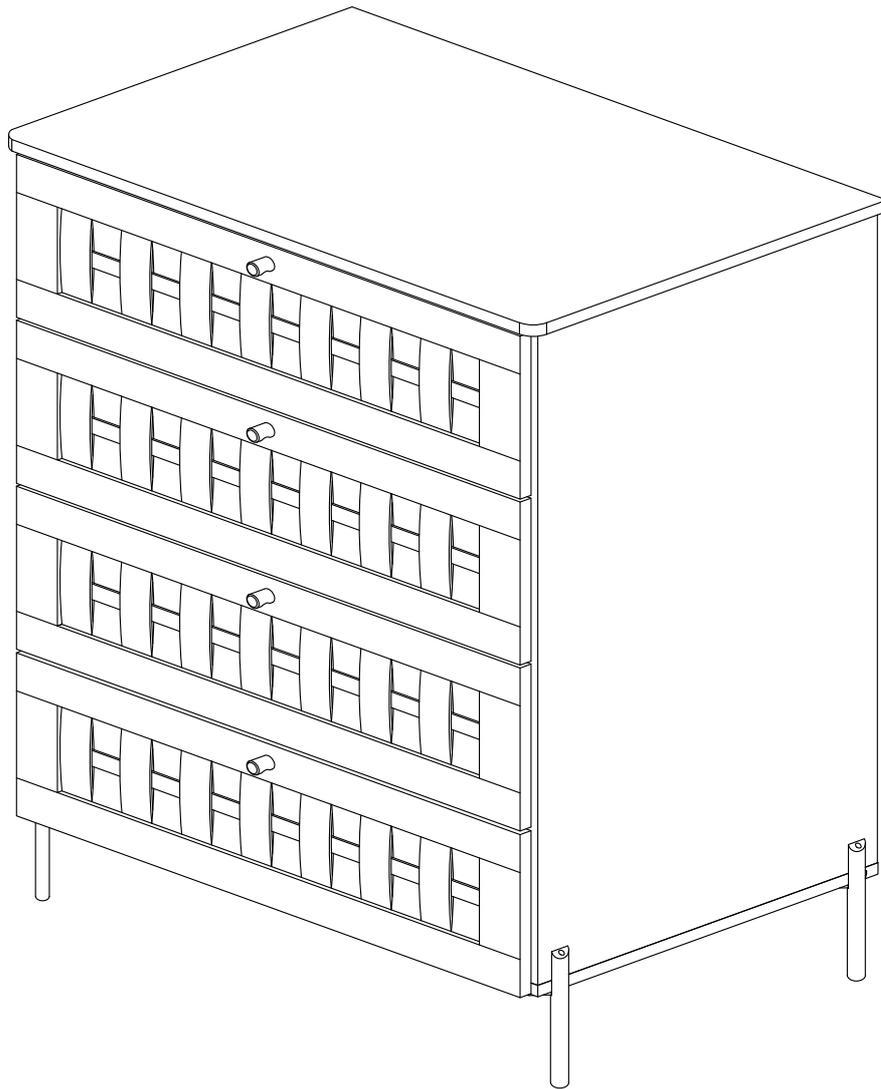


ASSEMBLY INSTRUCTION

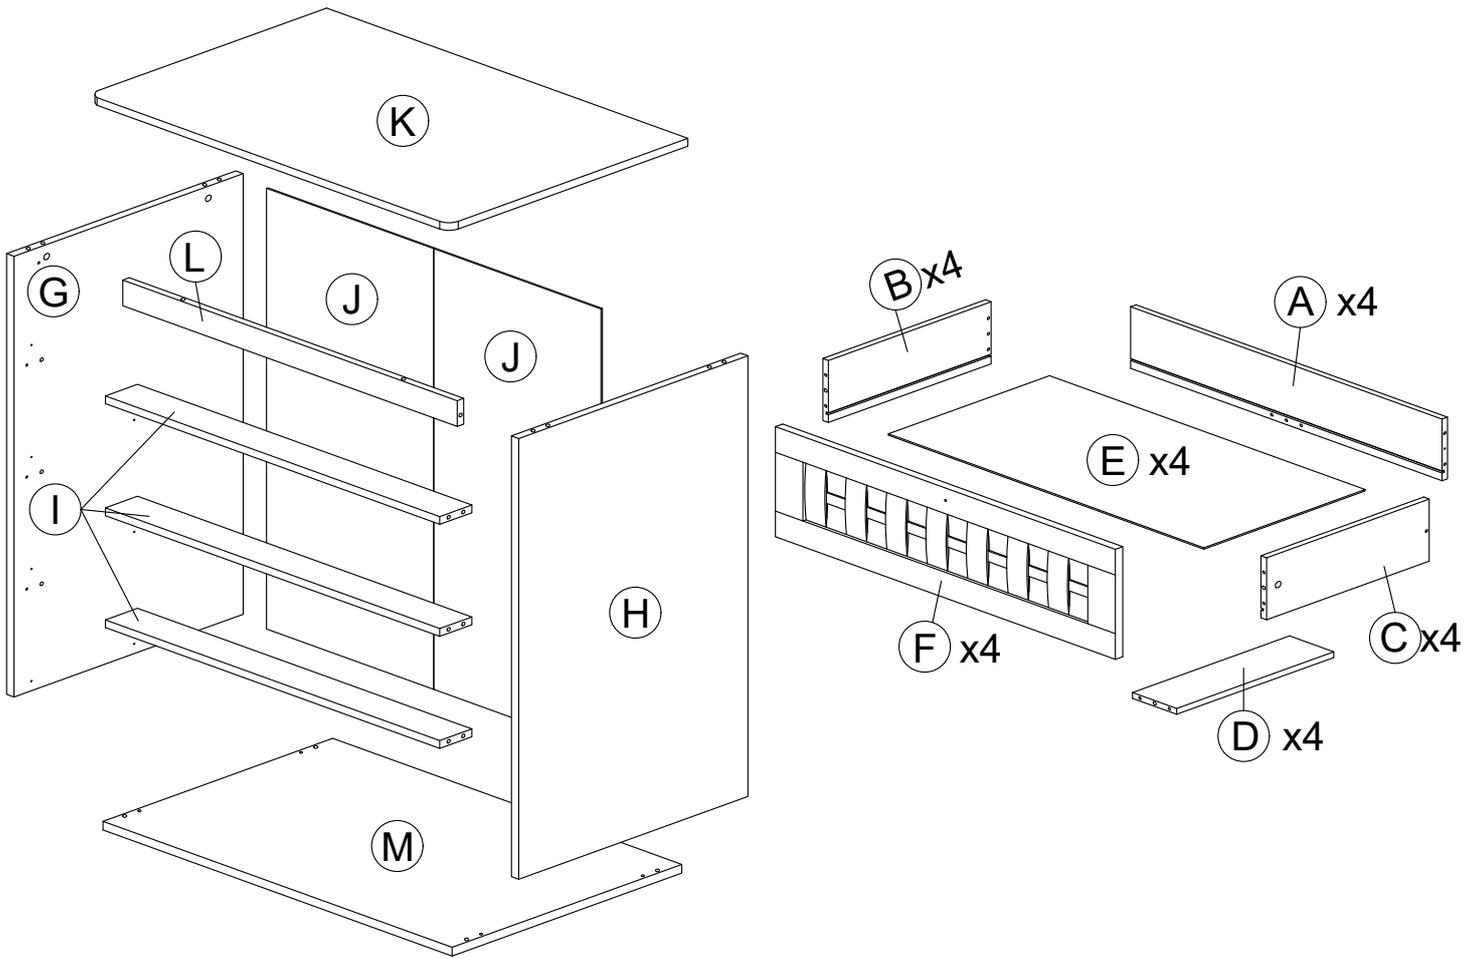

ASSEMBLY INSTRUCTION

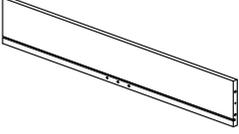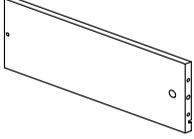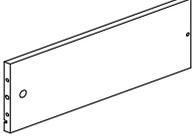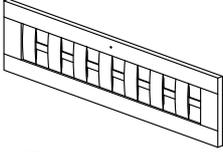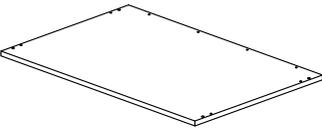PART LIST			
<p>A</p>  <p>Drawer Back 4 PCS</p>	<p>B</p>  <p>Drawer Side L 4 PCS</p>	<p>C</p>  <p>Drawer Side R 4 PCS</p>	<p>D</p>  <p>Drawer Support 4 PCS</p>
<p>E</p>  <p>Drawer Panel 4 PCS</p>	<p>F</p>  <p>Drawer Head 4 PCS</p>	<p>G</p>  <p>Side Panel L 1 PC</p>	<p>H</p>  <p>Side Panel R 1 PC</p>
<p>I</p>  <p>Middle Support 3 PCS</p>	<p>J</p>  <p>Back Panel L/R 2 PCS</p>	<p>K</p>  <p>Top Panel 1 PC</p>	<p>L</p>  <p>LVL Front Support 1 PC</p>
<p>M</p>  <p>Bottom Panel 1 PC</p>			

ASSEMBLY INSTRUCTION

HARDWARE LIST			
<p>1</p>  <p>Camlock 15MM 26 PCS</p>	<p>2</p>  <p>Camlock Bolt 15MM 26 PCS</p>	<p>3</p>  <p>M8x25MM Wood Dowel 14 PCS</p>	<p>4</p>  <p>M6x30MM Wood Dowel 48 PCS</p>
<p>5</p>  <p>CB Screw M3.5x16MM 16 PCS</p>	<p>6</p>  <p>M4x38MM Screw 12 PCS</p>	<p>7</p>  <p>Csk M6x50MM 4 PCS</p>	<p>8</p>  <p>Handle Screw M4x22MM 4 PCS</p>
<p>9</p>  <p>Metal Handle C 4 PCS</p>	<p>10</p>  <p>M4 Allen Key 1 PC</p>	<p>11</p>  <p>Metal Leg 4 PCS</p>	<p>12</p>  <p>Nail 5/8 25 PCS</p>
<p>13</p>  <p>CB Screw M3.5x12MM 48 PCS</p>	<p>14</p>  <p>14A 14B Drawer Slide 12" 4 SETS</p>	<p>15</p>  <p>Black P/H Screw M4x20MM 4 PCS</p>	





ASSEMBLY INSTRUCTION

Step 1

Required/Requis/Requerido

x48

 4

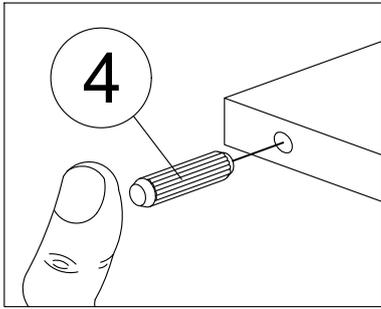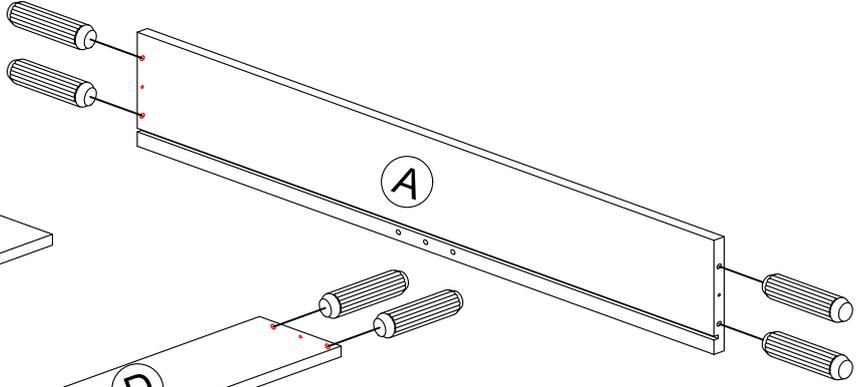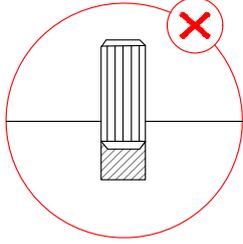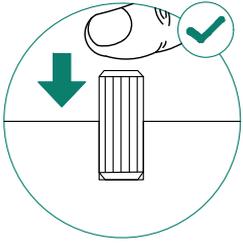




x4

Step 2

Required/Requis/Requerido

x12

 2

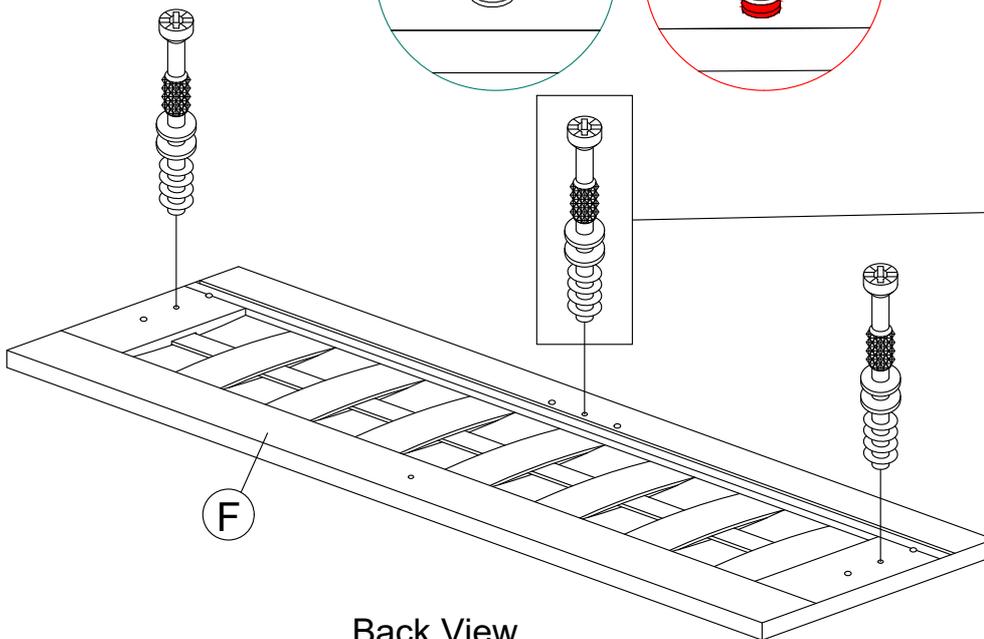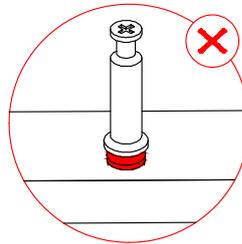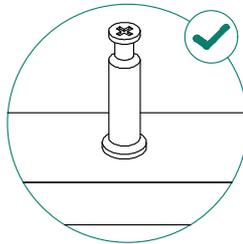


Back View

x4

ASSEMBLY INSTRUCTION

Step 3

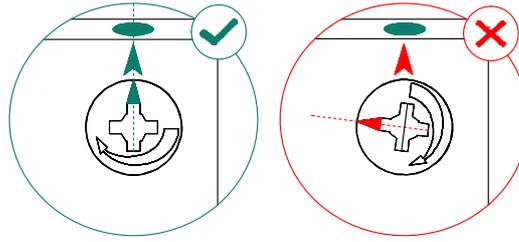


Required/Requis/Requerido

x12



1

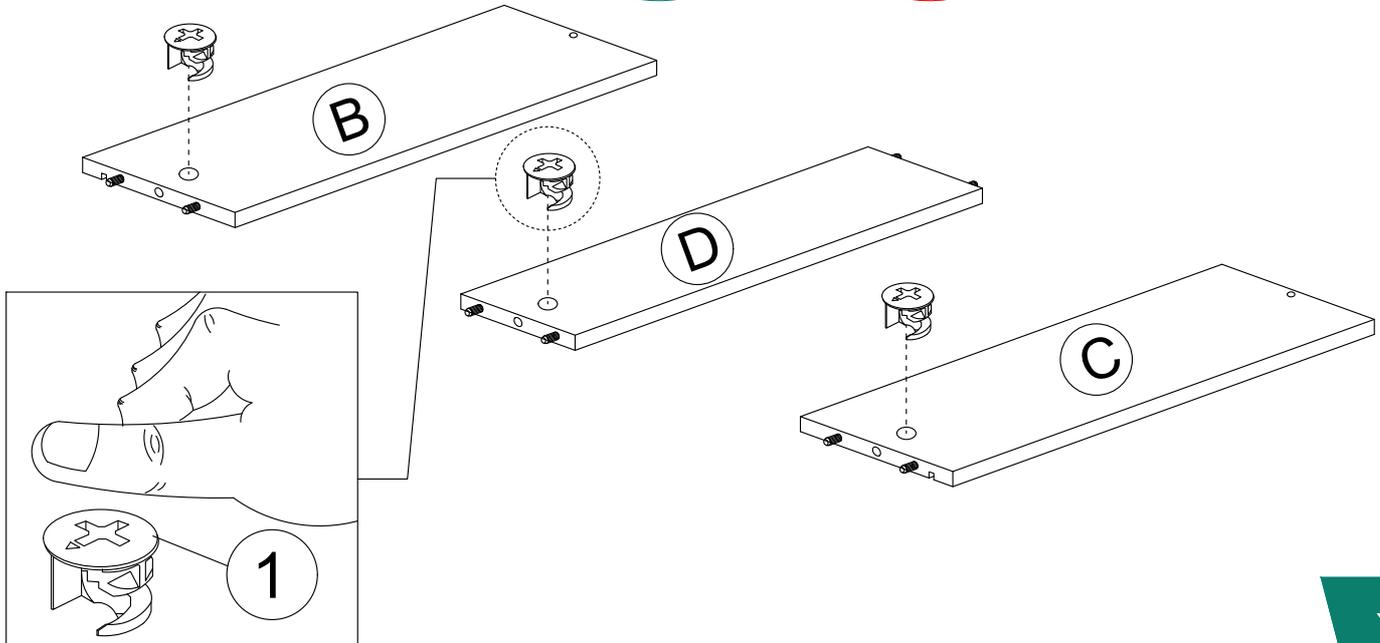


Step 4

Required/Requis/Requerido

x12




6

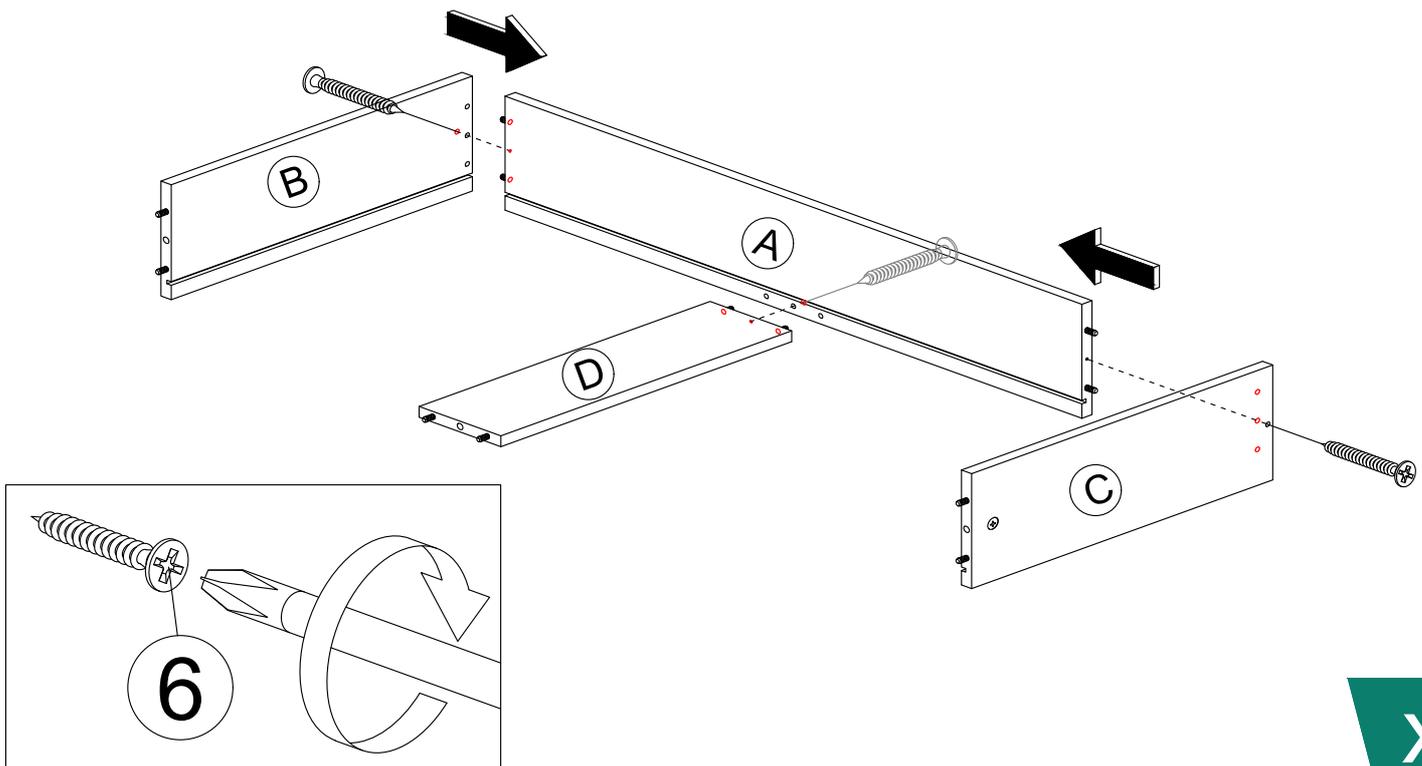


ASSEMBLY INSTRUCTION

Step 5

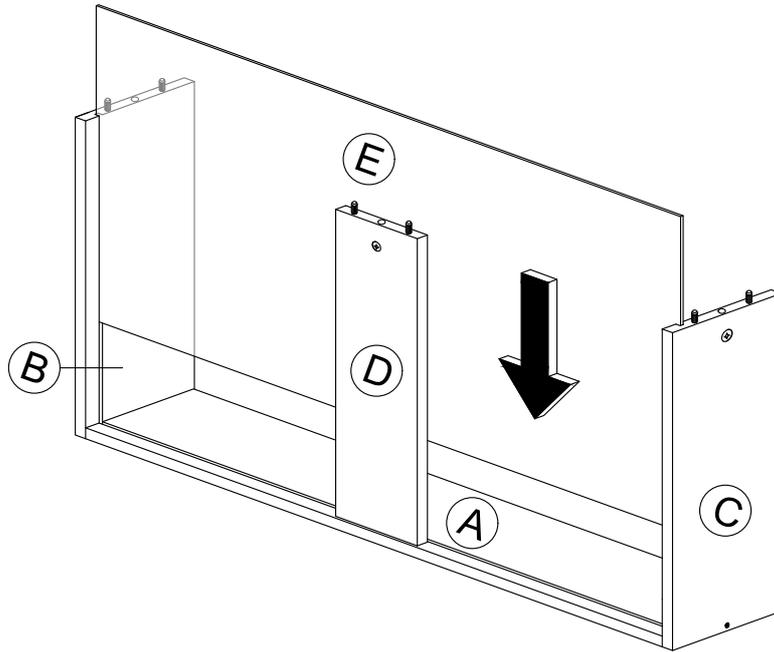

x4

Step 6

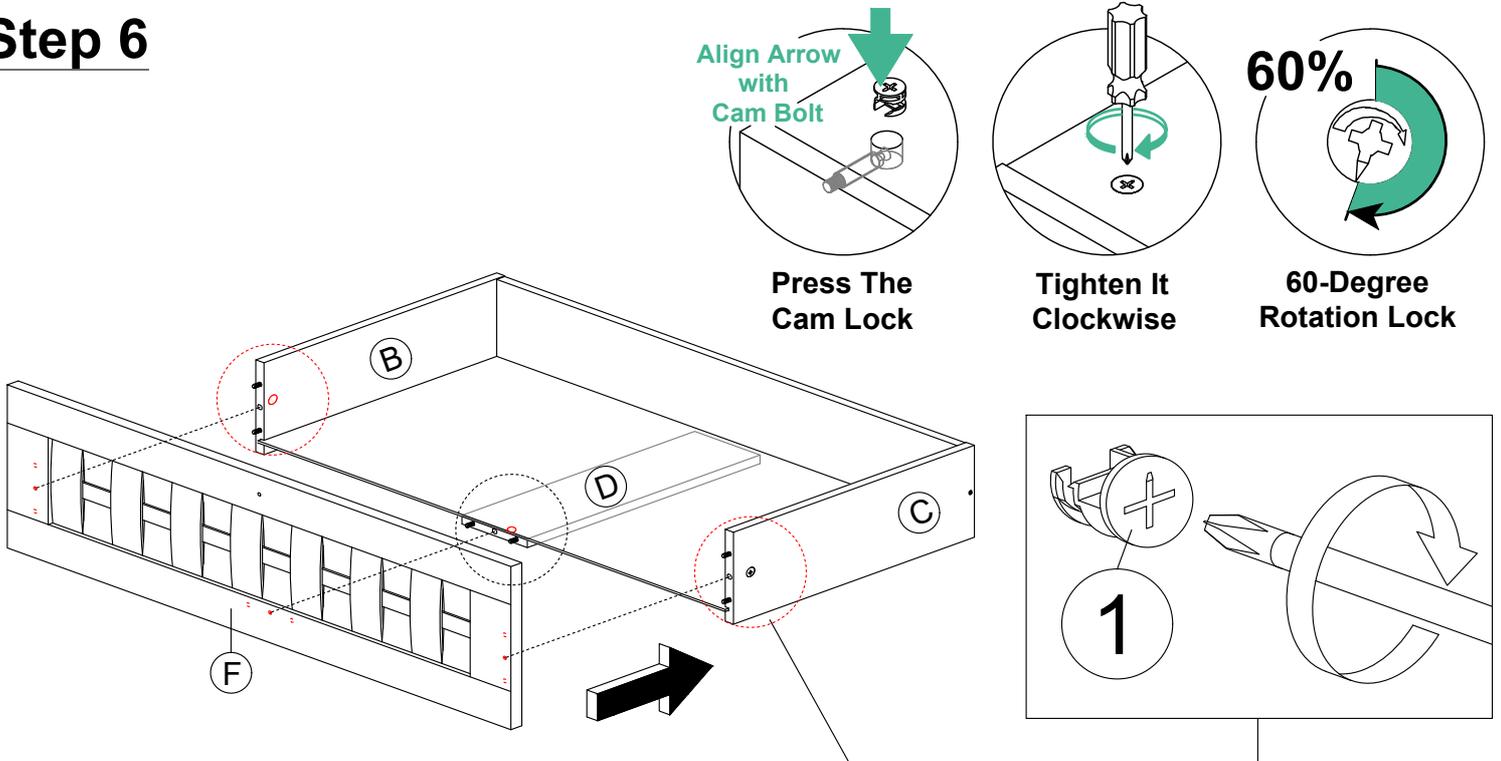

x4




ASSEMBLY INSTRUCTION

Step 7

Required/Requis/Requerido

x24  13

x4  14B

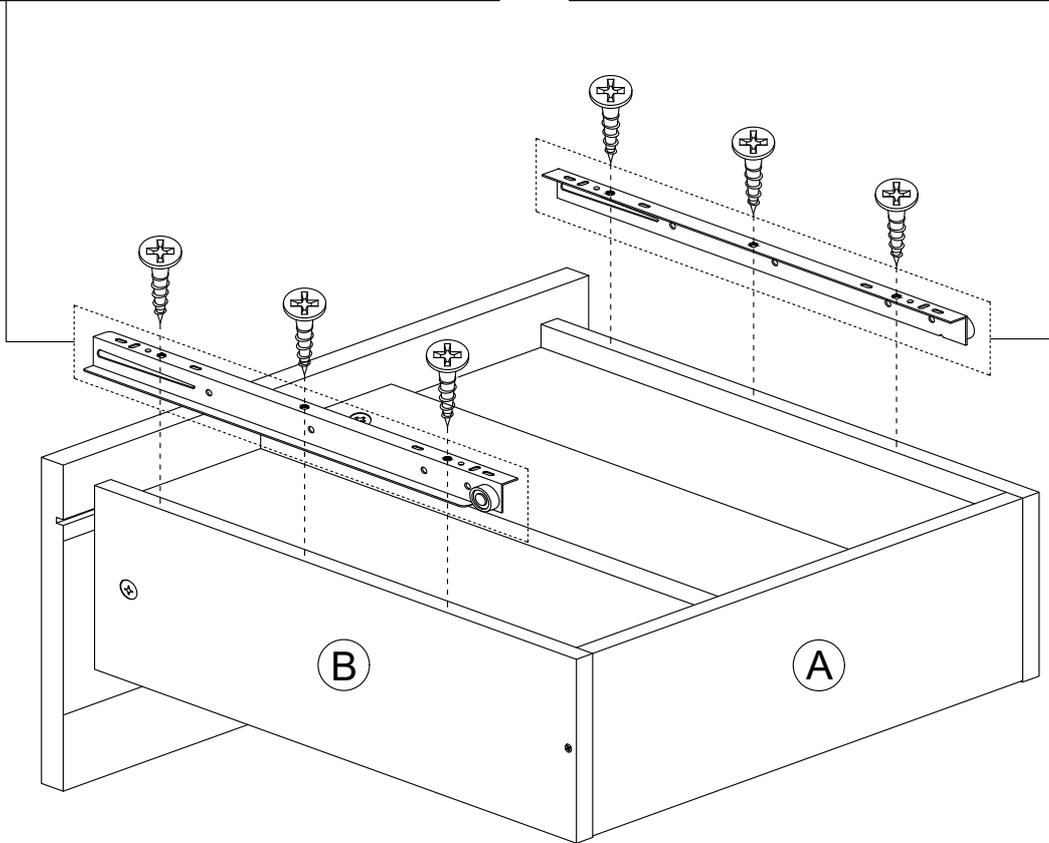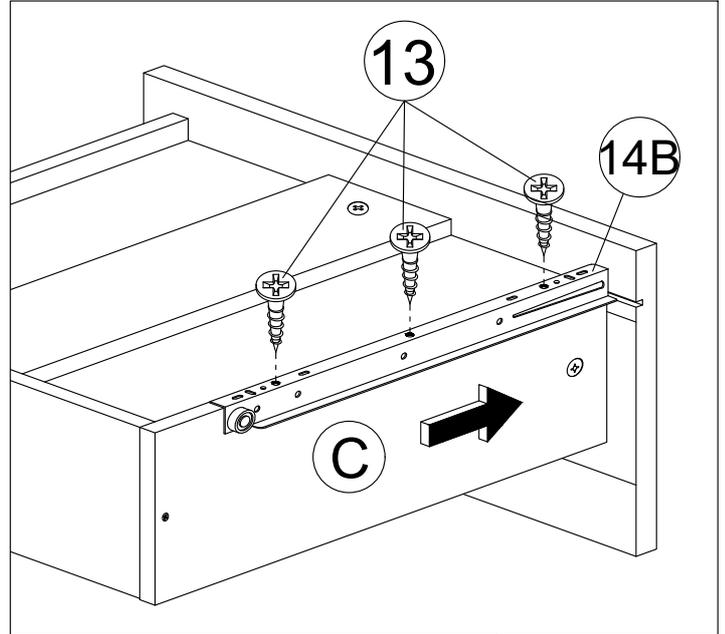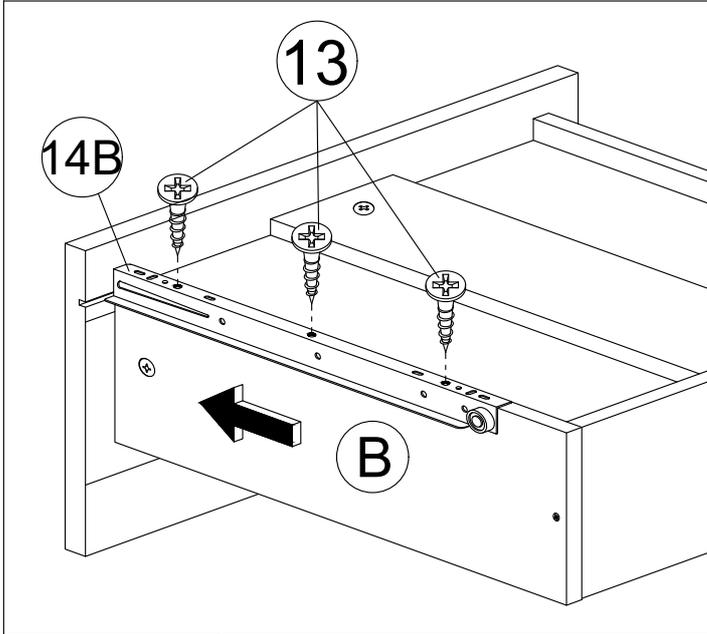

Bottom View

x4



ASSEMBLY INSTRUCTION

Step 8

Required/Requis/Requerido

x4  9

x4  8





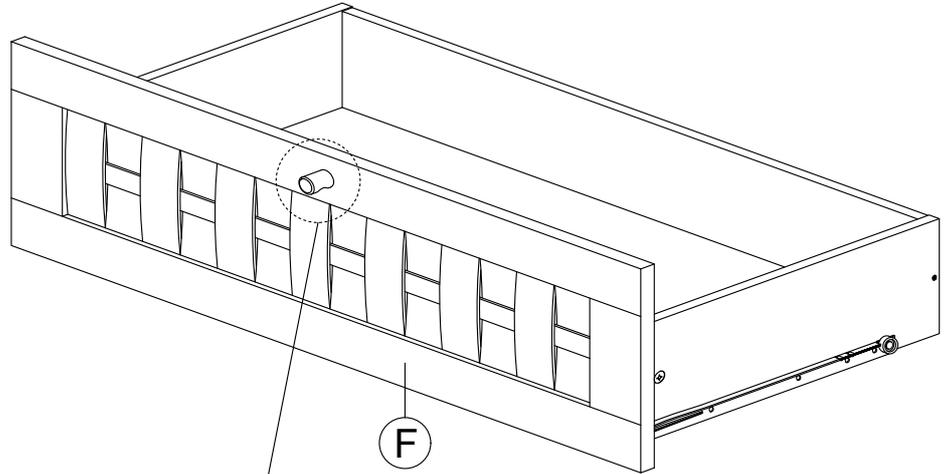
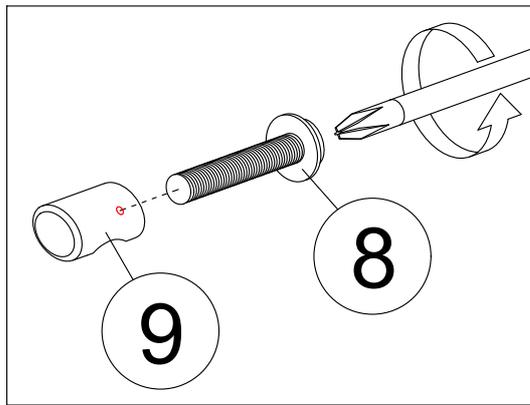


x4

Step 9



Required/Requis/Requerido

x14  2

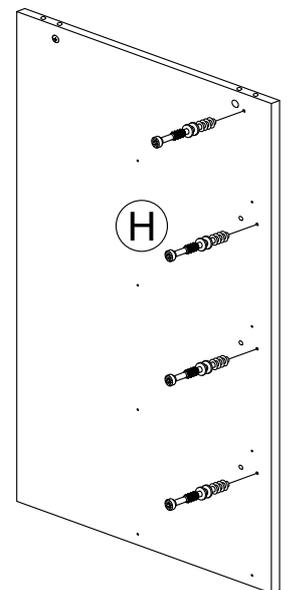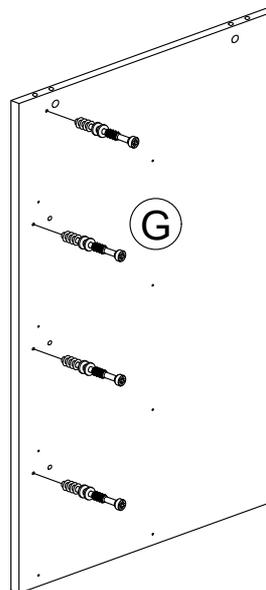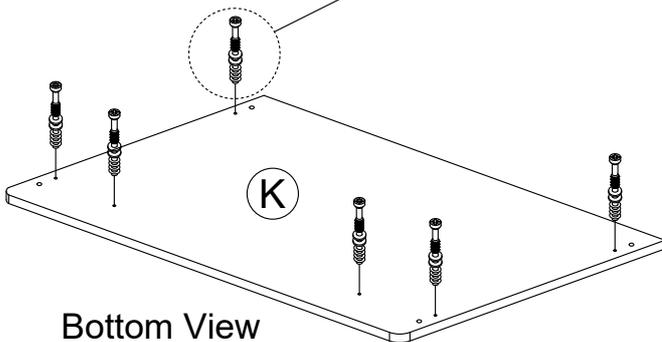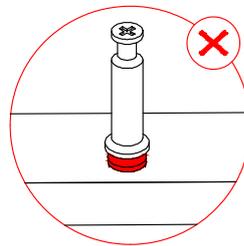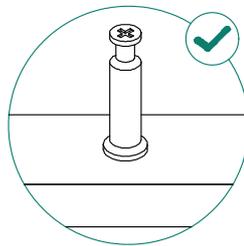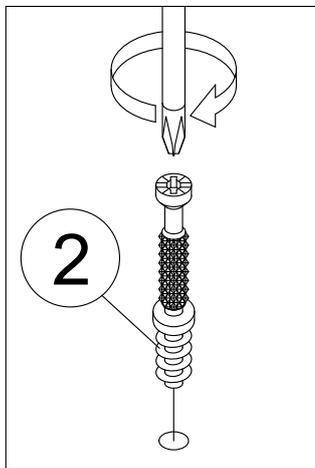






ASSEMBLY INSTRUCTION

Step 10

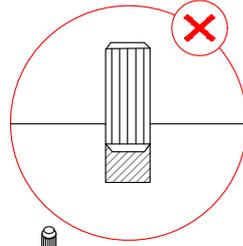
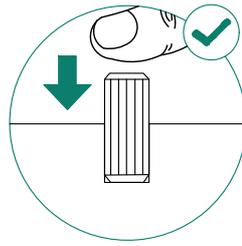


Required/Requis/Requerido

x14

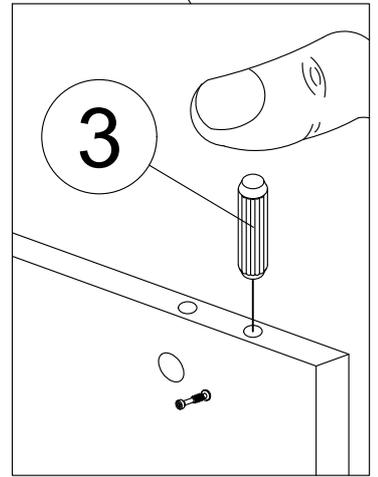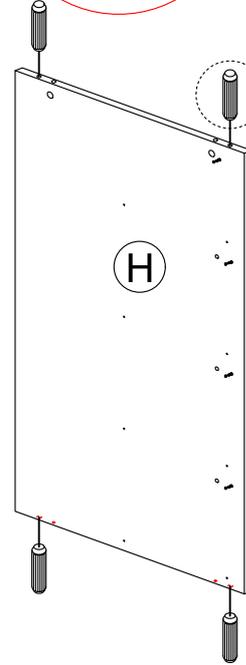
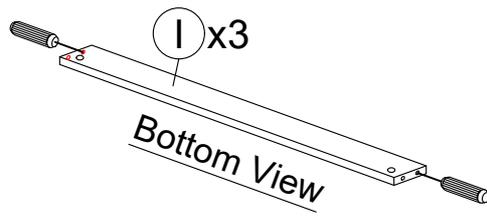
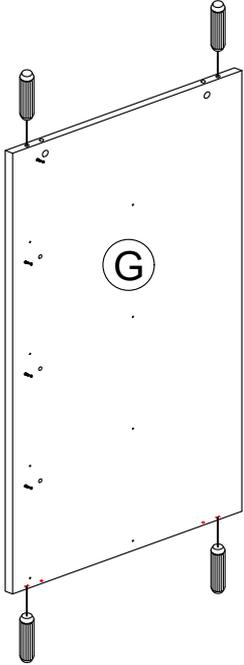



Step 11

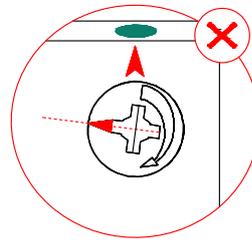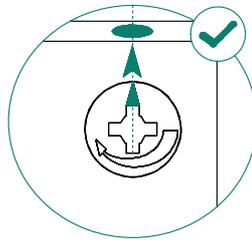


Required/Requis/Requerido

x14

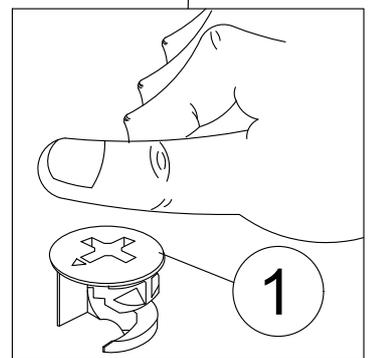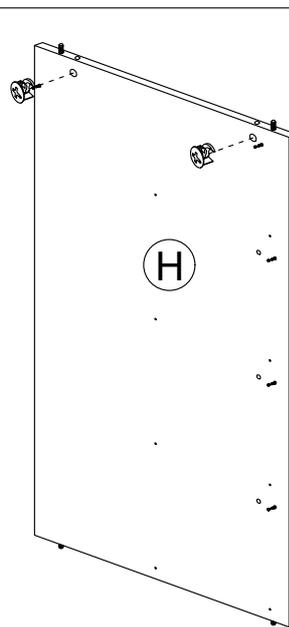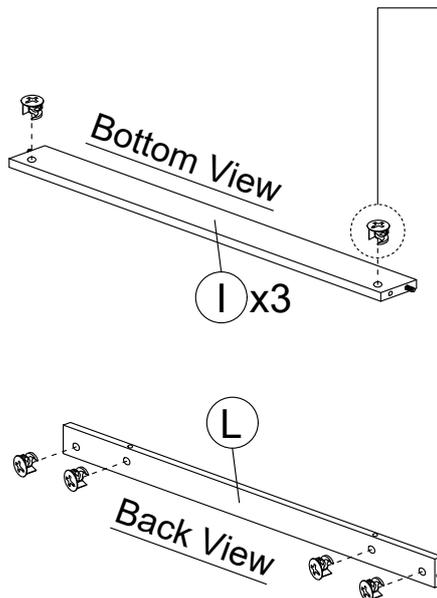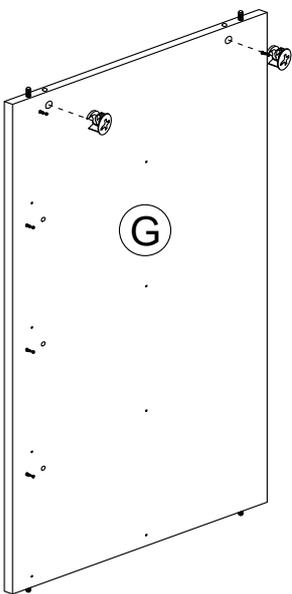


ASSEMBLY INSTRUCTION




Step 12

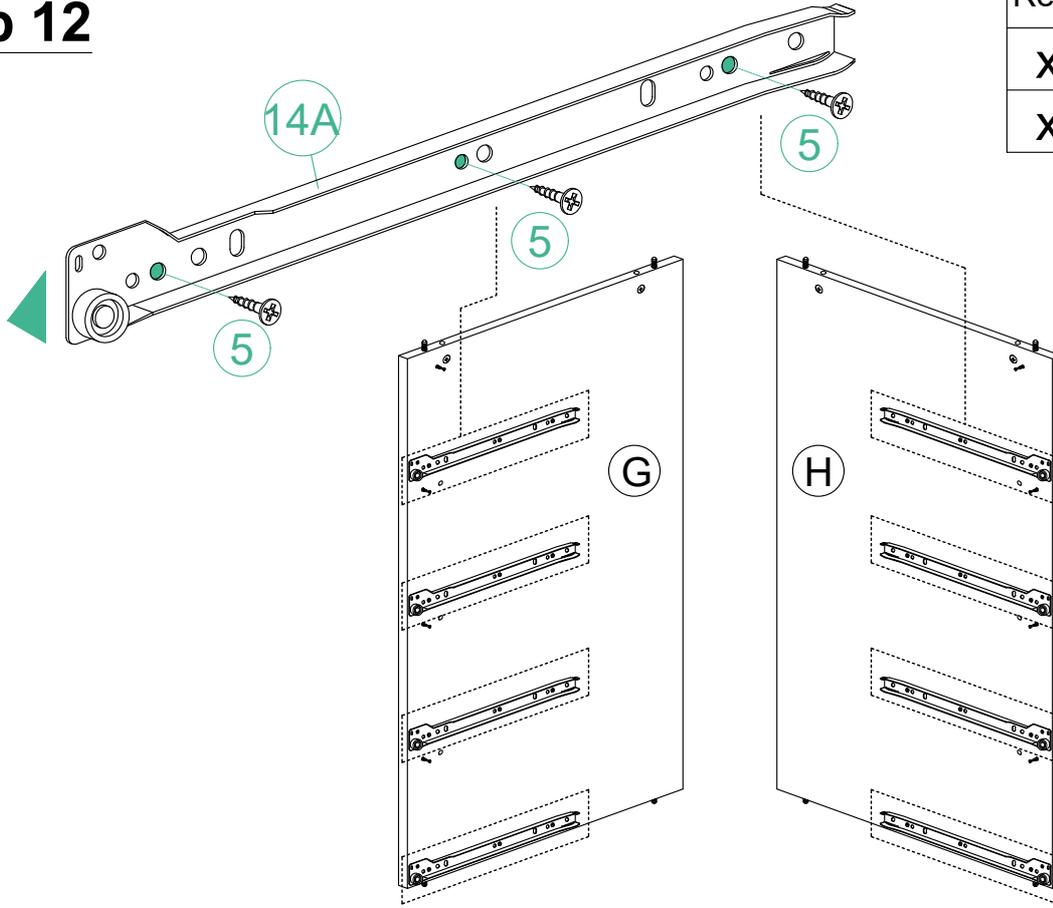

Required/Requis/Requerido


x24	 13
x4	 14A

Step 13

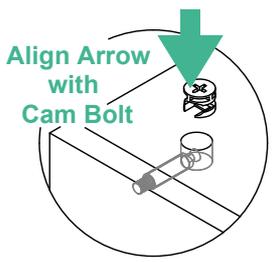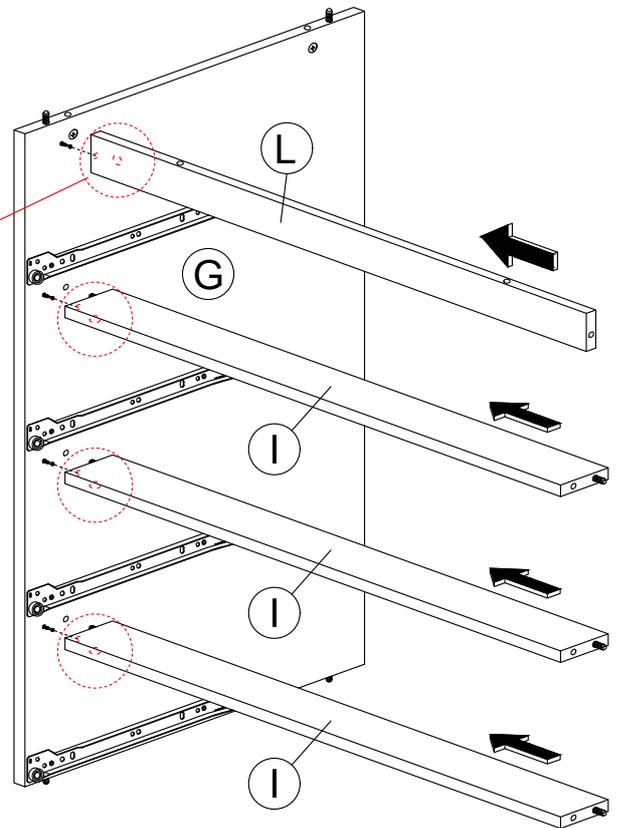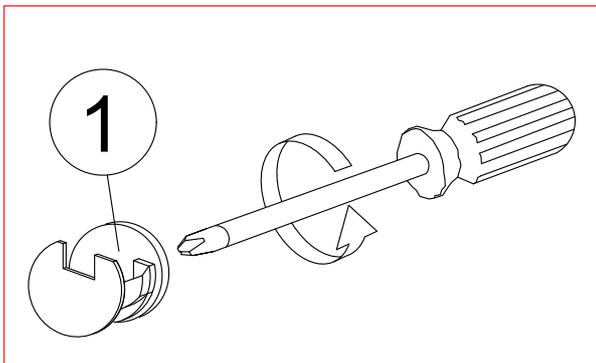


Align Arrow with Cam Bolt

Press The Cam Lock

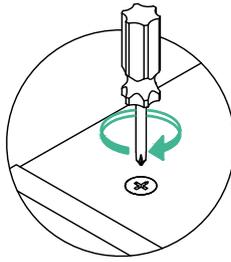



Tighten It Clockwise

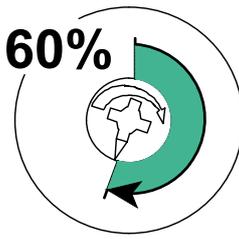


60%
60-Degree Rotation Lock

ASSEMBLY INSTRUCTION


Step 14

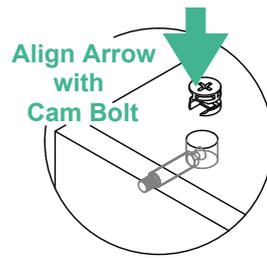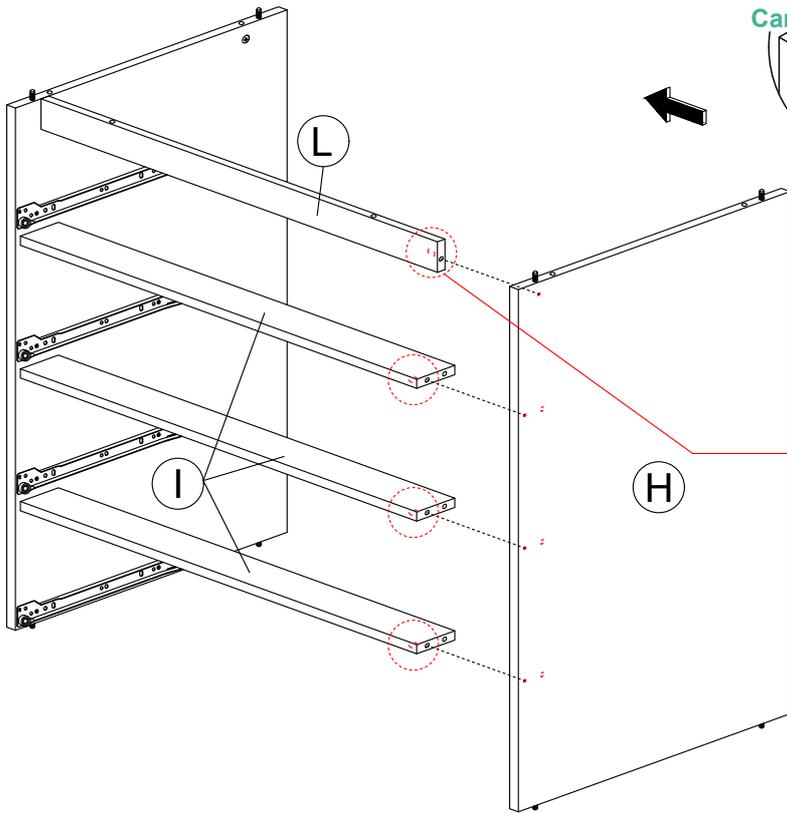


Press The
Cam Lock

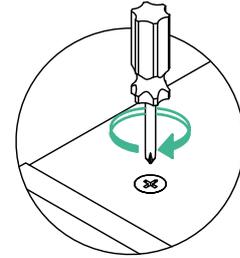



Tighten It
Clockwise

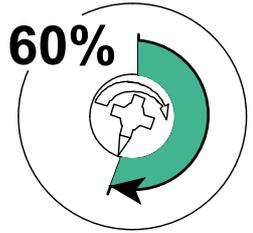


60-Degree
Rotation Lock

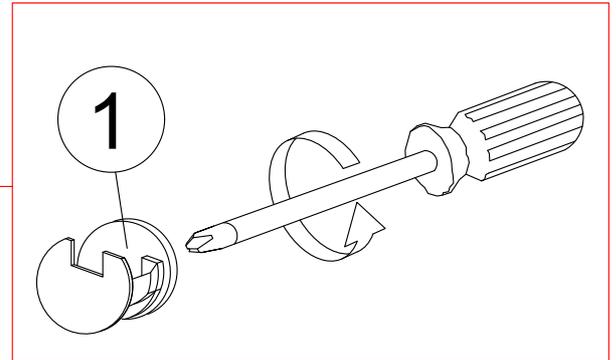


Step 15

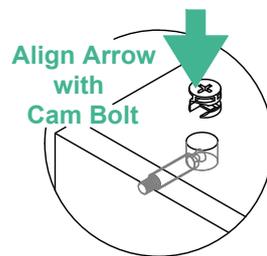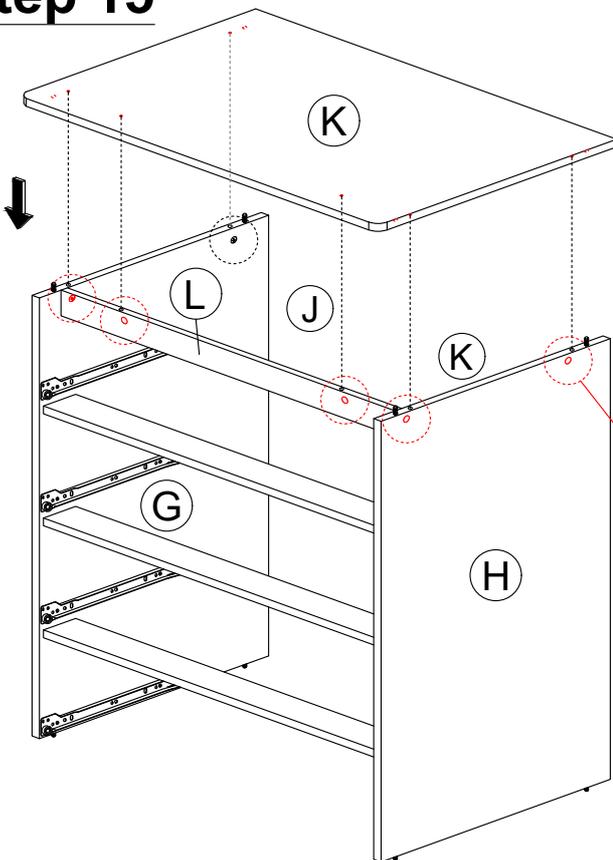


Press The
Cam Lock

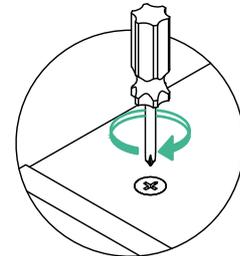

Tighten It
Clockwise

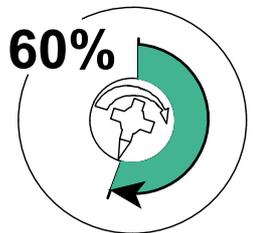

60-Degree
Rotation Lock

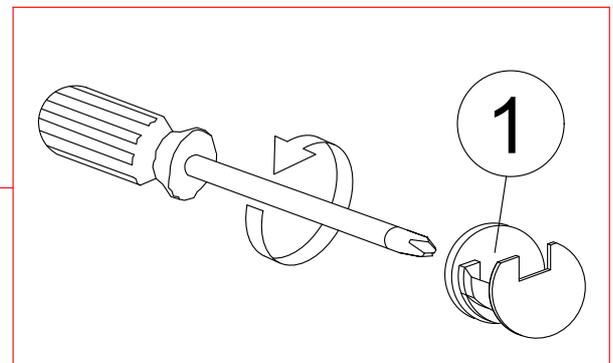



ASSEMBLY INSTRUCTION

Step 16

Required/Requis/Requerido

x1  10

x4  7

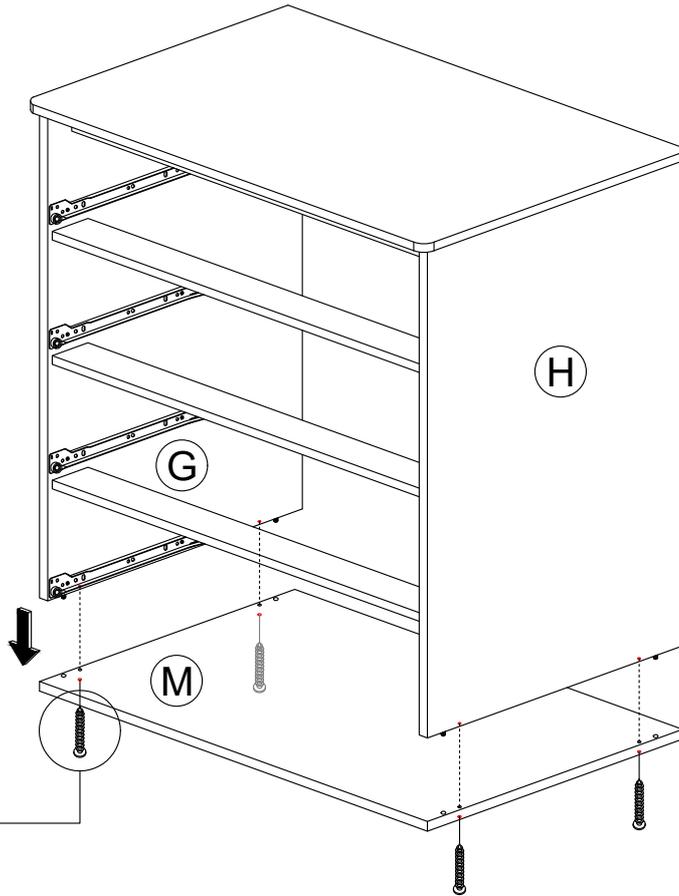
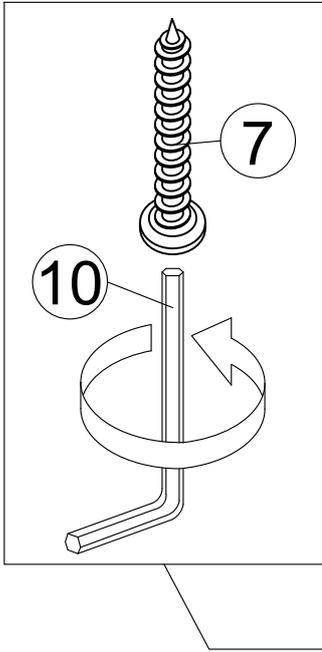


**Lie Down
Before Screw**

Step 17

Required/Requis/Requerido

x22  12

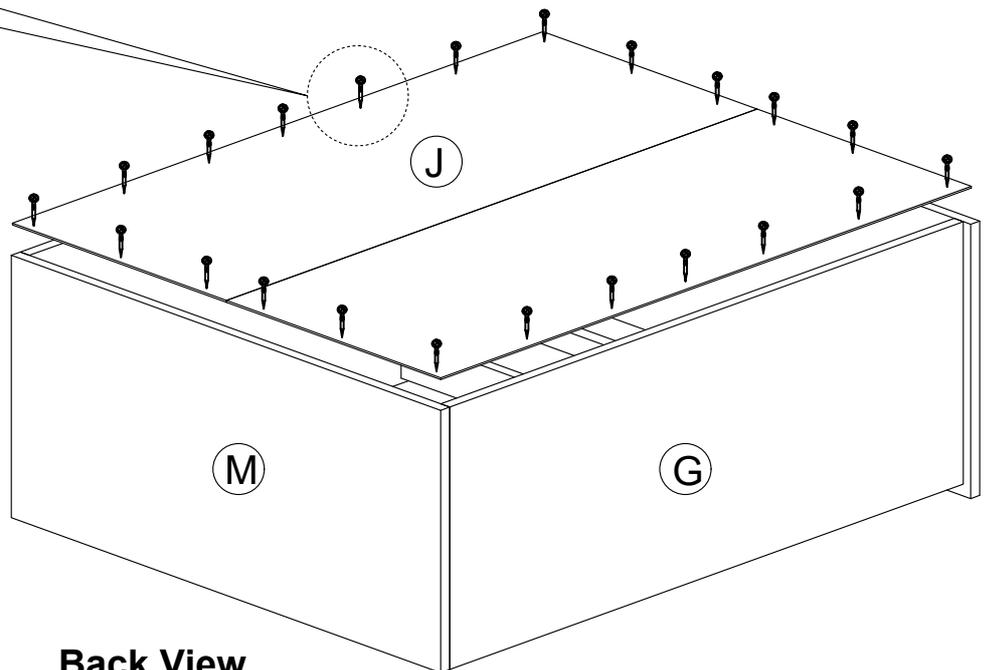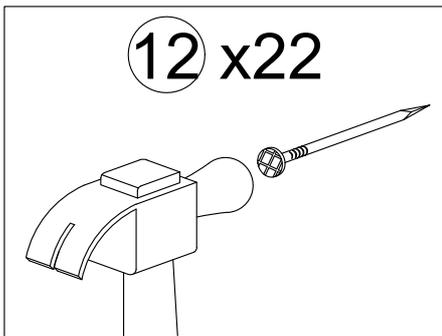

Back View



ASSEMBLY INSTRUCTION

Step 18


Required/Requis/Requerido

x16  5

x4  11

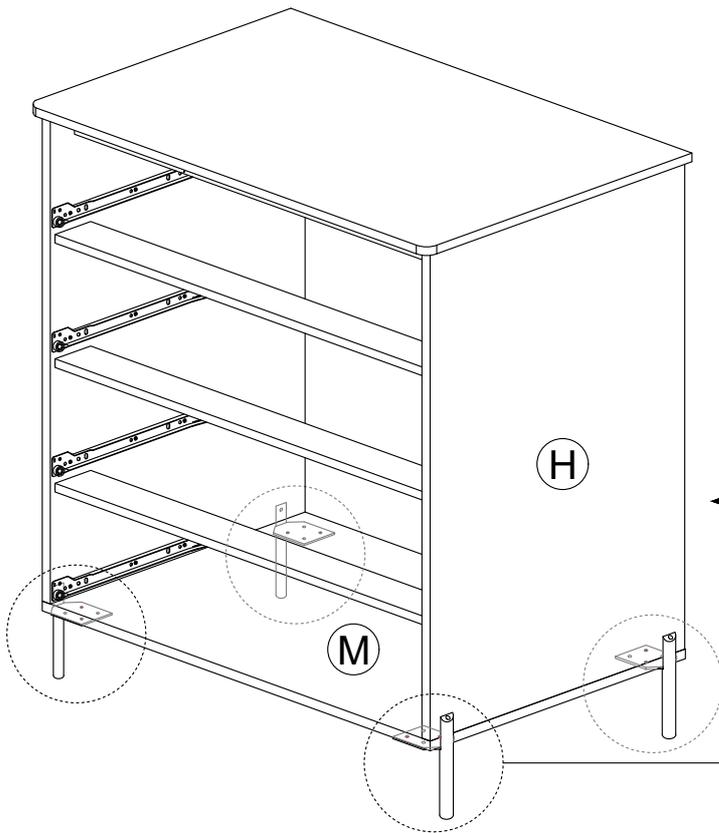



Lie Down
Before Screw

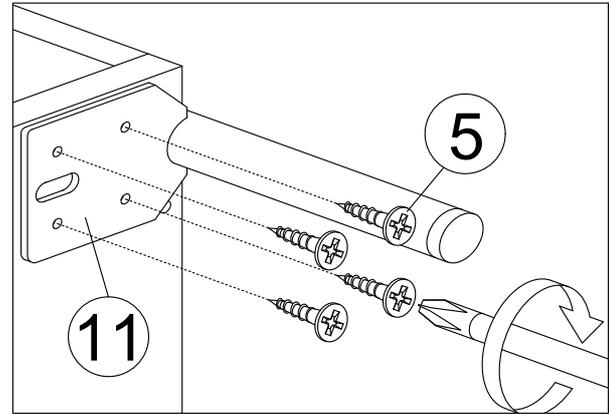

Step 19



Required/Requis/Requerido

x4  15

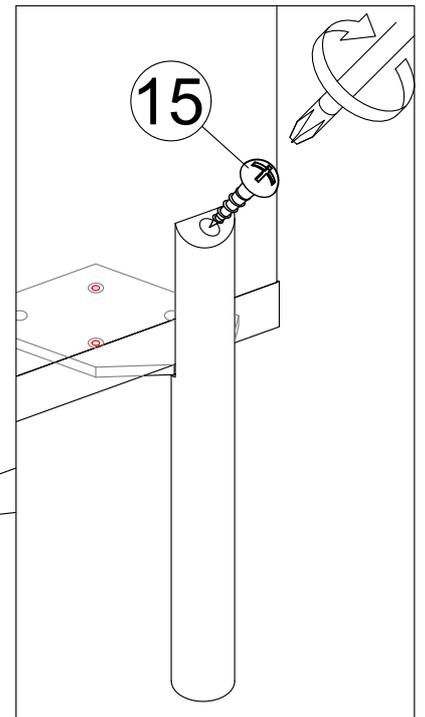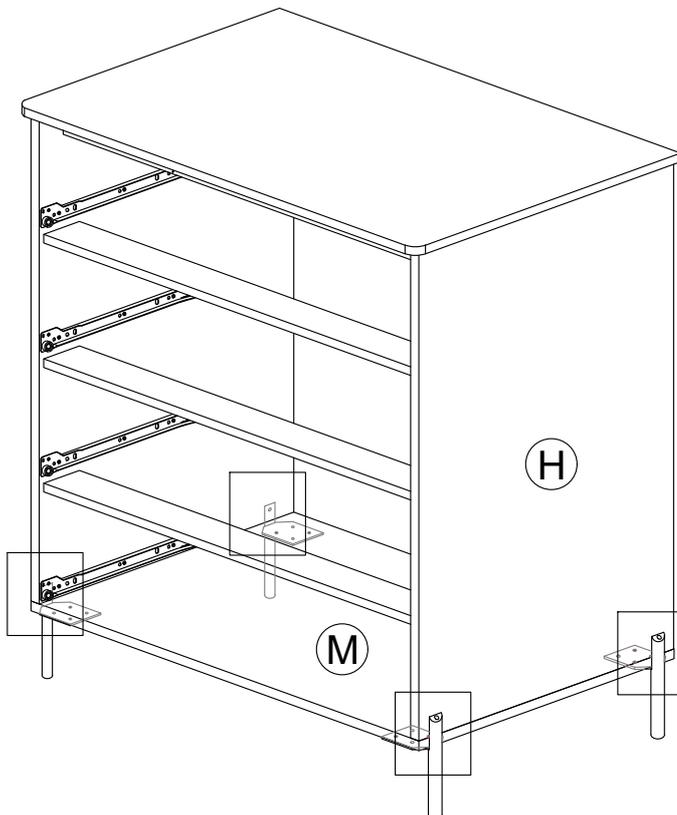

ASSEMBLY INSTRUCTION

Step 20

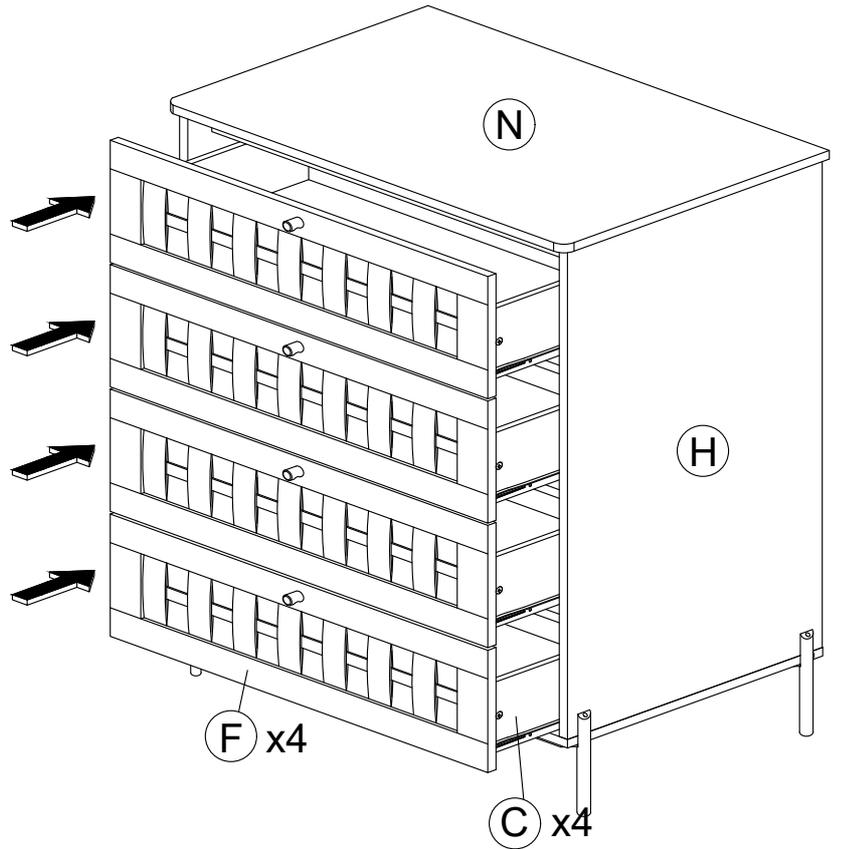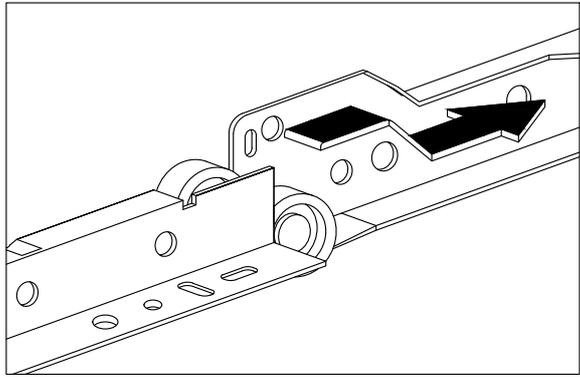

Completed

