


POSSINA

Assembly Instruction

Model : PH 7605

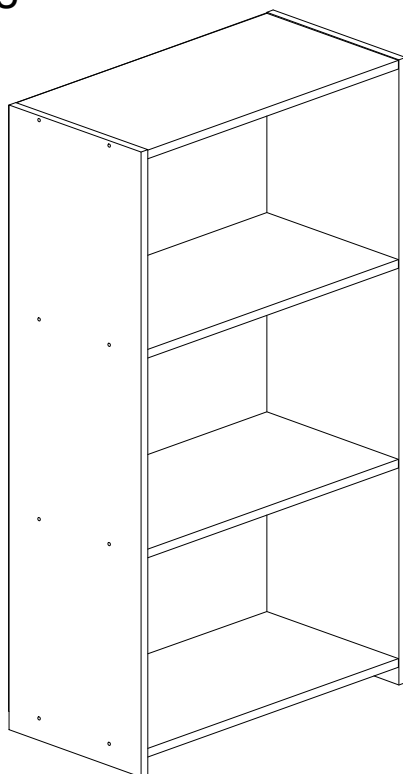


Hardware List

No.	SHAPE	DESCRIPTION	Qty.
A		8x25mm Dowel (Wood)	16Pcs
B		M4x45mm Screw	16Pcs
C		5/8 Nail With Pin	4Pcs
D		6/8 Power Pin	30Pcs
E		Sticker	16Pcs

Part List


No.	Descriptions		Qty.
1	Side Left Panel	1075x300x15	1PC
2	Side Right Panel	1075x300x15	1PC
3	Partition Top Bottom Panel	570x299x15	4PCS
4	Back Panel	1042x298.5x2.5	2PCS

Part List

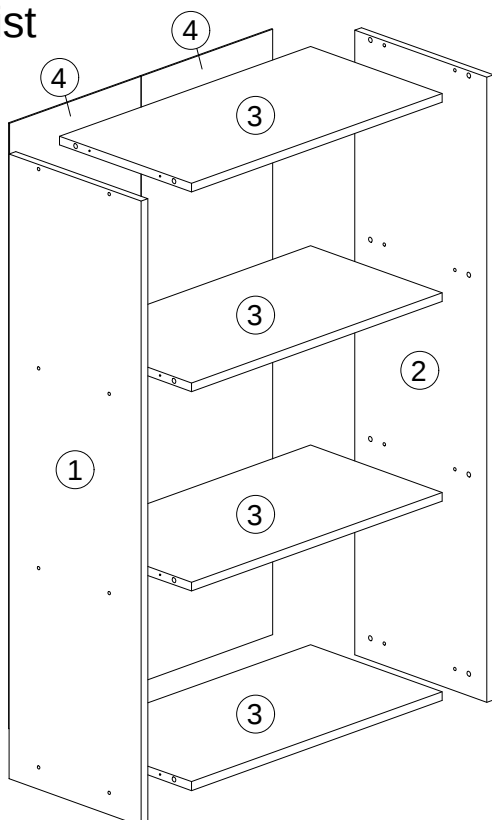

Step 1


A		8x25mm Dowel (Wood)	16Pcs
---	---	---------------------	-------

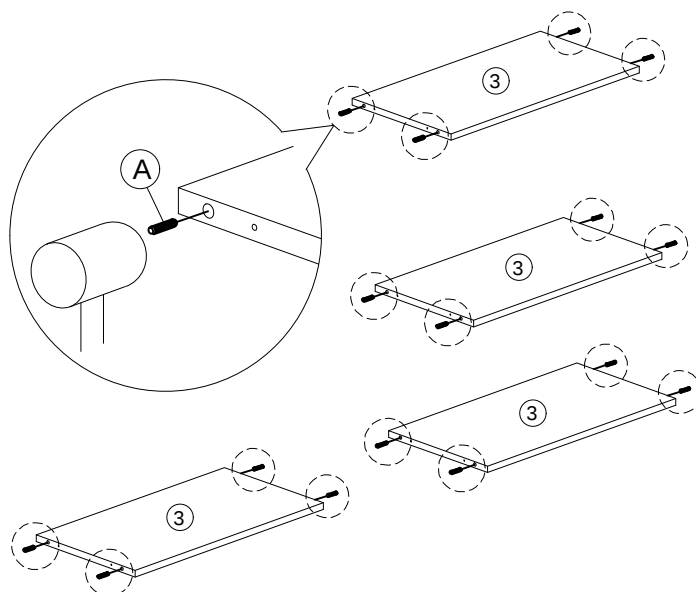

Assembly Instruction


Step 2

B		M4x45mm Screw	8Pcs
E		Sticker	8Pcs

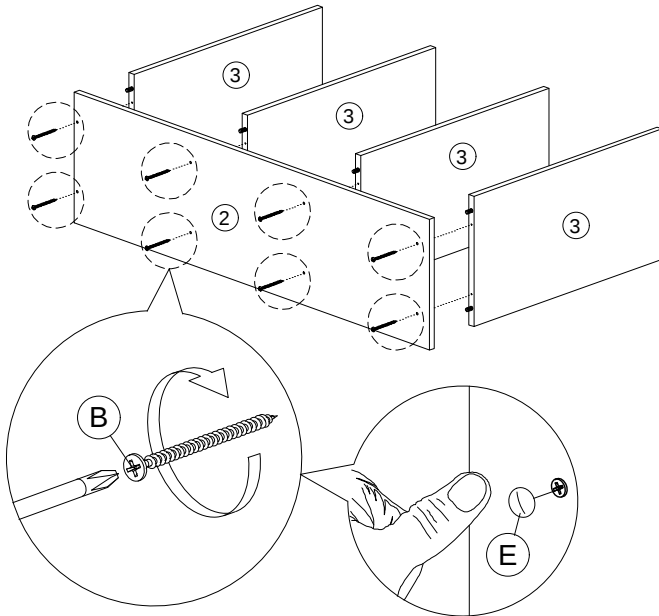


Step 3

B		M4x45mm Screw	8Pcs
E		Sticker	8Pcs

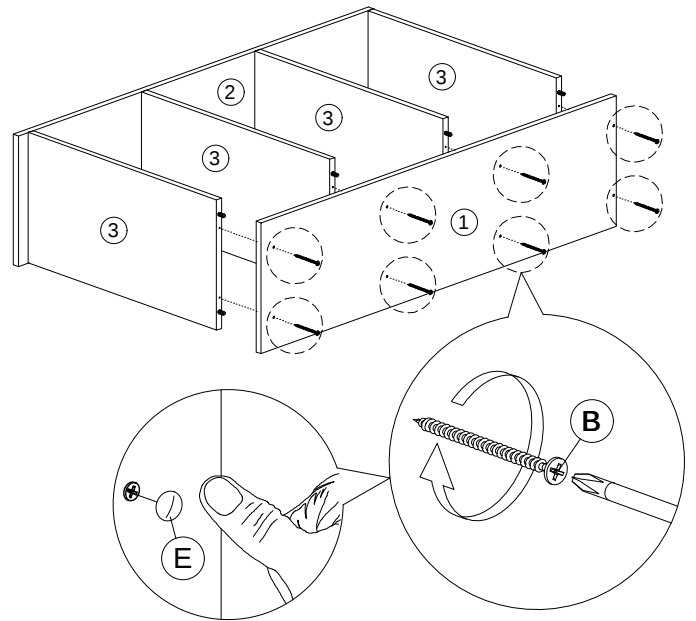

Step 4

D		6/8 Power Pin	30Pcs
---	---	---------------	-------

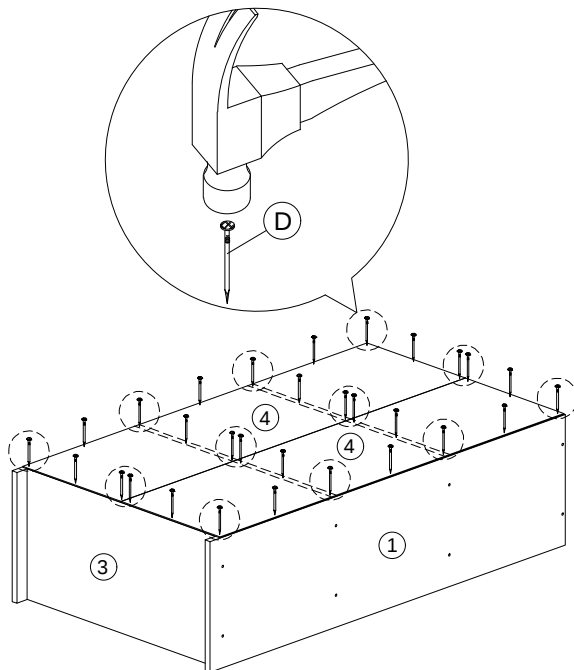

Step 5

C		5/8 Nail With Pin	4Pcs
---	---	-------------------	------

