



POSSINA

Valmor Sofa Bed Assembly Instruction

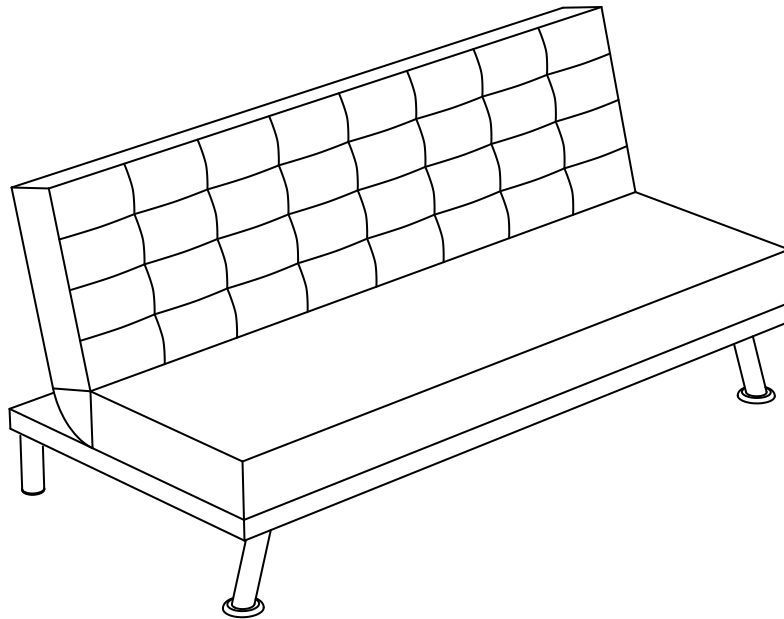





- ⚠ 1. Two or more people are required for assembly.
- 2. To avoid squeaking, please tighten the bolts all the way. An electric drill is recommended for the assembly.
- 3. Professional installation is highly recommended.

PARTS

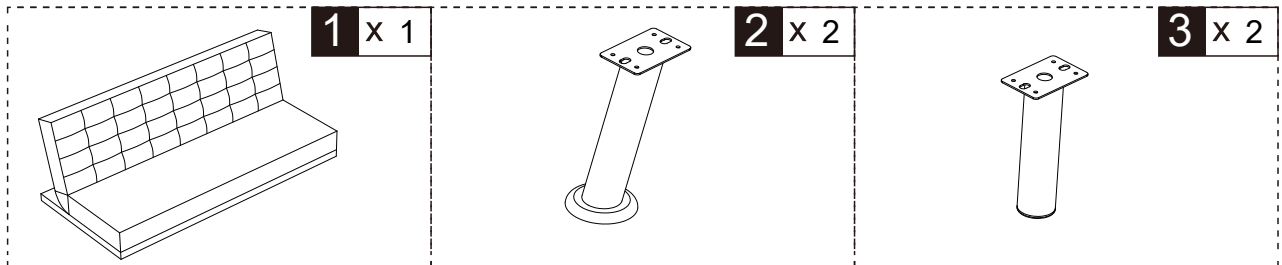


HARDWARE

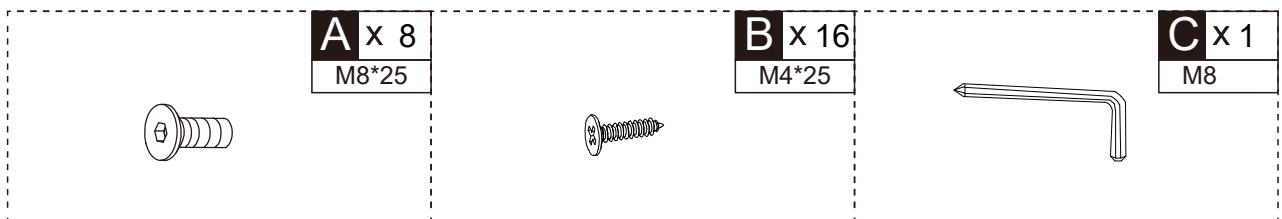

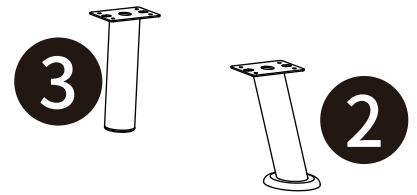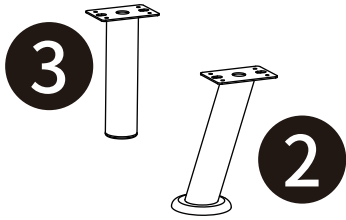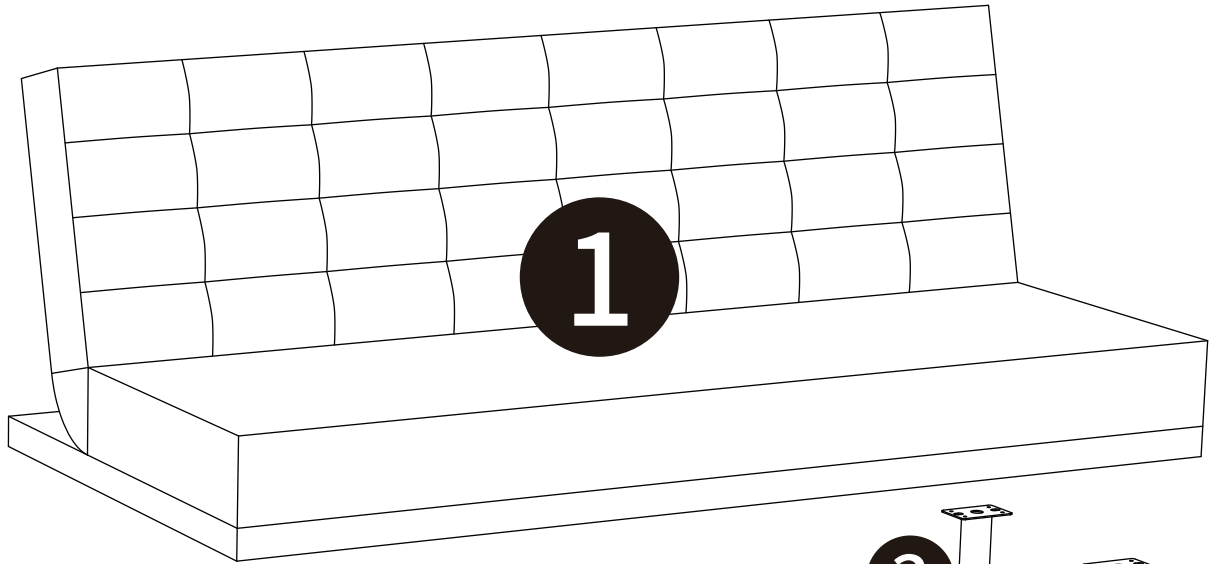

Tips

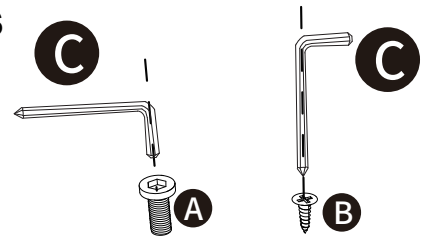

- A x 8
M8*25
- B x 16
M4*25

01

