

PPoliHome



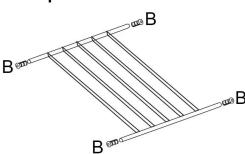


Insert the plastic tox (B) on all 4 tube ends of the bottom rack.

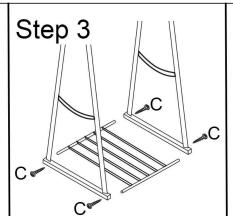


Assemble the bottom rack and the stand base together using "C" screw.

Step 2

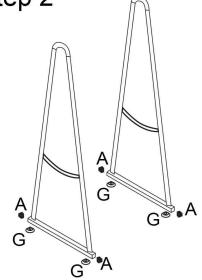


Insert the plastic caps (A) on the open part of the stand base then attach the 4 adjustable footings (G)

Step 4

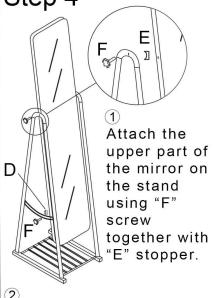

Then attach the lower part of the mirror on the stand brace using "F" screw together with "D" stopper.

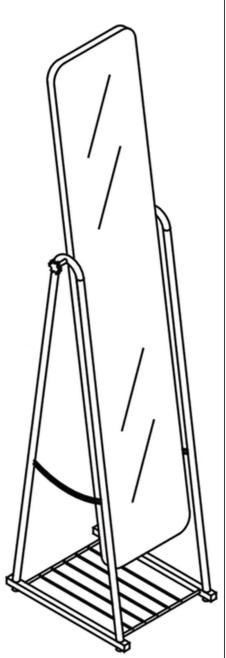

HARDWARE LIST

Α		Plastic Caps	4 pcs	F		Screw Knob	4 pcs
В		Plastic Tox	4 pcs	G		Adjustable Footing	4 pcs
С		Screw	4 pcs				
D	0	Plastic Stopper	2 pcs				
Е		Plastic Stopper	2 pcs				