

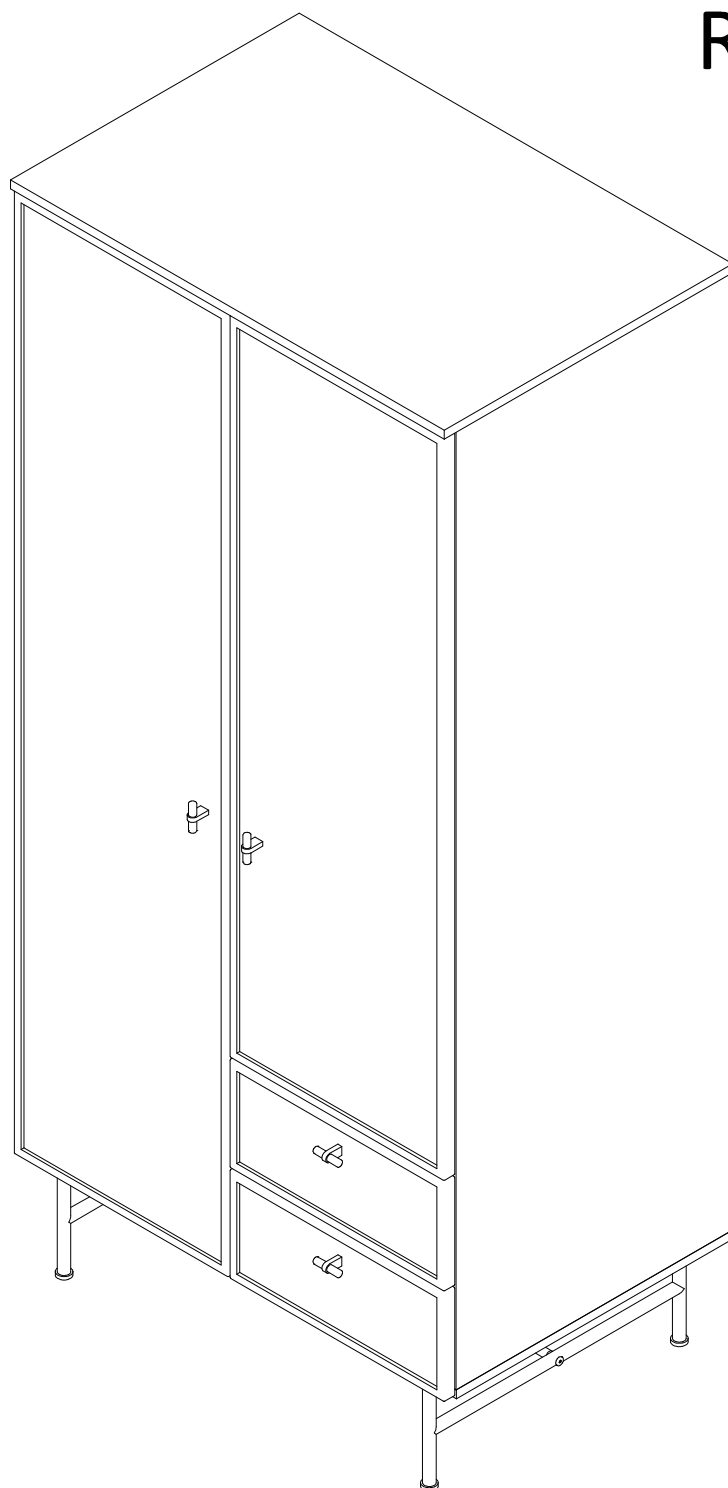
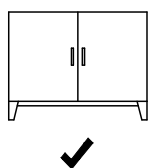
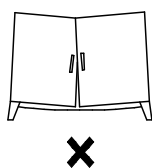
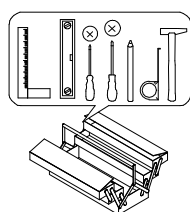
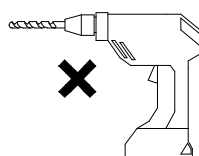
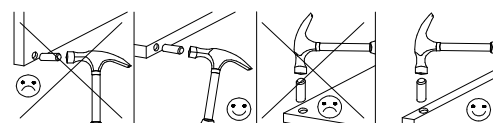
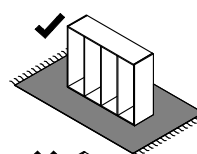
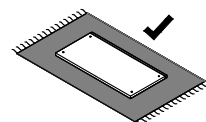
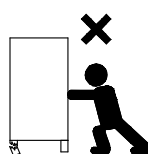
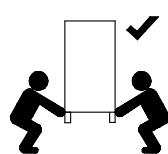
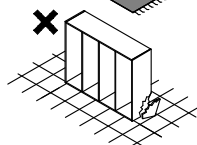

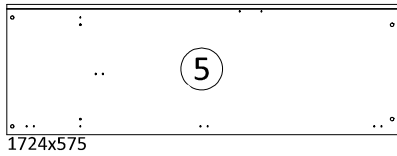
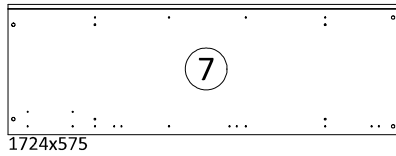
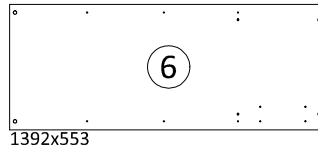
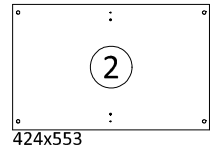
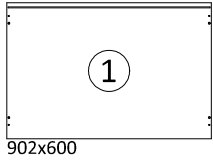
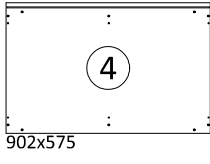


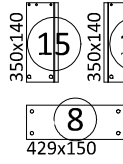

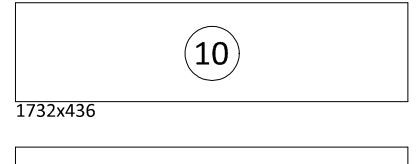
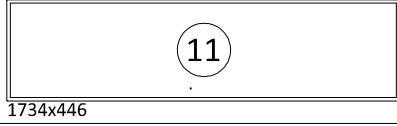
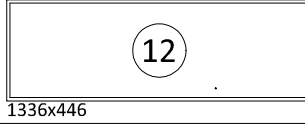

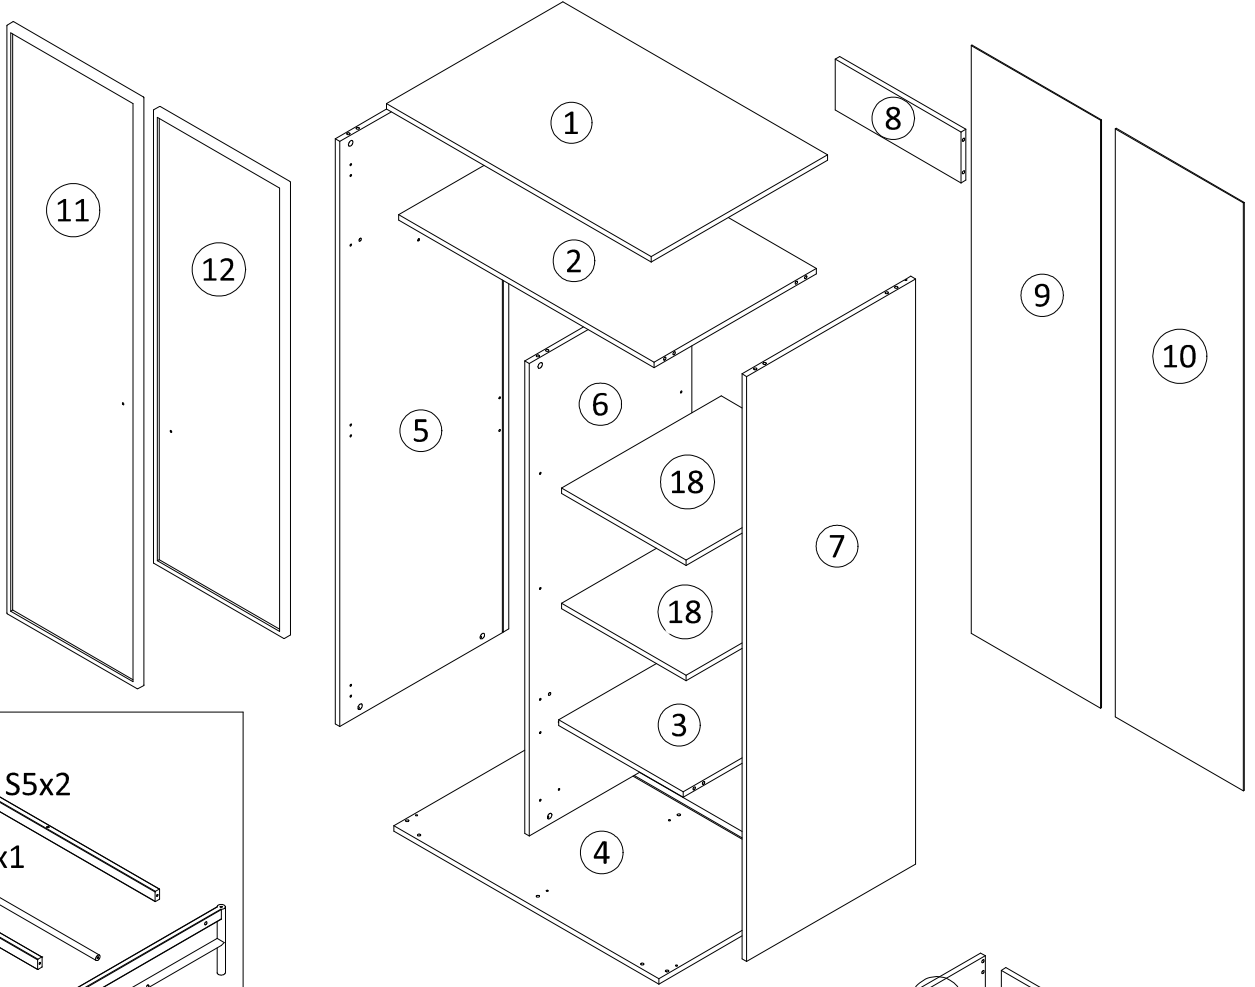
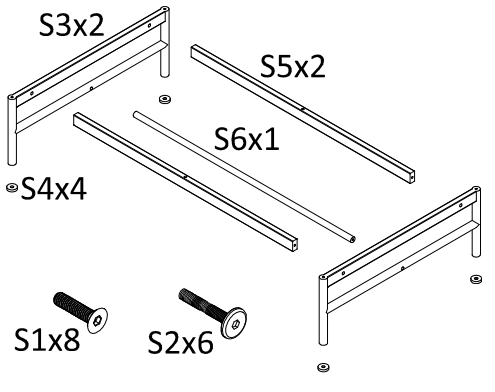
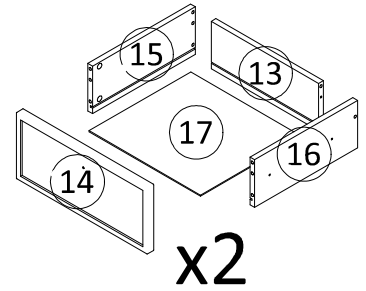
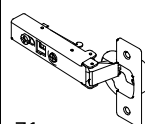
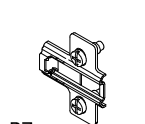
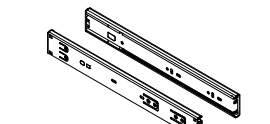
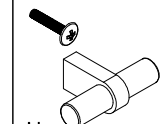


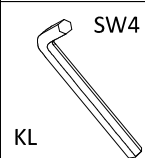
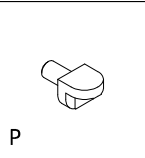
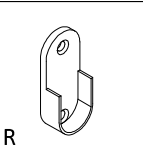
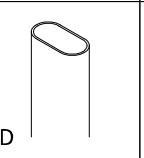
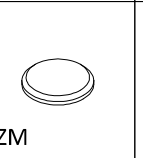
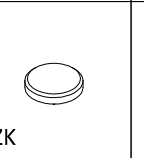
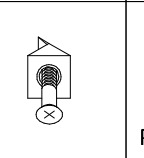
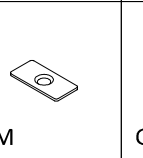
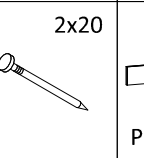
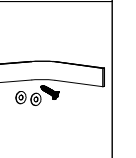




ELORA



R-1








 Z1	 PZ	 2x PK-L-H45-350-B	 U
6x	6x		4x
 H	 E1	 E2	 W1
1x	8x	8x	14x
 KL	 P	 R	 D
1x	8x	2x	1x
			 ZM
			 ZK
			 W2
			 W7
			 KF
			 K
			 M
			 T
			 SW4
			 PM
			 G
			 PS
			 L20,3



1

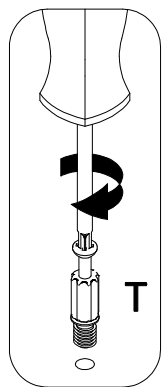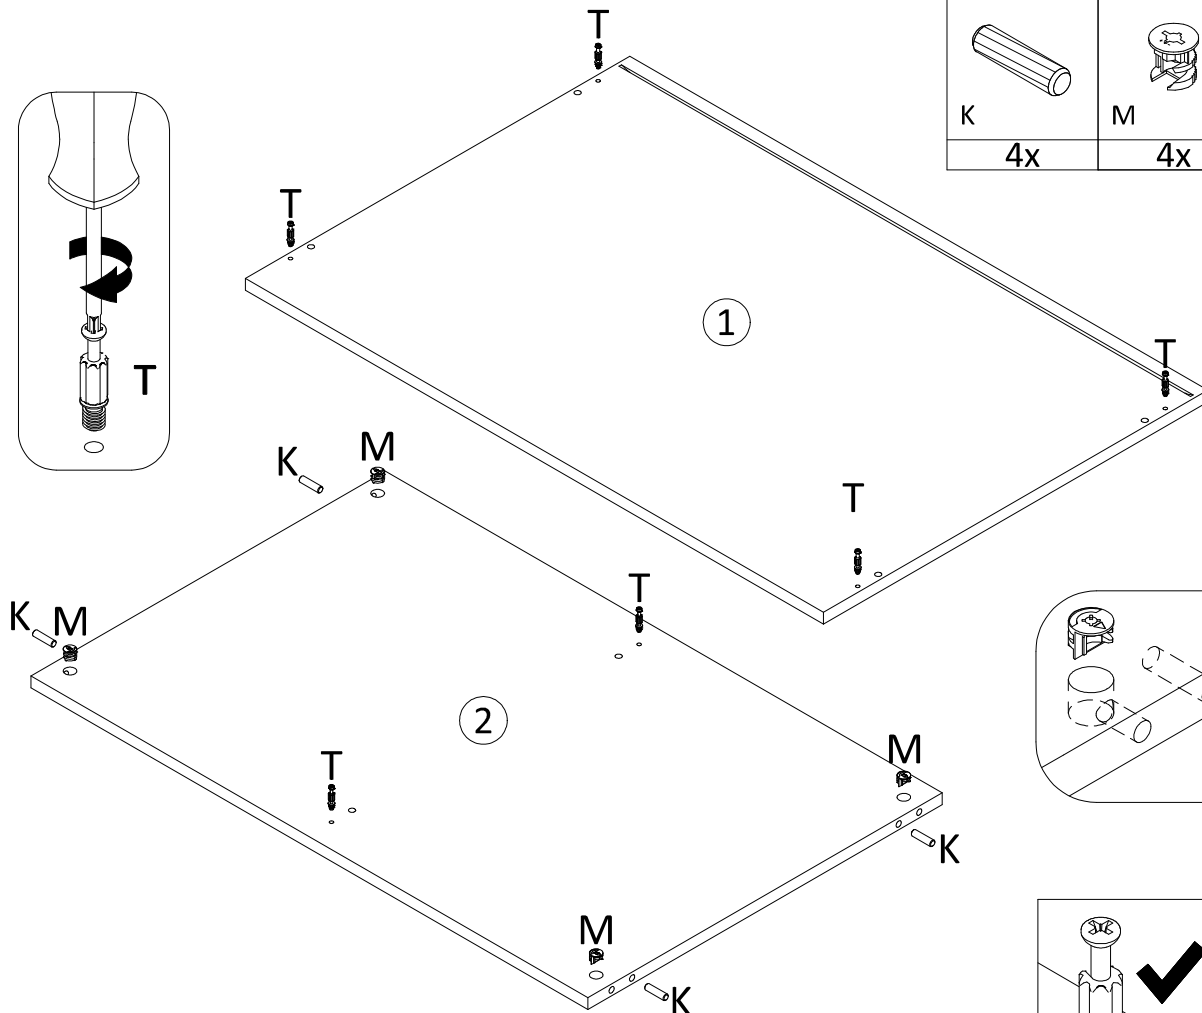




		
K	M	T
4x	4x	6x

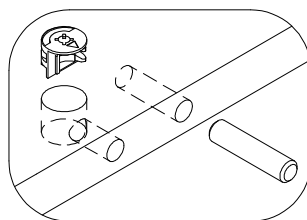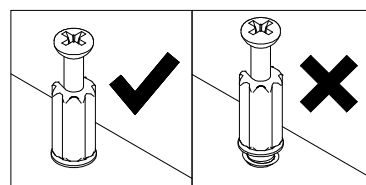

2

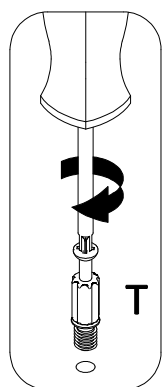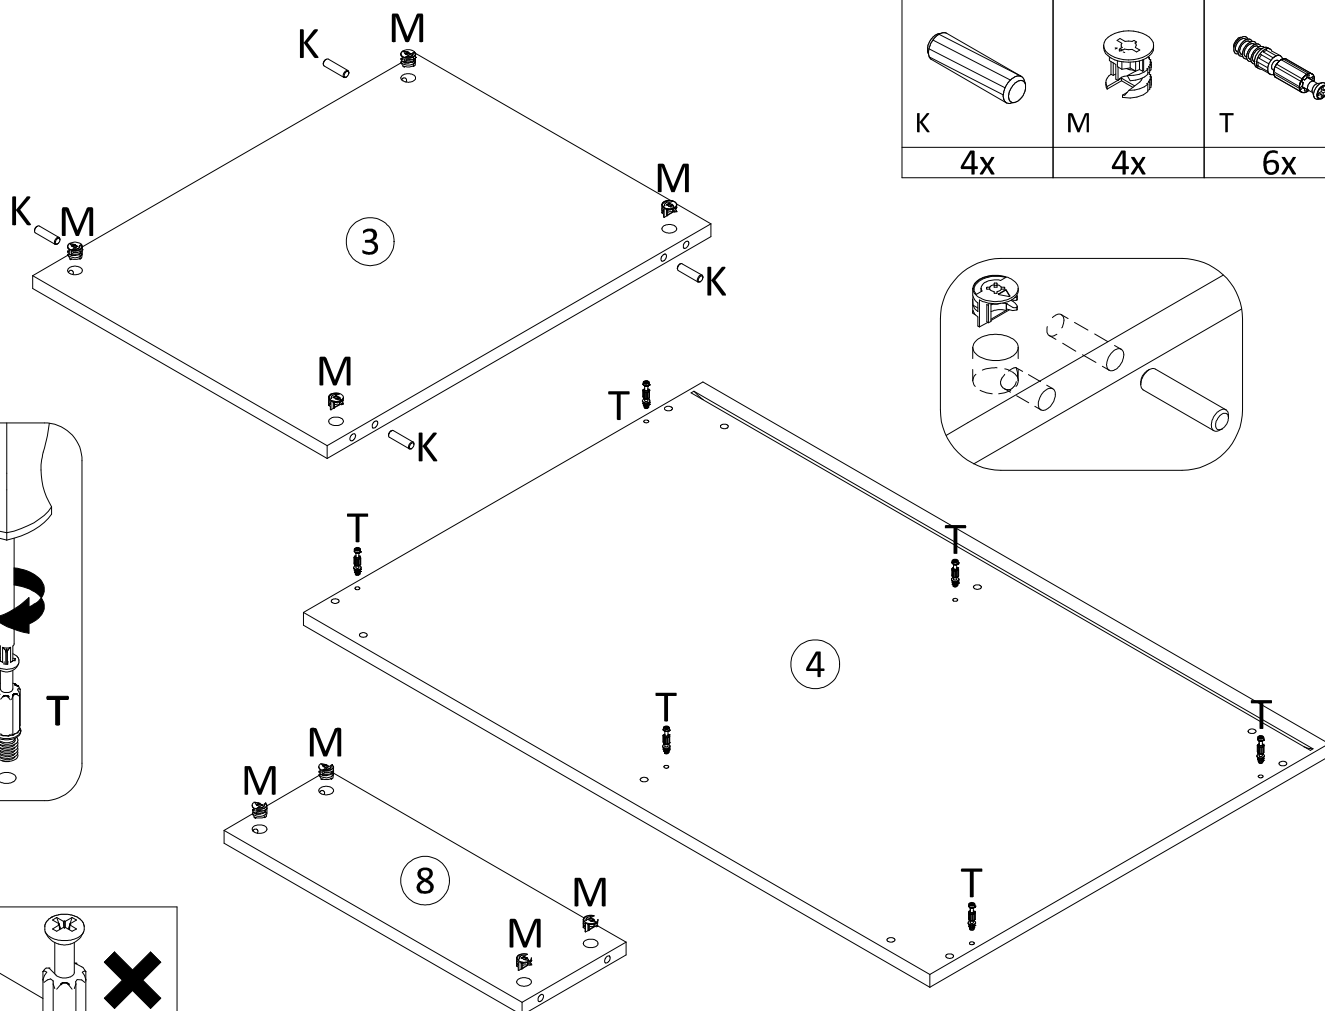

		
K	M	T
4x	4x	6x

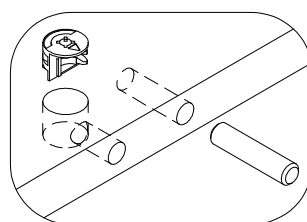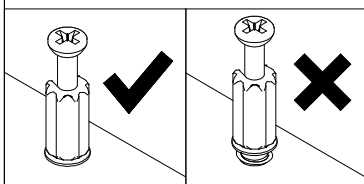

3

K M

PZ

T

R

5

PZ

T

T

M

K

PZ

M

K

W2

R

R	T	M	K
1x	4x	4x	4x
		PZ	W2
		3x	2x

Kleiderständer

4

Diagram illustrating the assembly of a panel (6) using various fasteners. The panel is shown with dimensions and fastener locations.


Fastener Legend:

- W2:** 2x (Screws)
- R:** 1x (Bracket)
- T:** 2x (Screws)
- K:** 4x (Screws)


Assembly Instructions:

- Panel (6) is shown with dimensions 1000mm x 1000mm.
- Fasteners are installed at the corners and along the edges of the panel.
- Diagram shows the correct installation of fasteners (W2, R, T, K) into the panel.
- Diagram shows the correct installation of fasteners (W2, R) into the panel.
- Diagram shows the correct installation of fasteners (W2, R) into the panel.


5

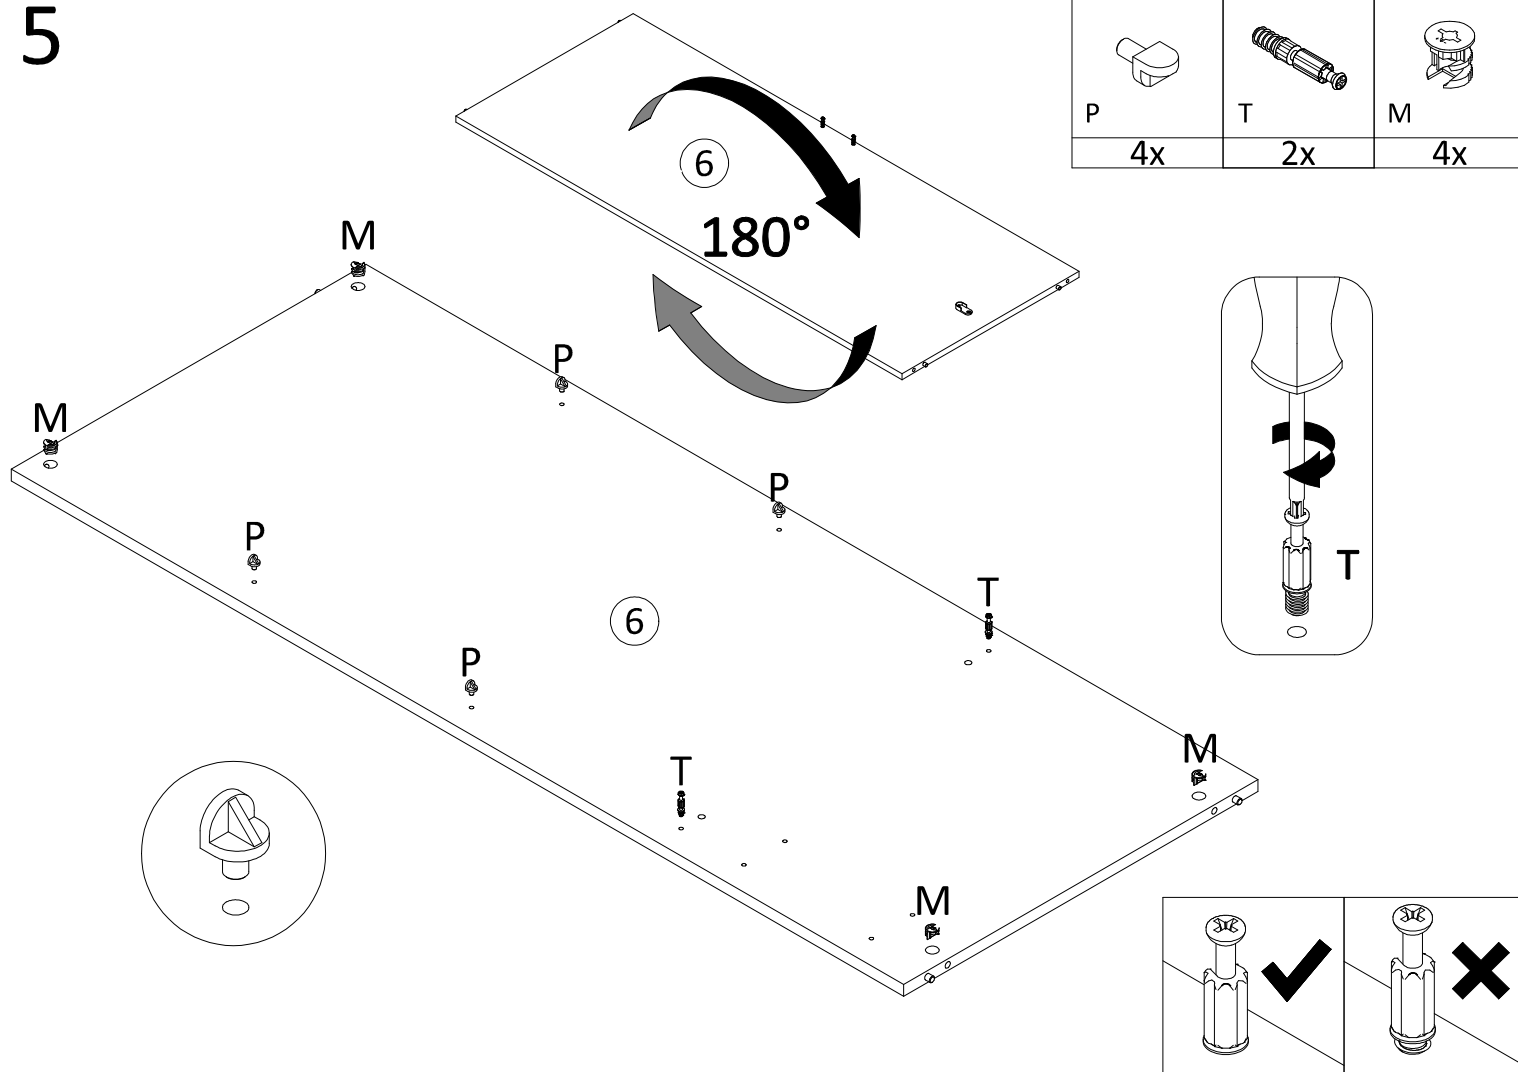


6

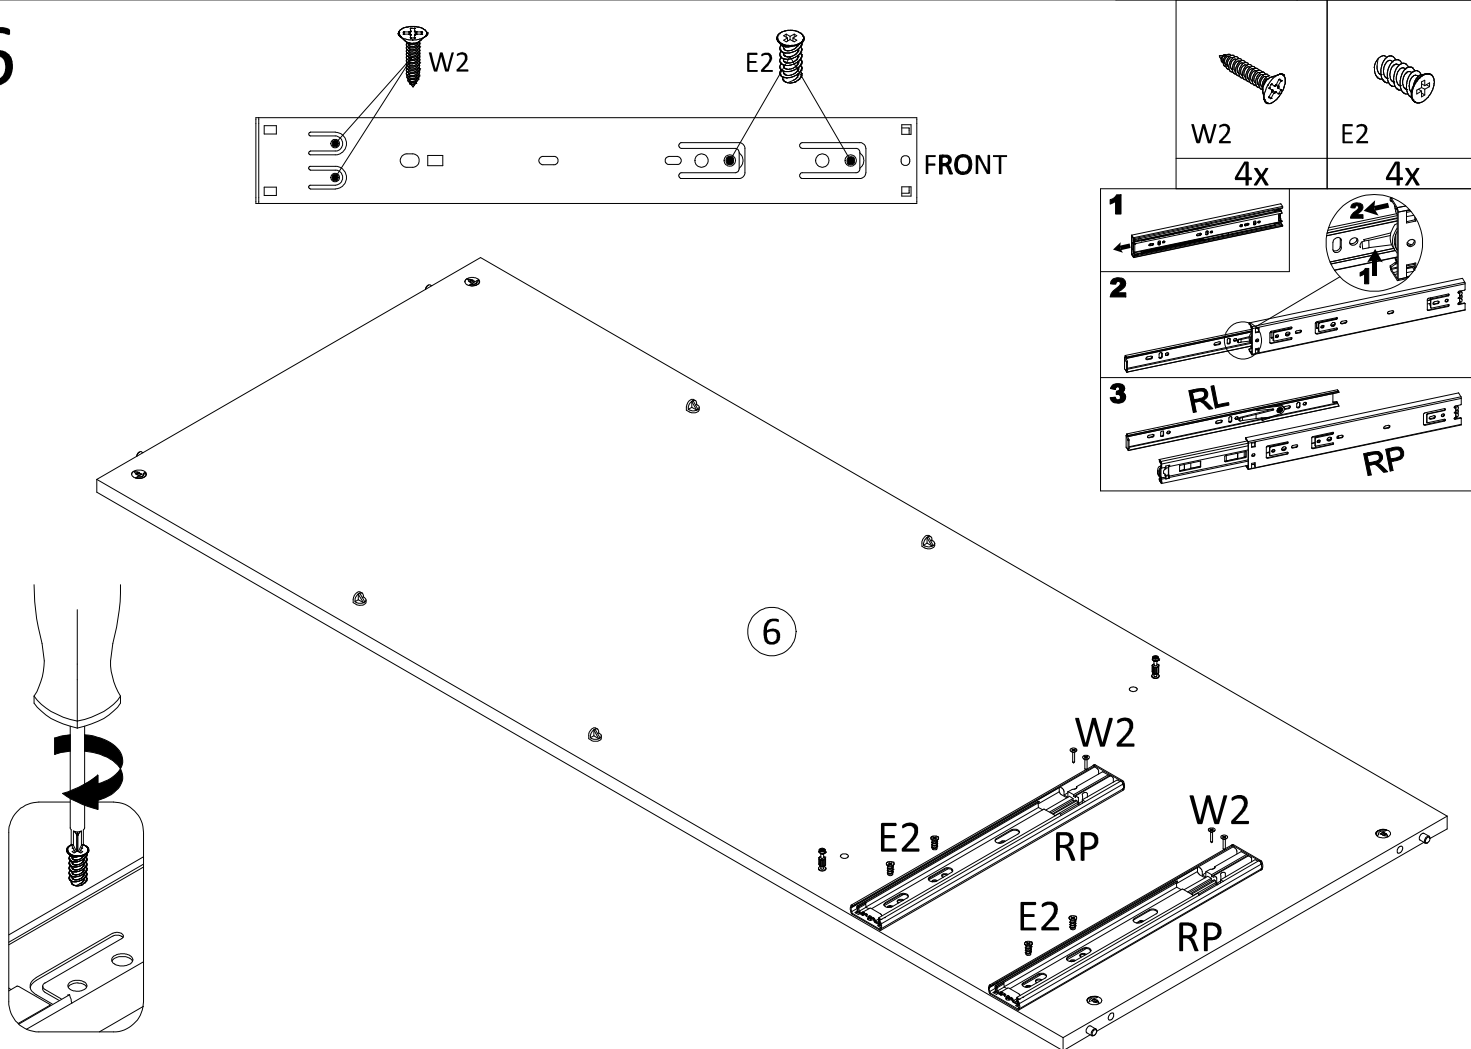


8

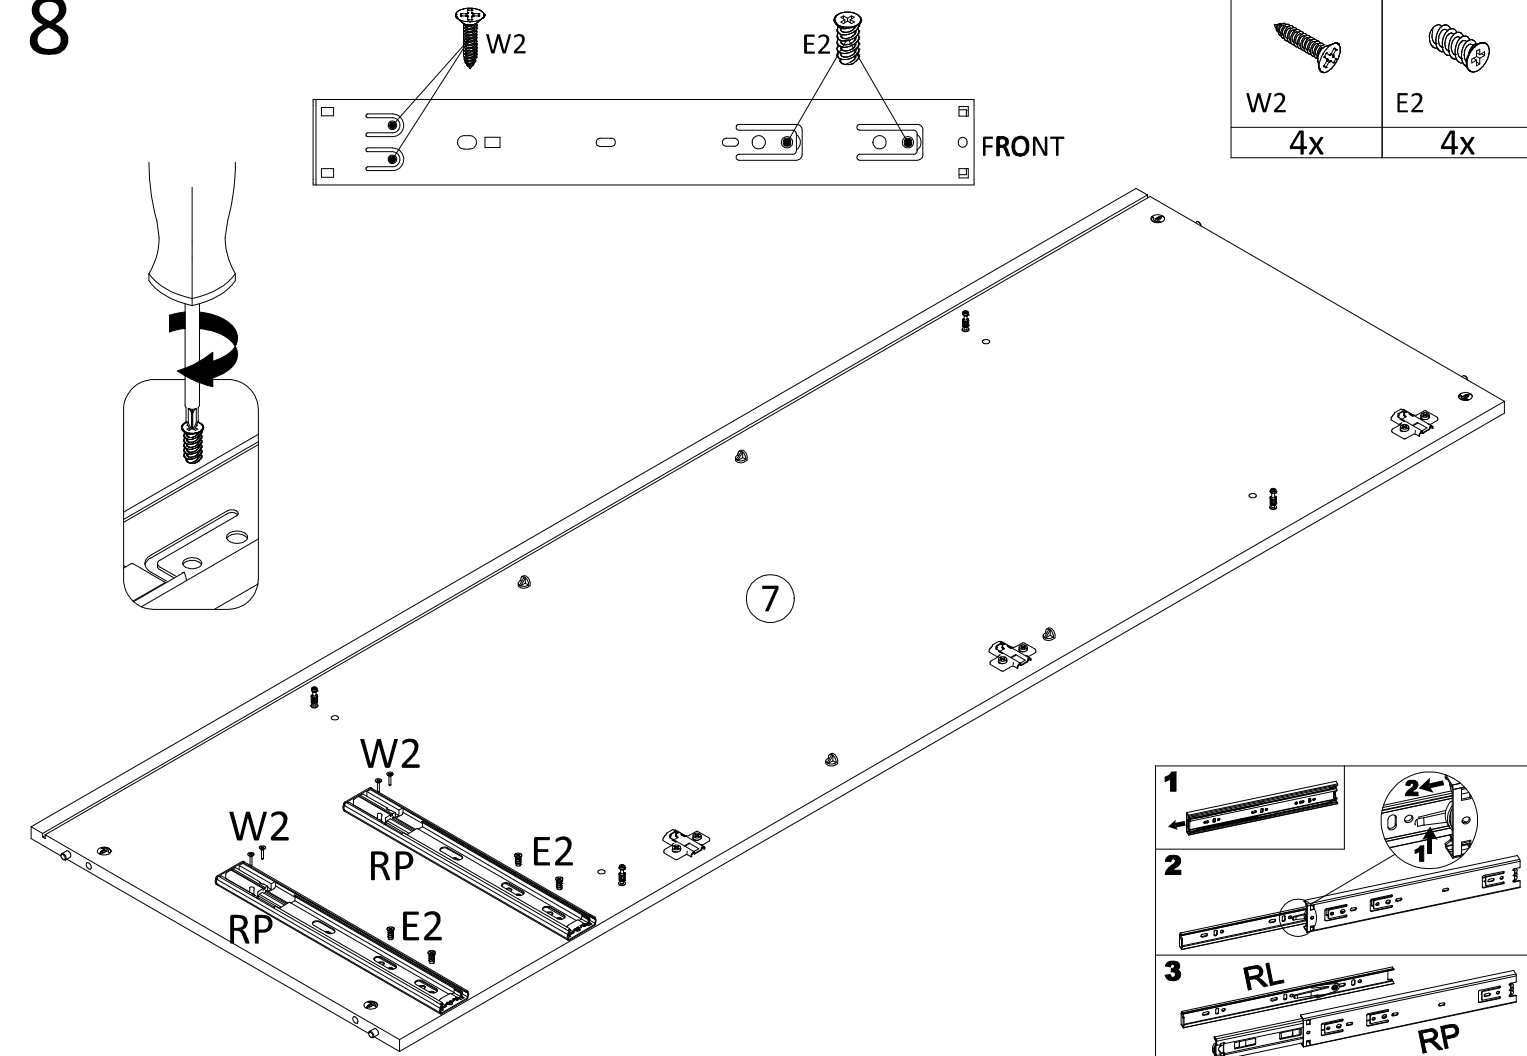


9

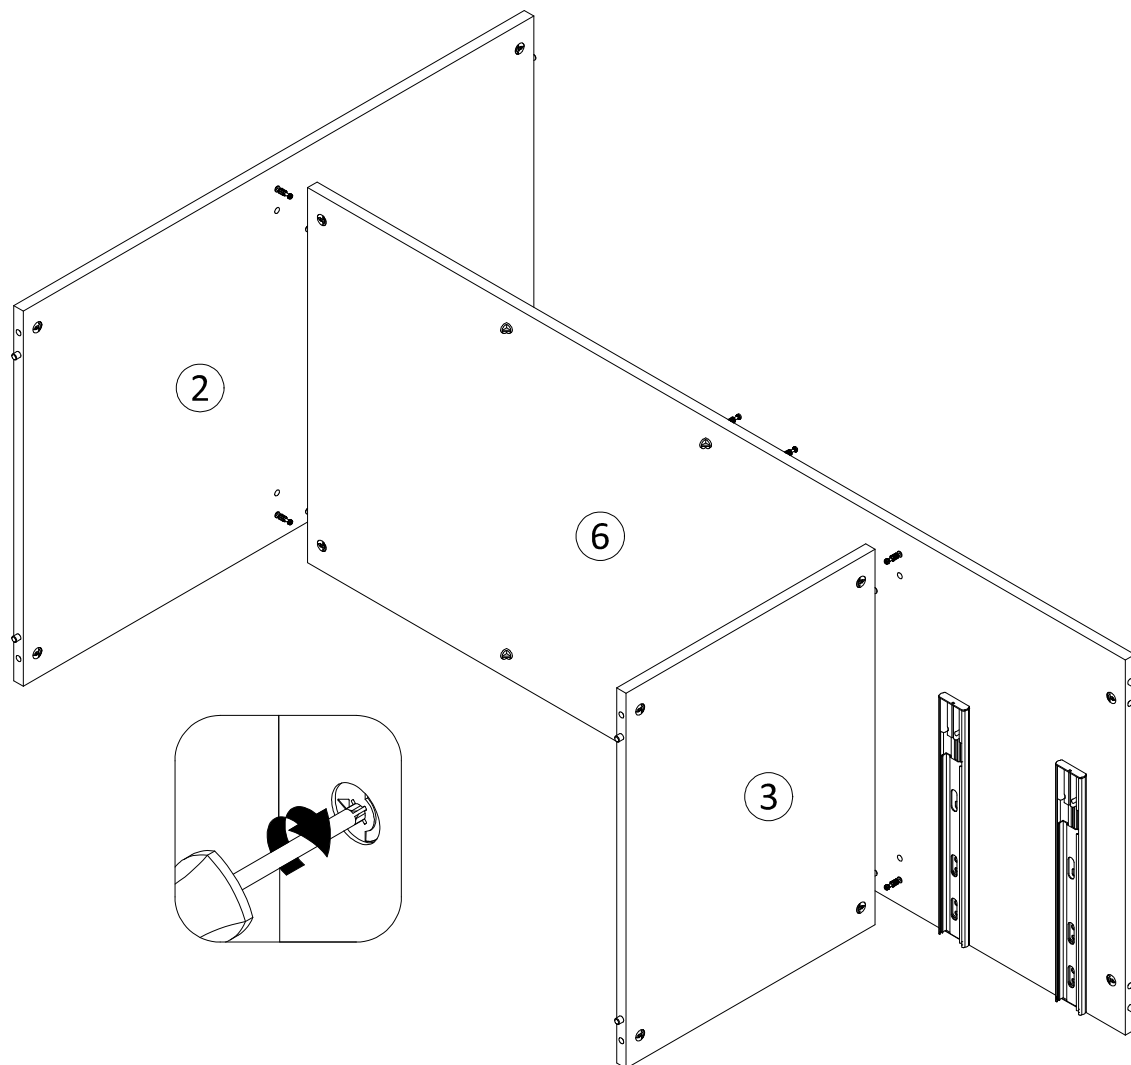


10

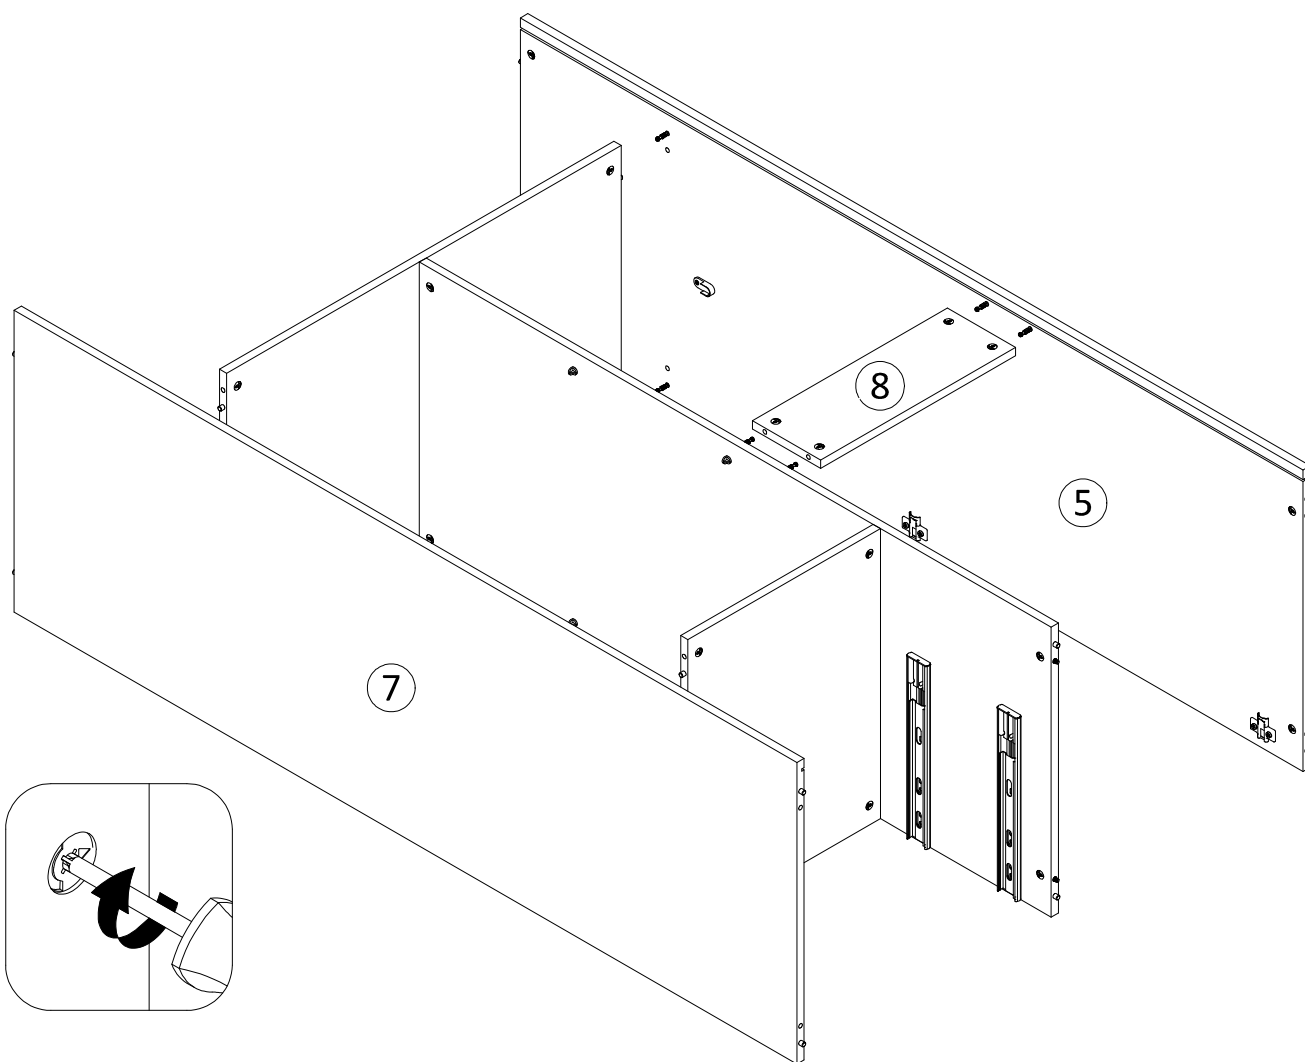


11

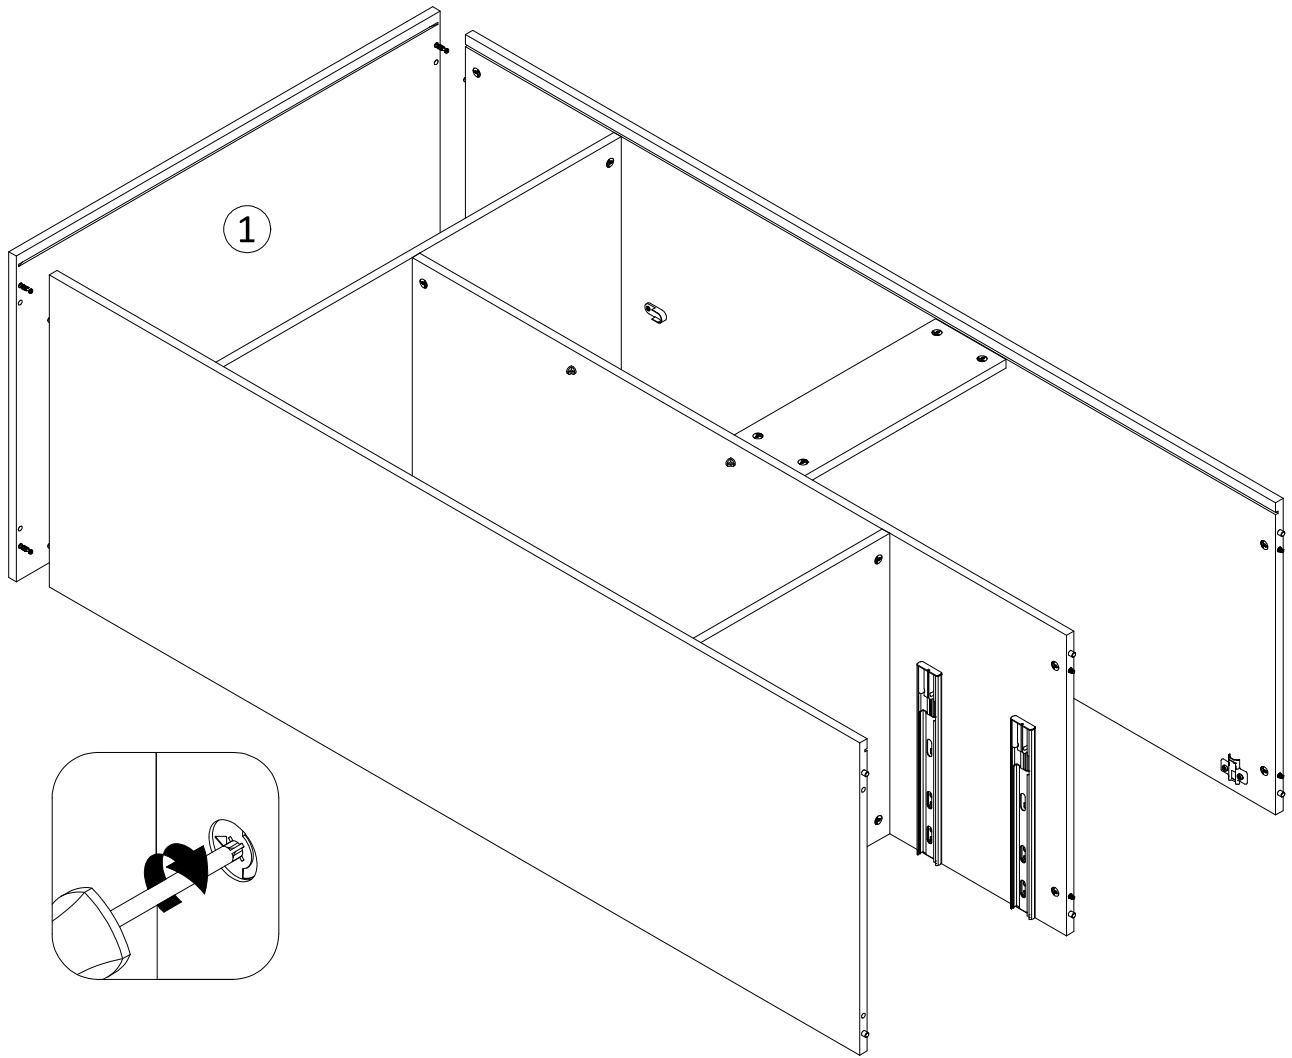




12

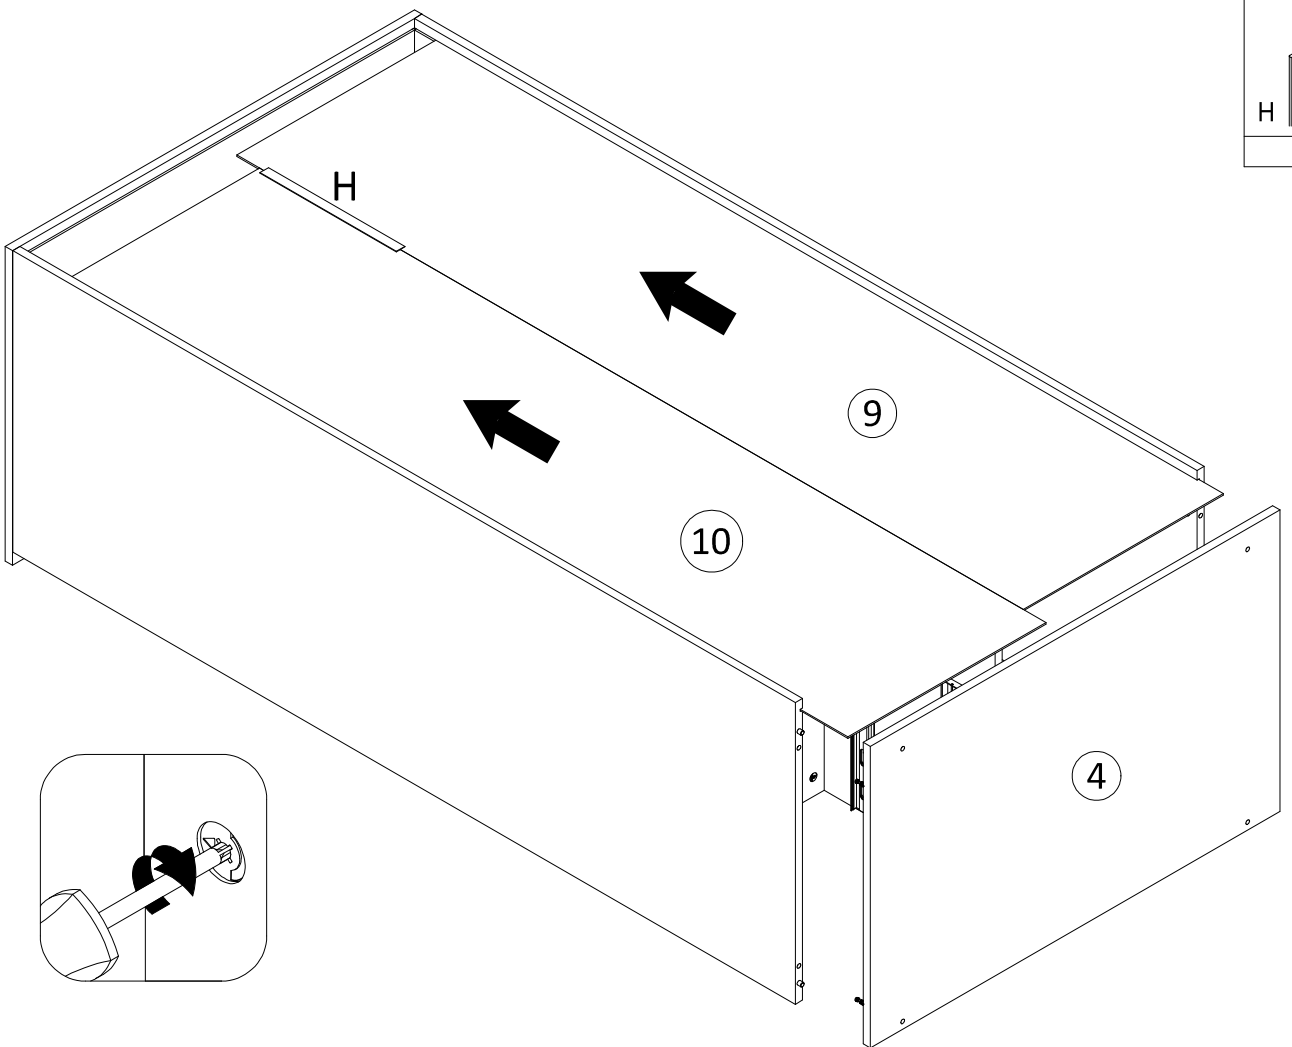


13


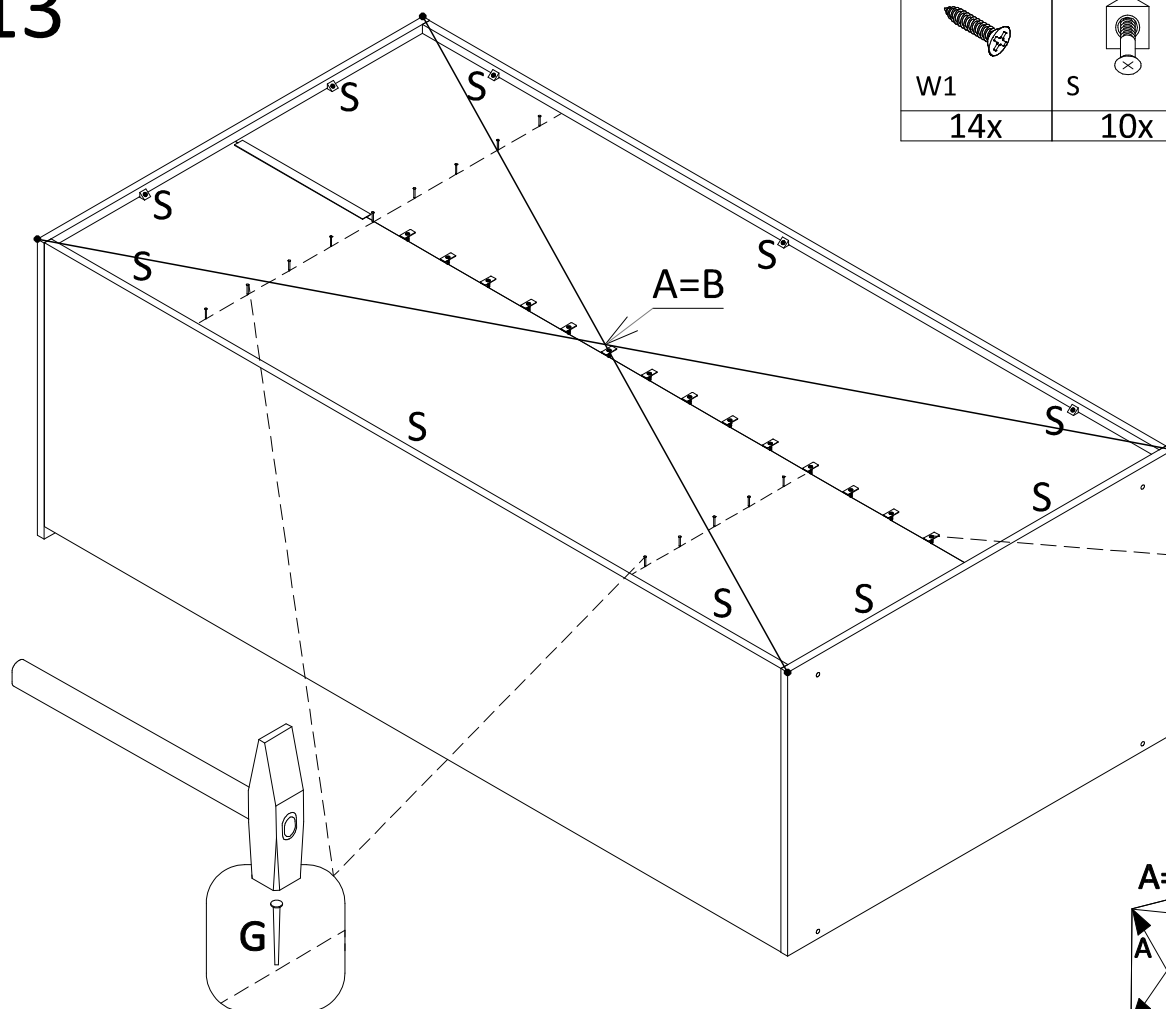



			
W1	S	PM	G
14x	10x	14x	14x

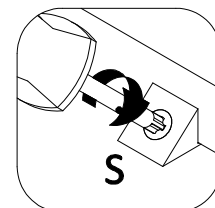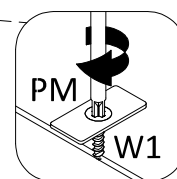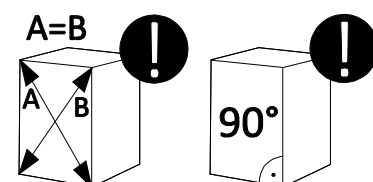


14

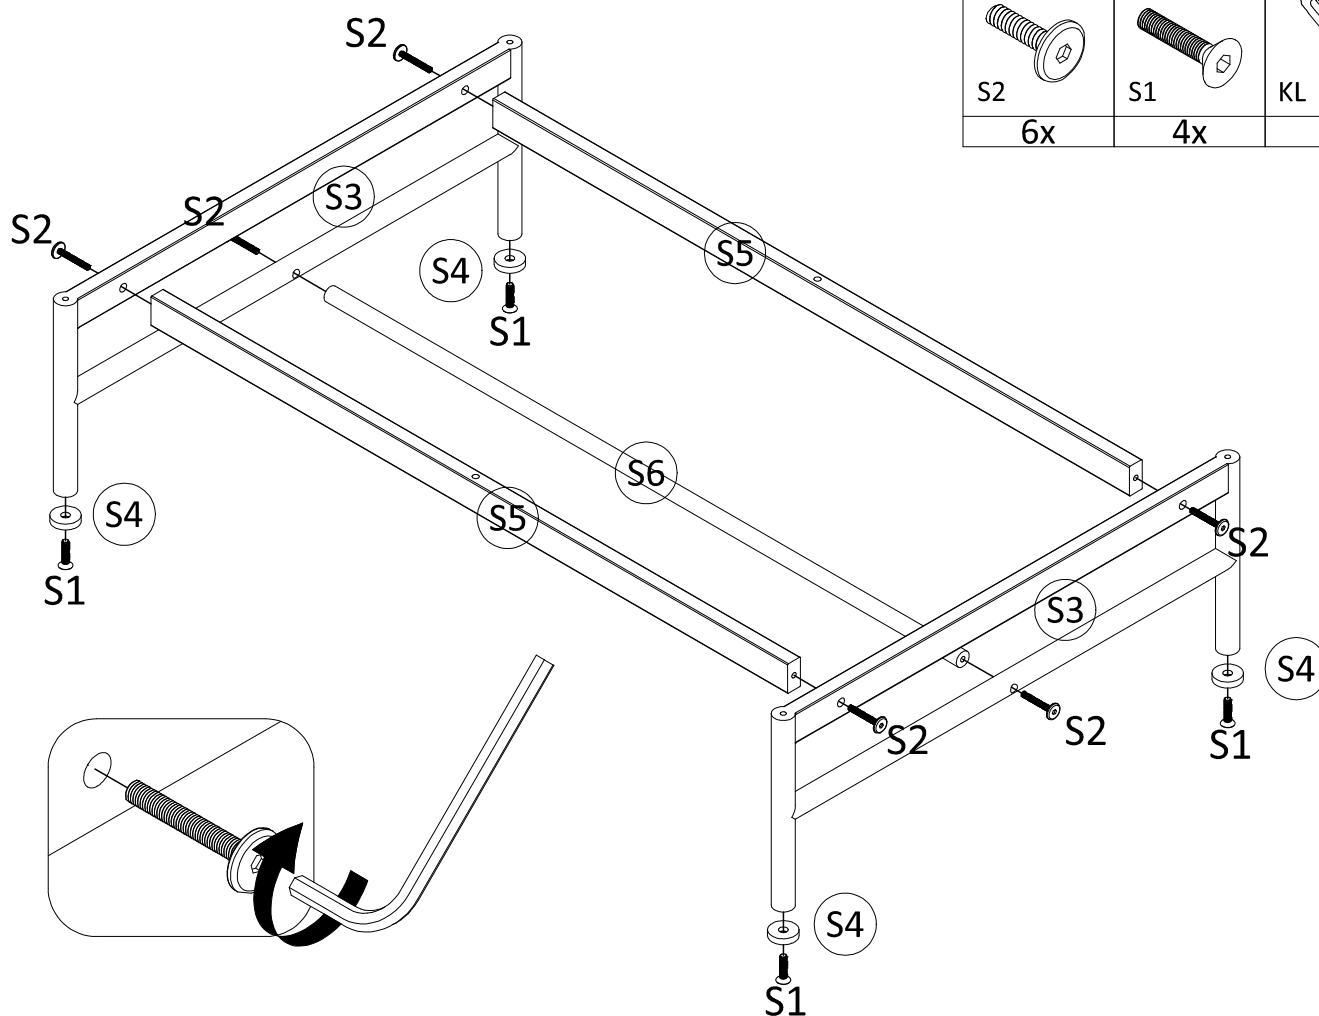


		
S2	S1	KL
6x	4x	1x

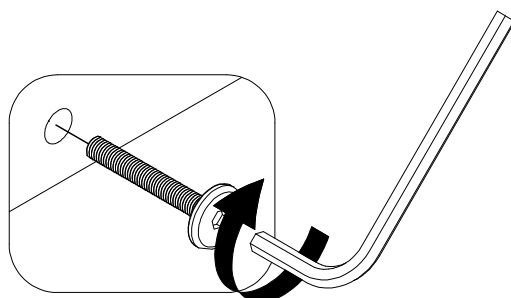



15

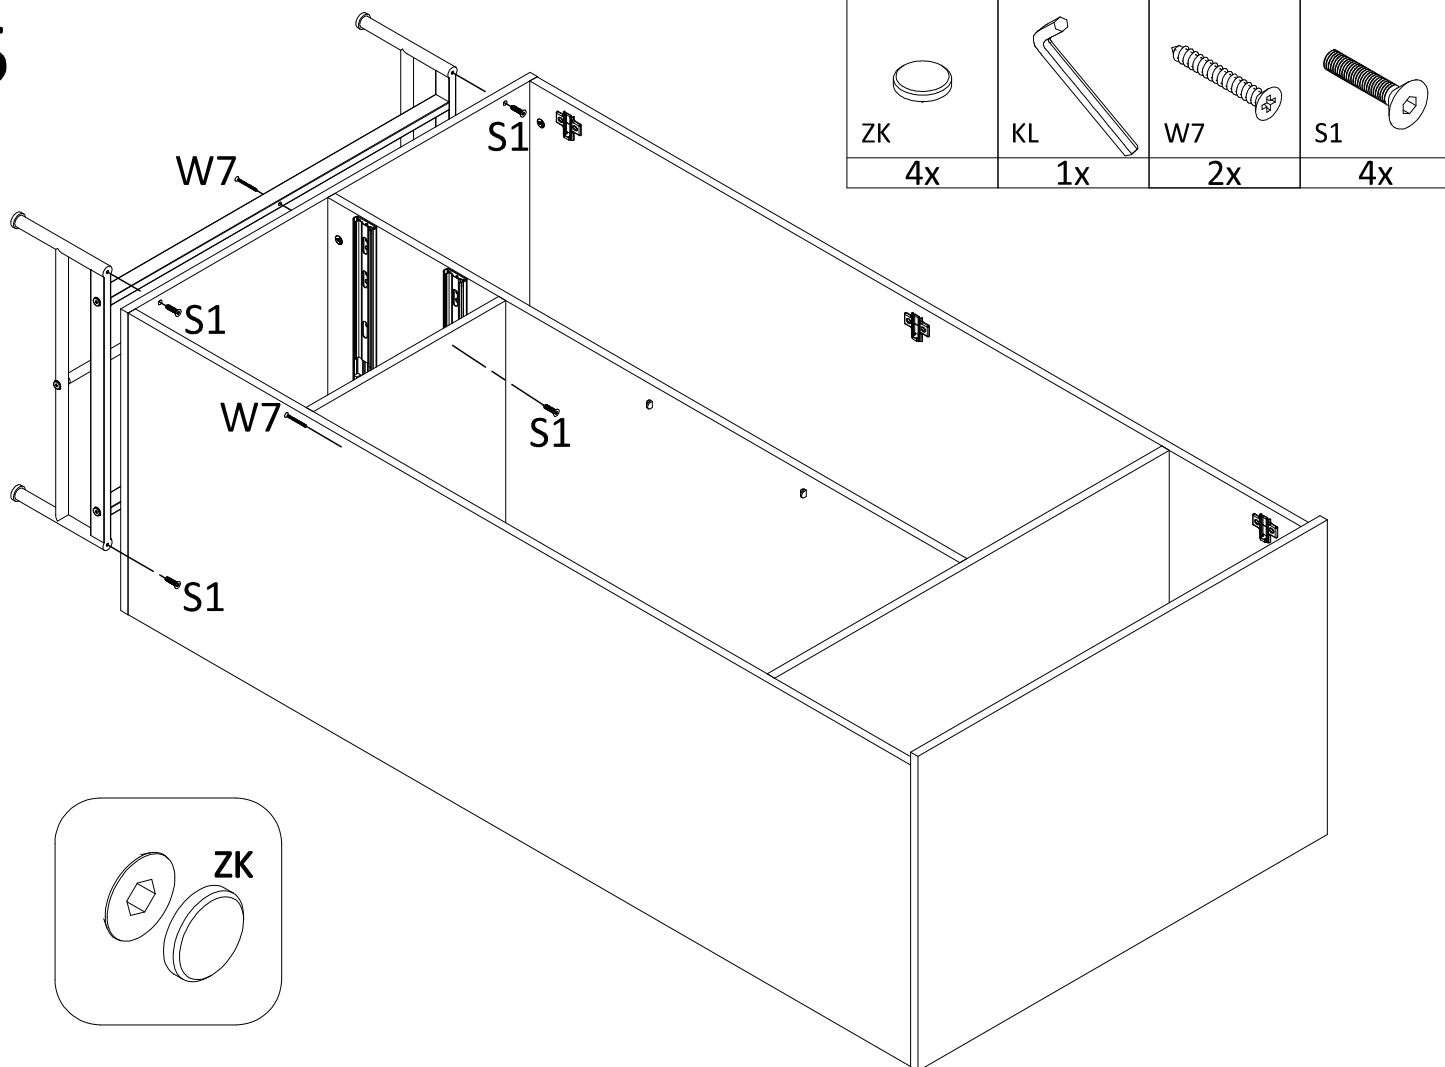


16


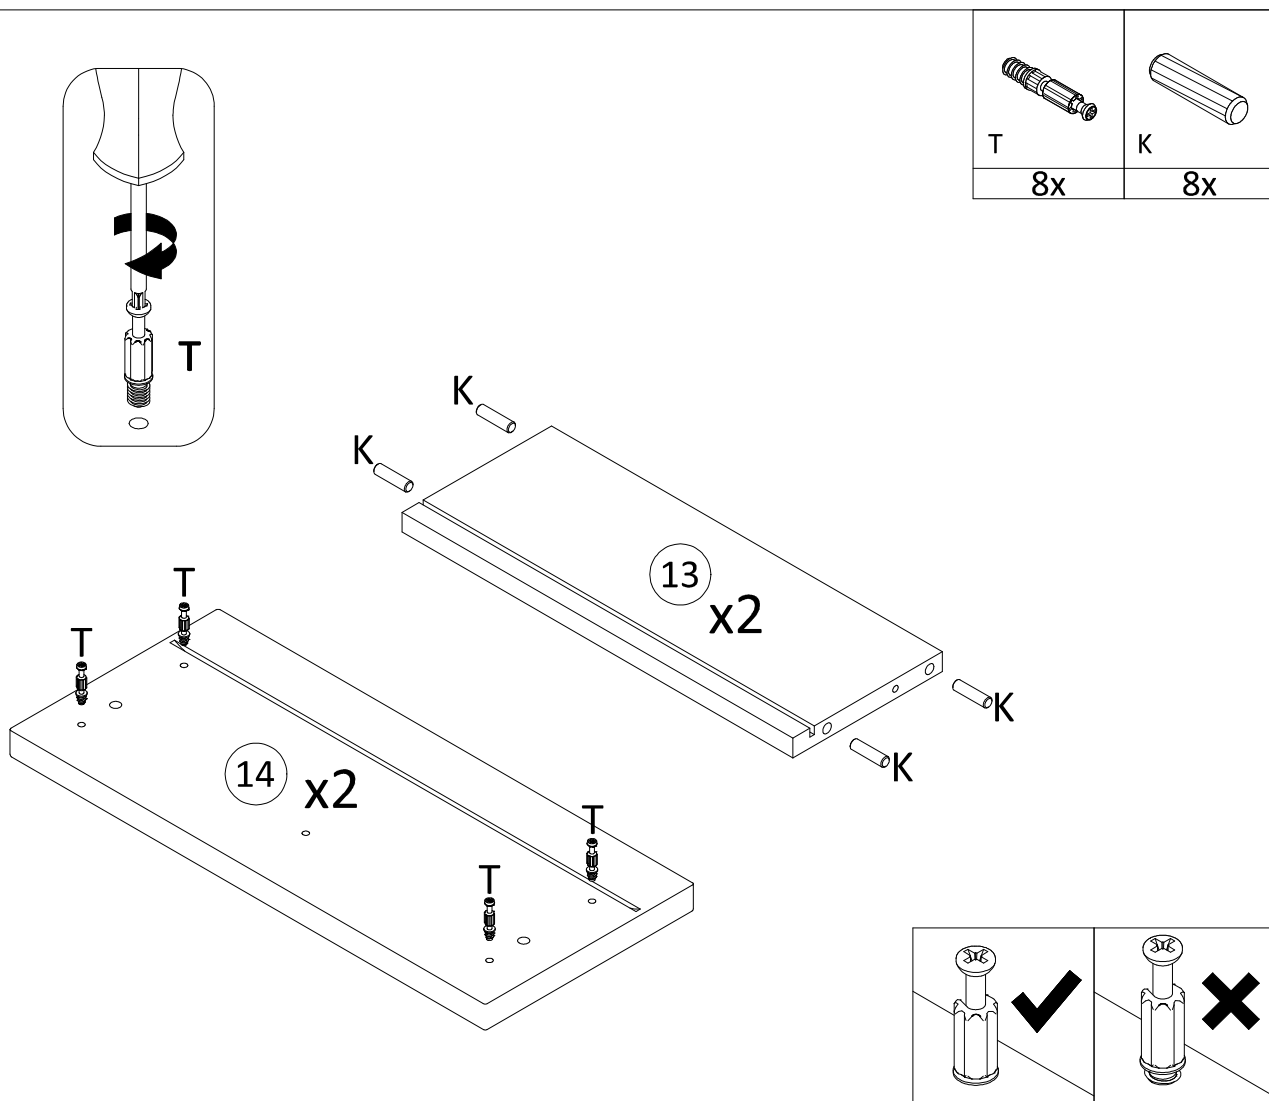




17

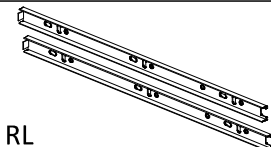			
RL	E1	M	K
2x	8x	8x	4x

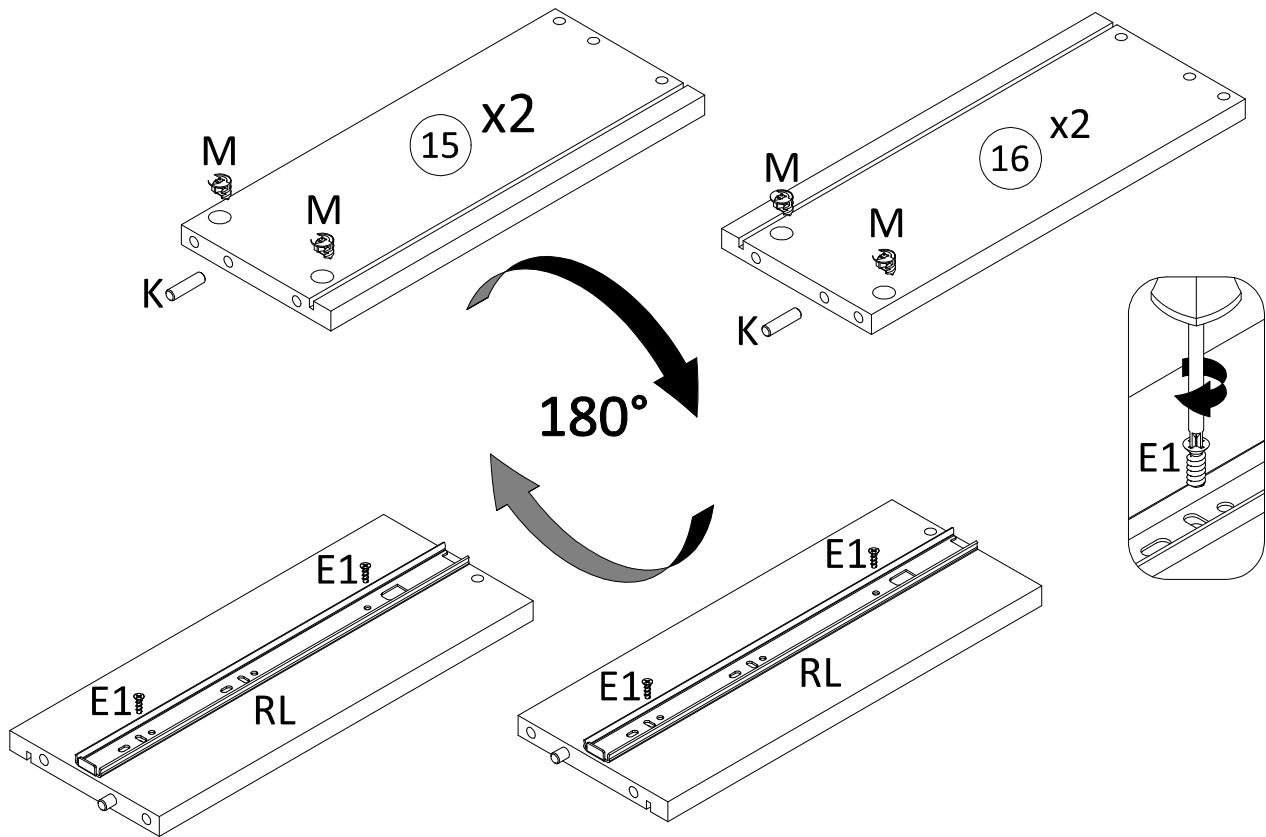


18

	
KF	KL
4x	1x

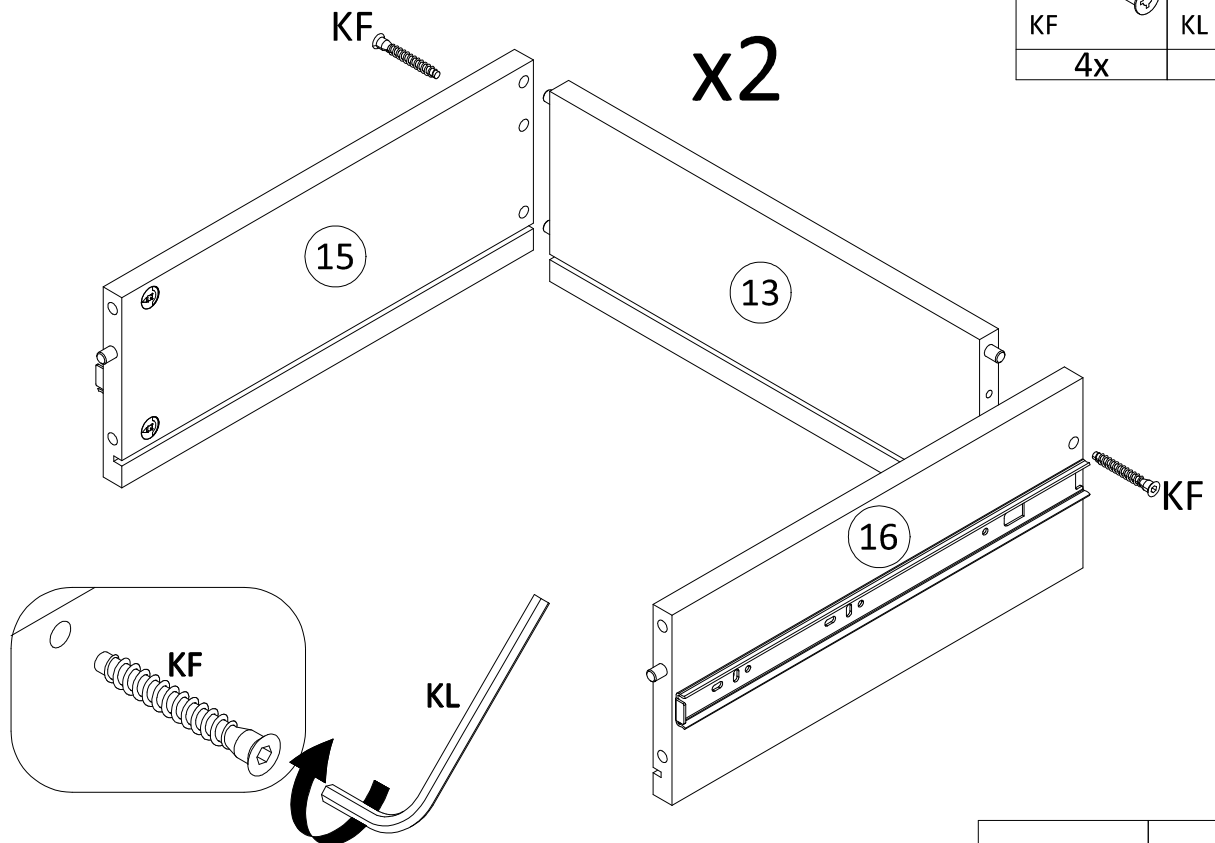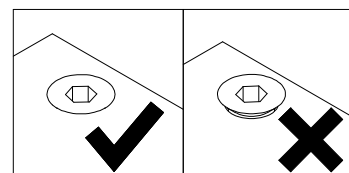

19

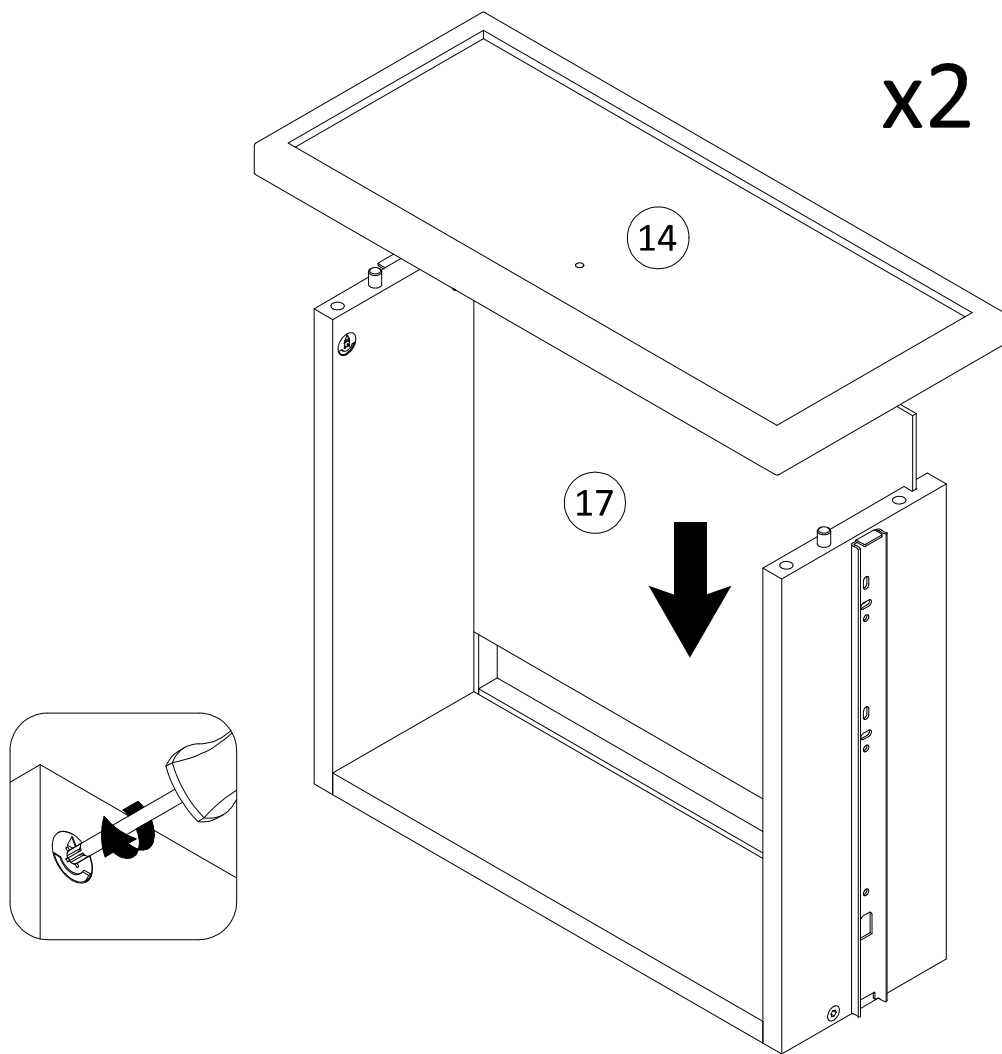



x2

14

17

20

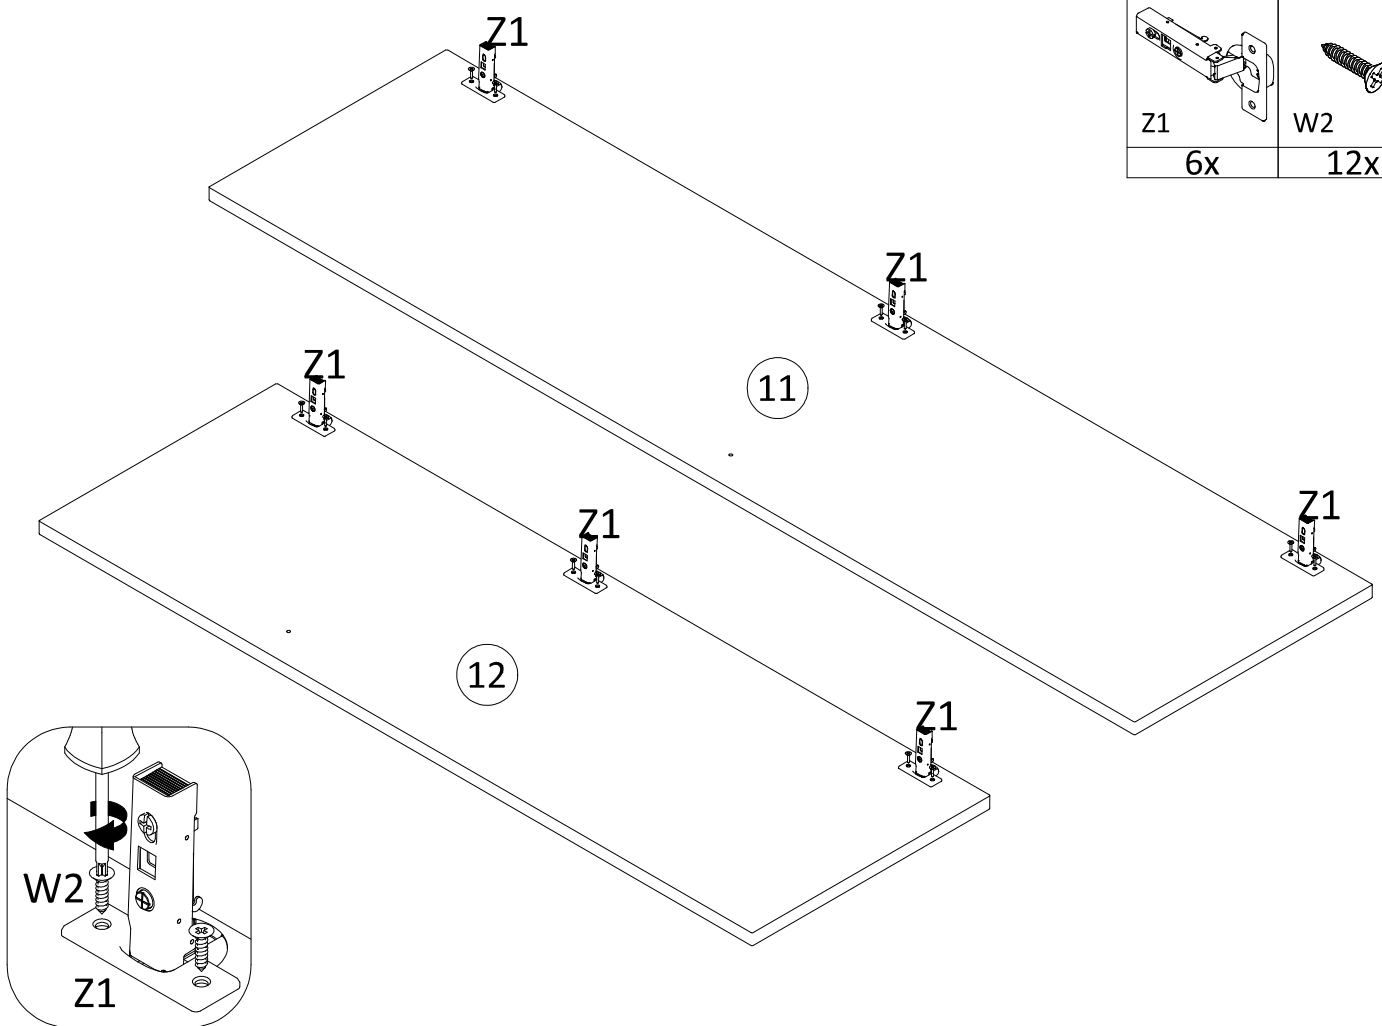

	
Z1	W2
6x	12x

Z1

Z1

Z1

Z1

Z1

Z1


11

12


W2

Z1




21

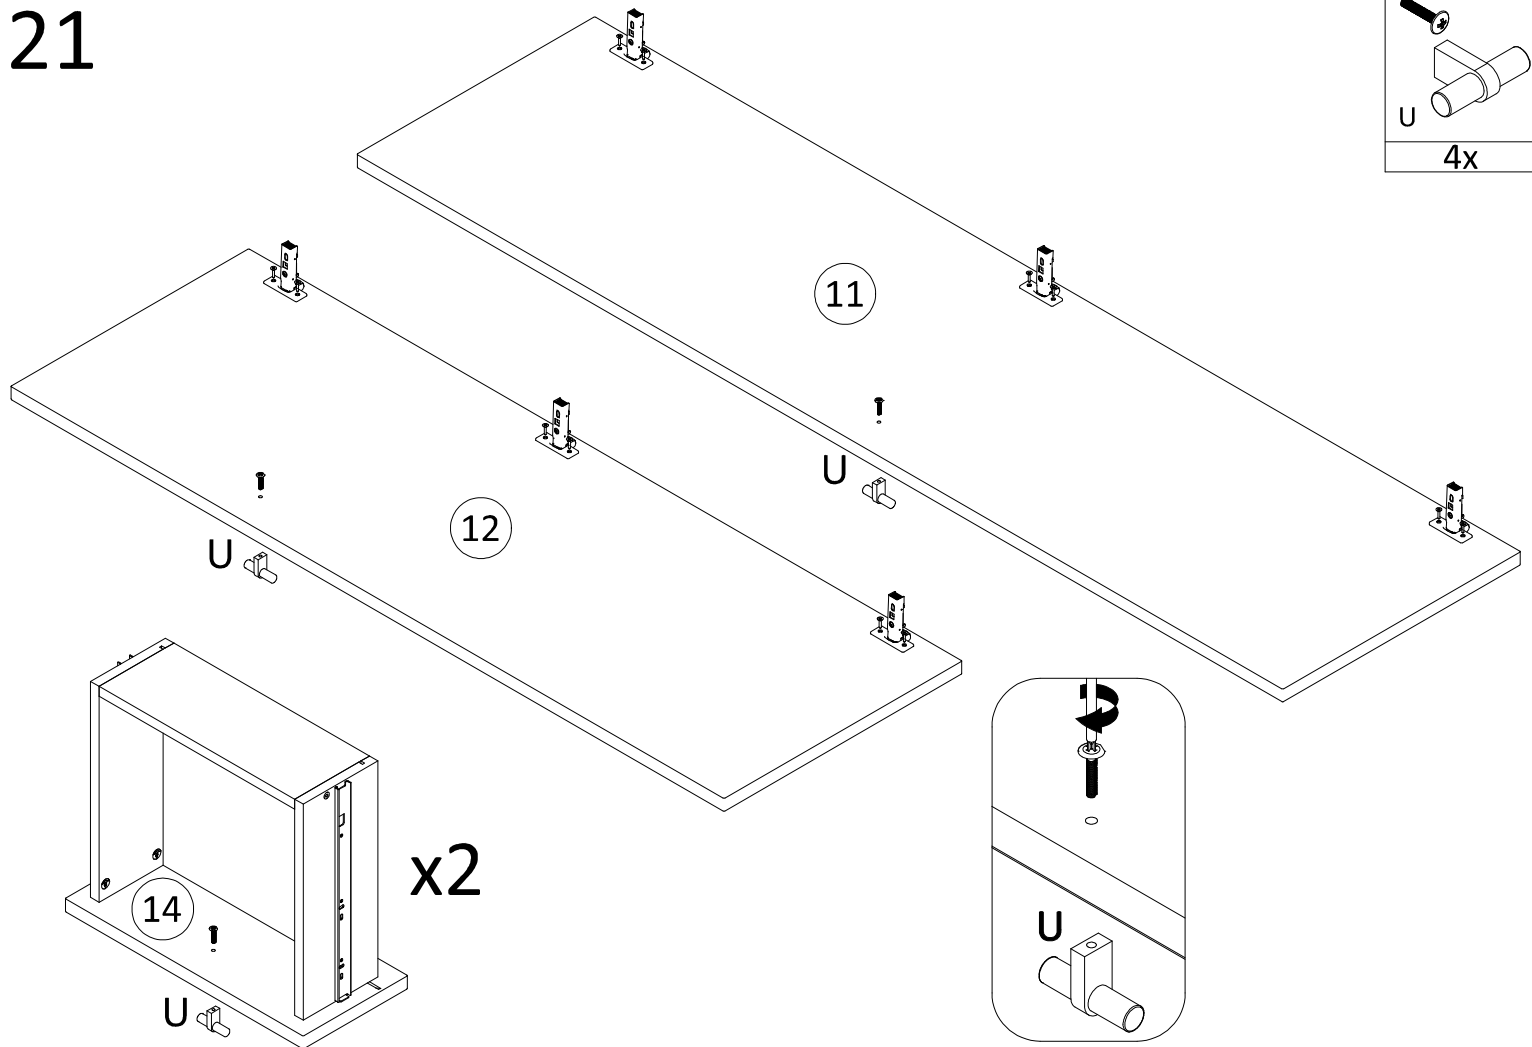

22

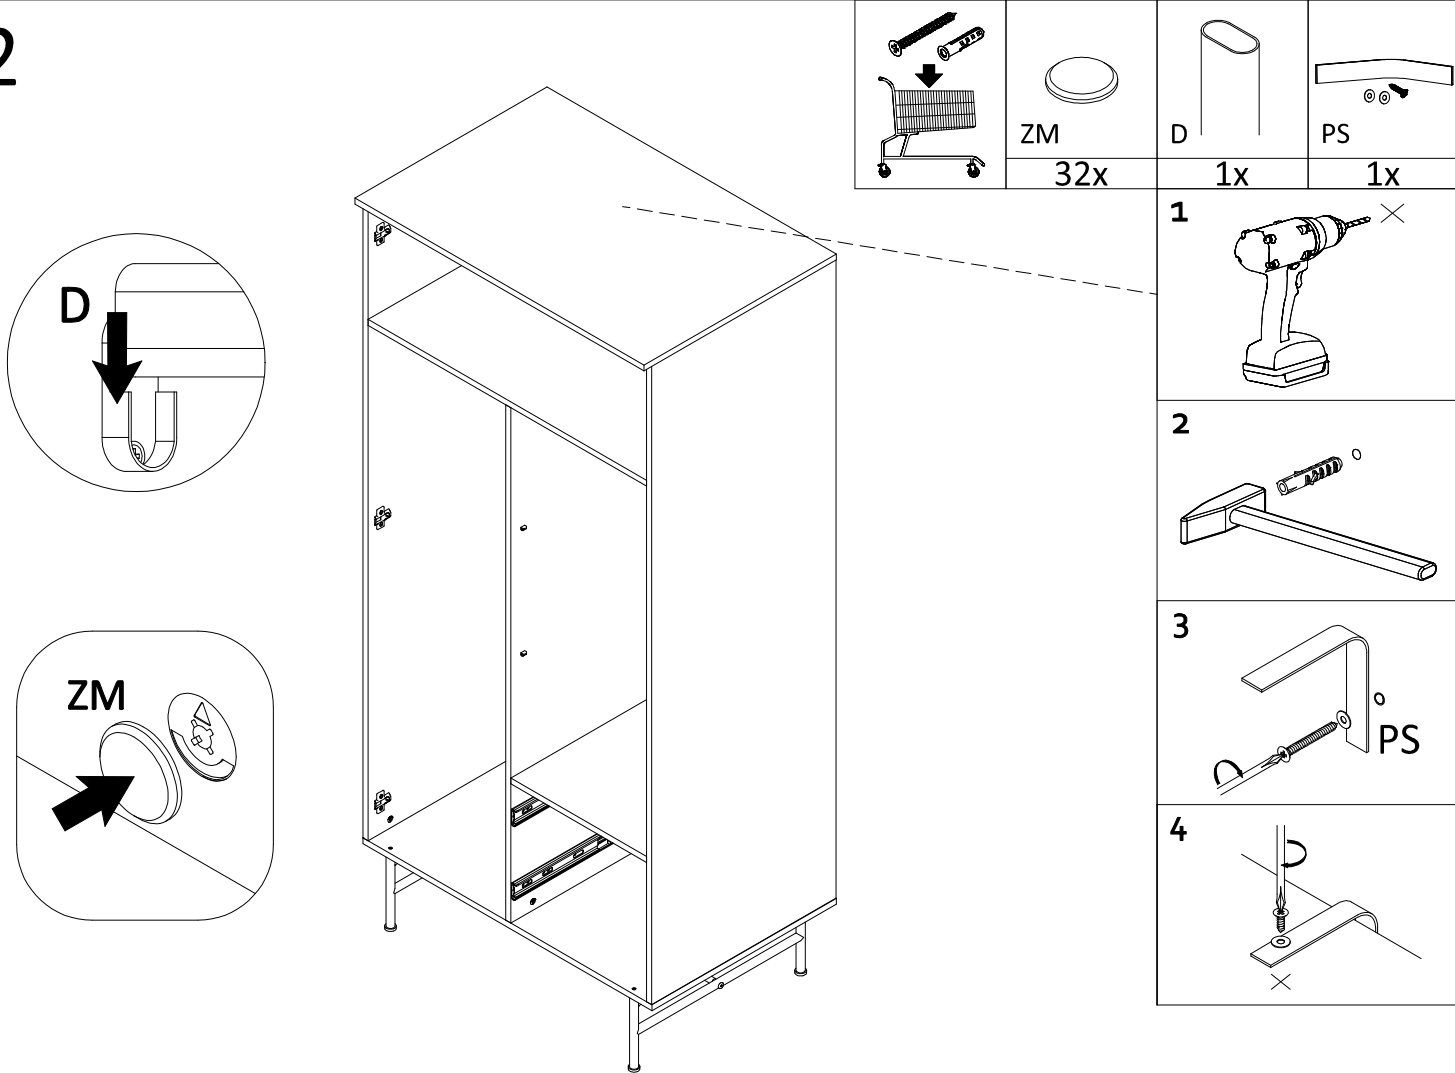

23

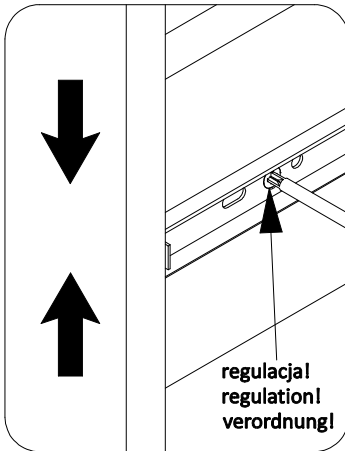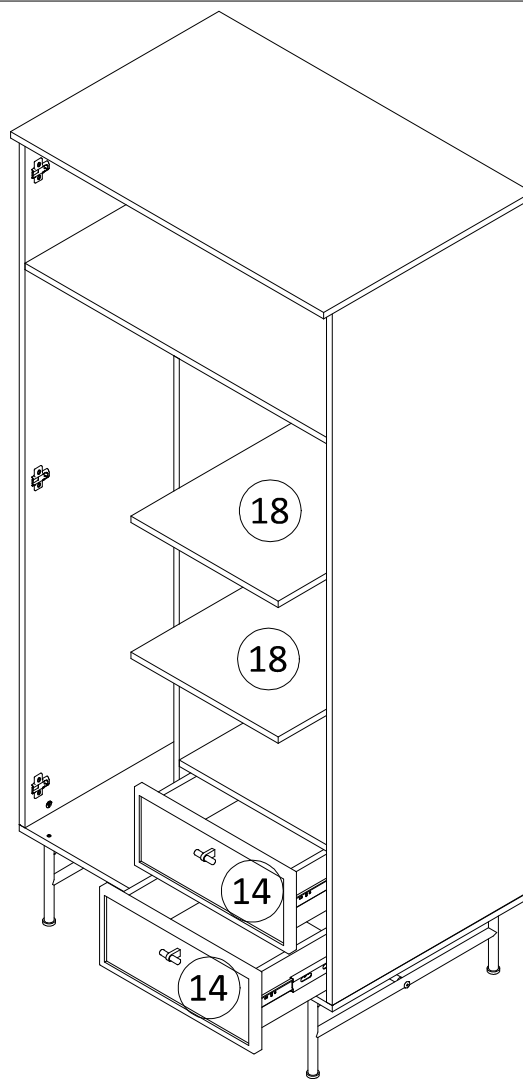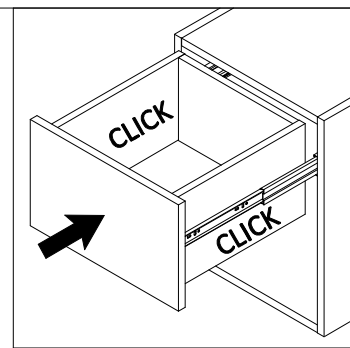

24

