



# POSSINA

## Condor Sofa Bed Assembly Instruction

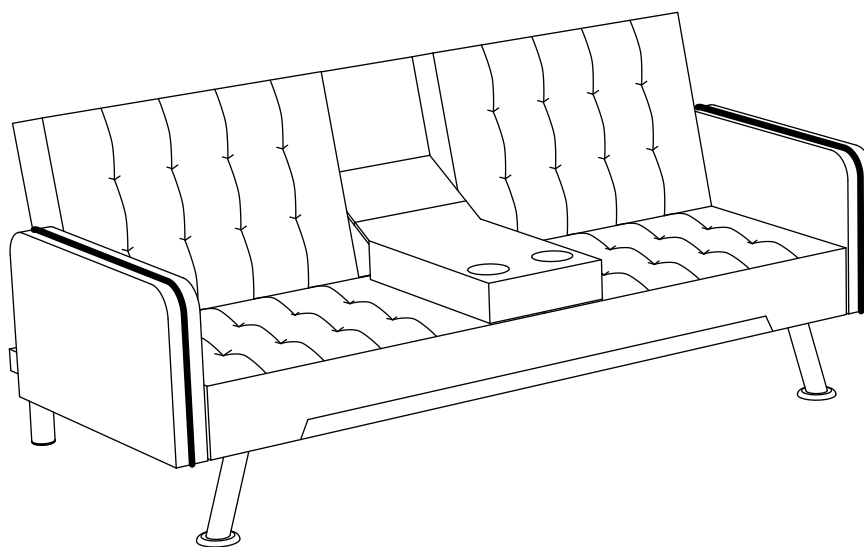


- ⚠ 1. Two or more people are required for assembly.
- 2. To avoid squeaking, please tighten the bolts all the way. An electric drill is recommended for the assembly.
- 3. Professional installation is highly recommended.


### PARTS

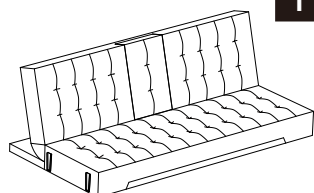


1 x 1

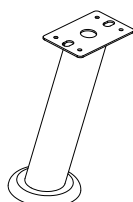


2 x 2



3 x 2

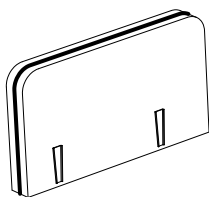

4 x 1

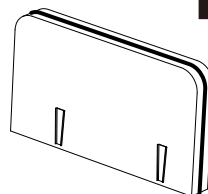

5 x 1

### HARDWARE





A x 8  
M8\*25




B x 16  
M4\*25



C x 1  
M8

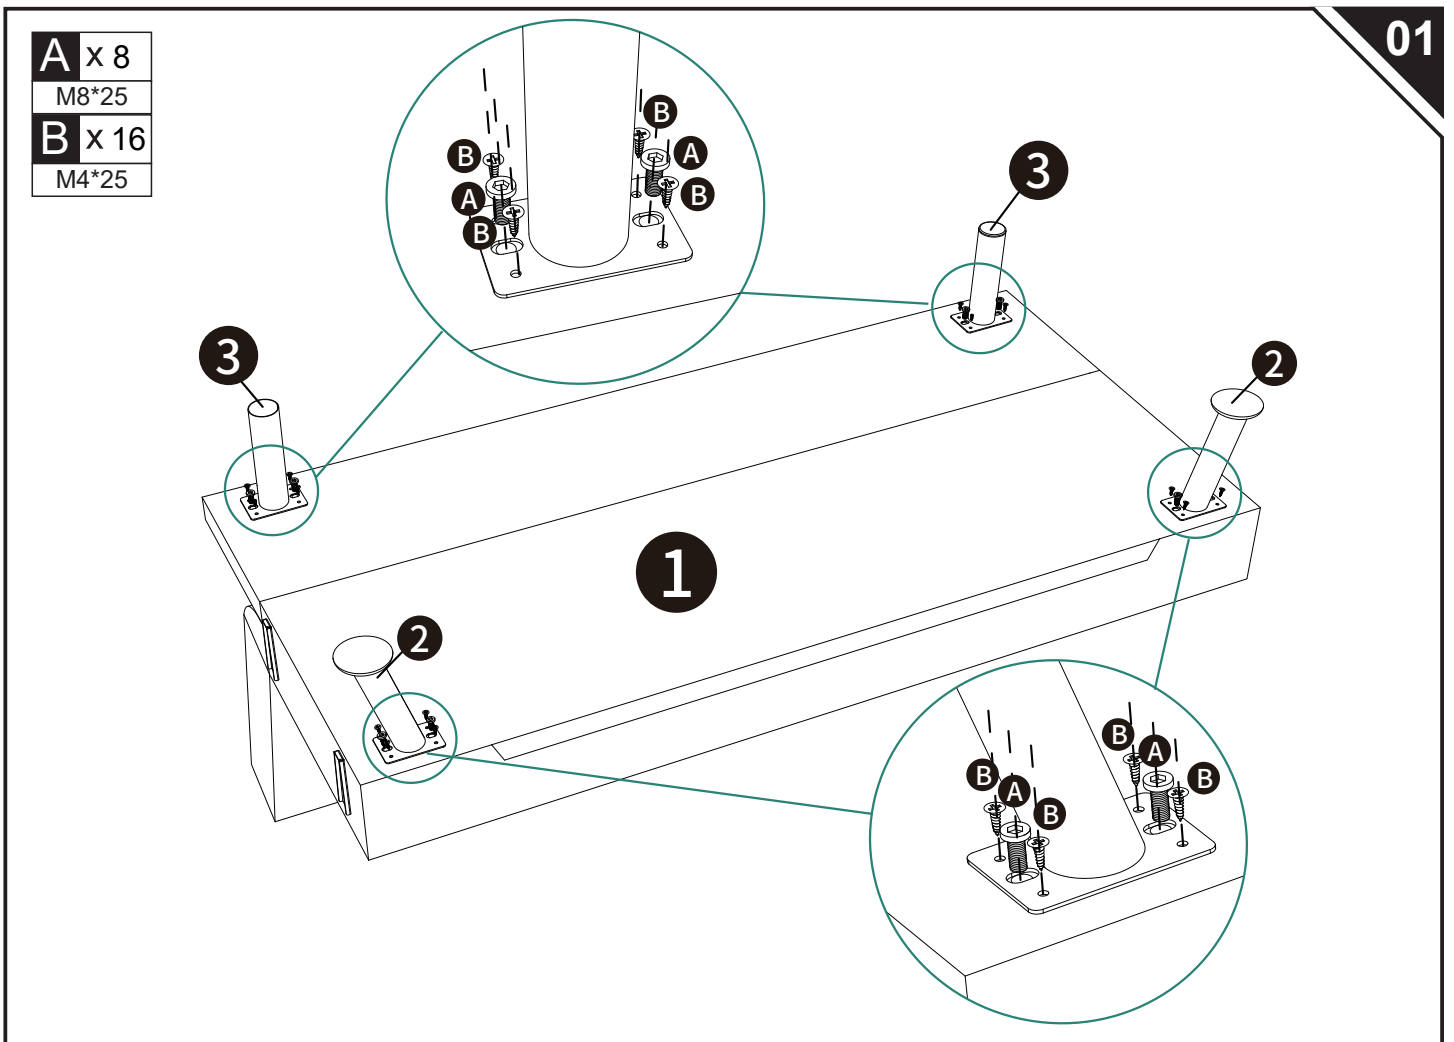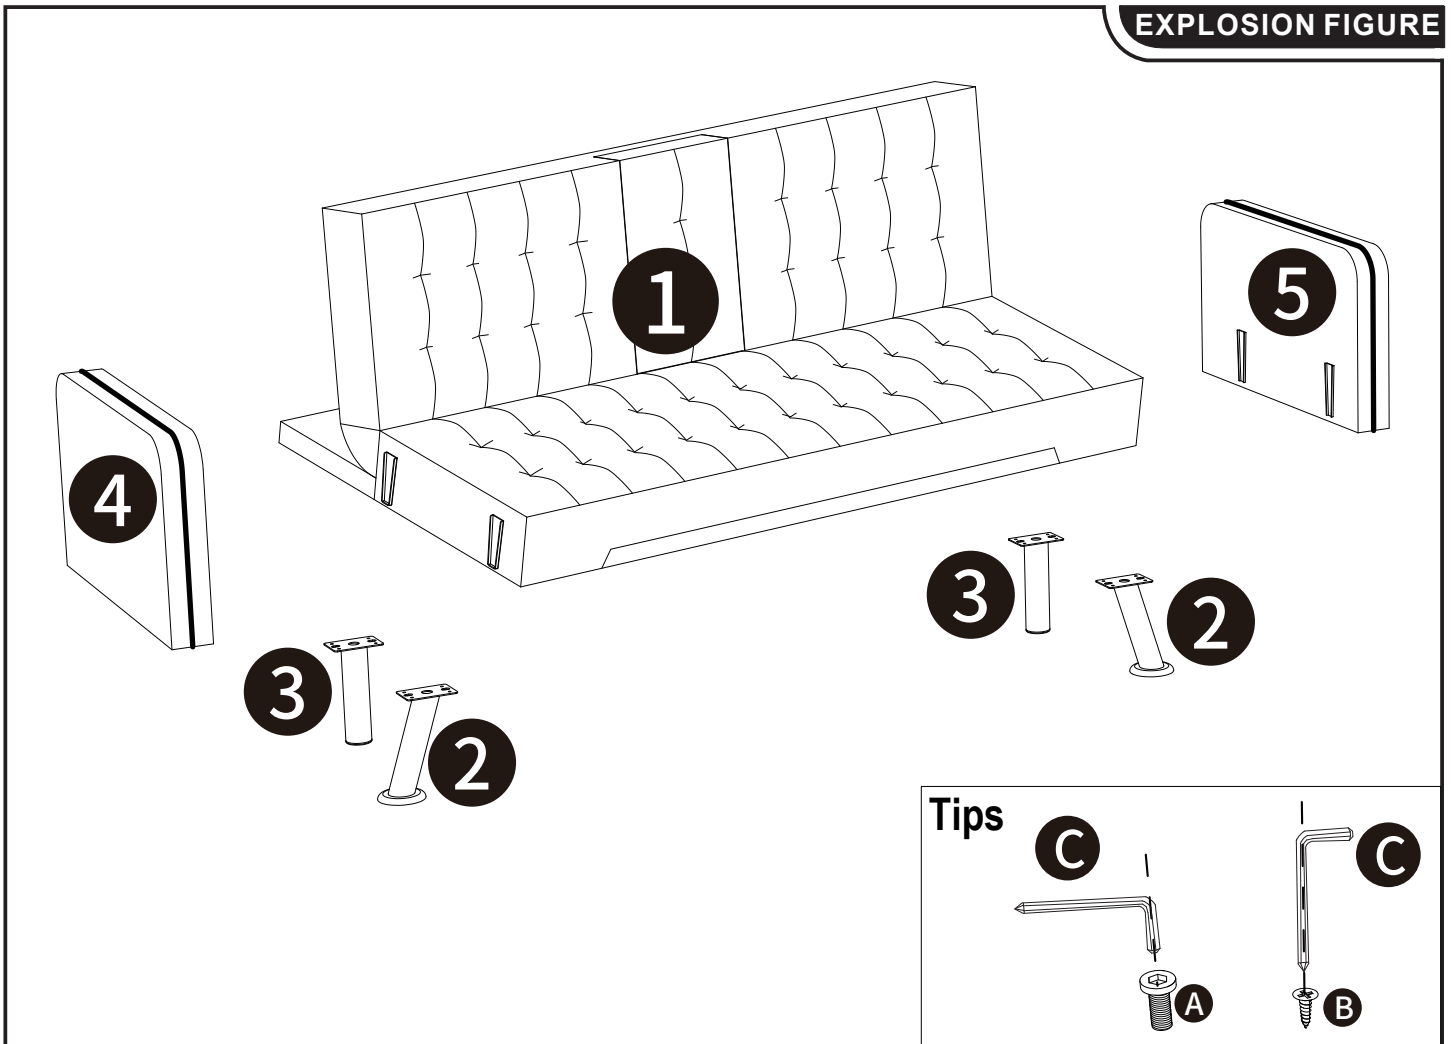

02

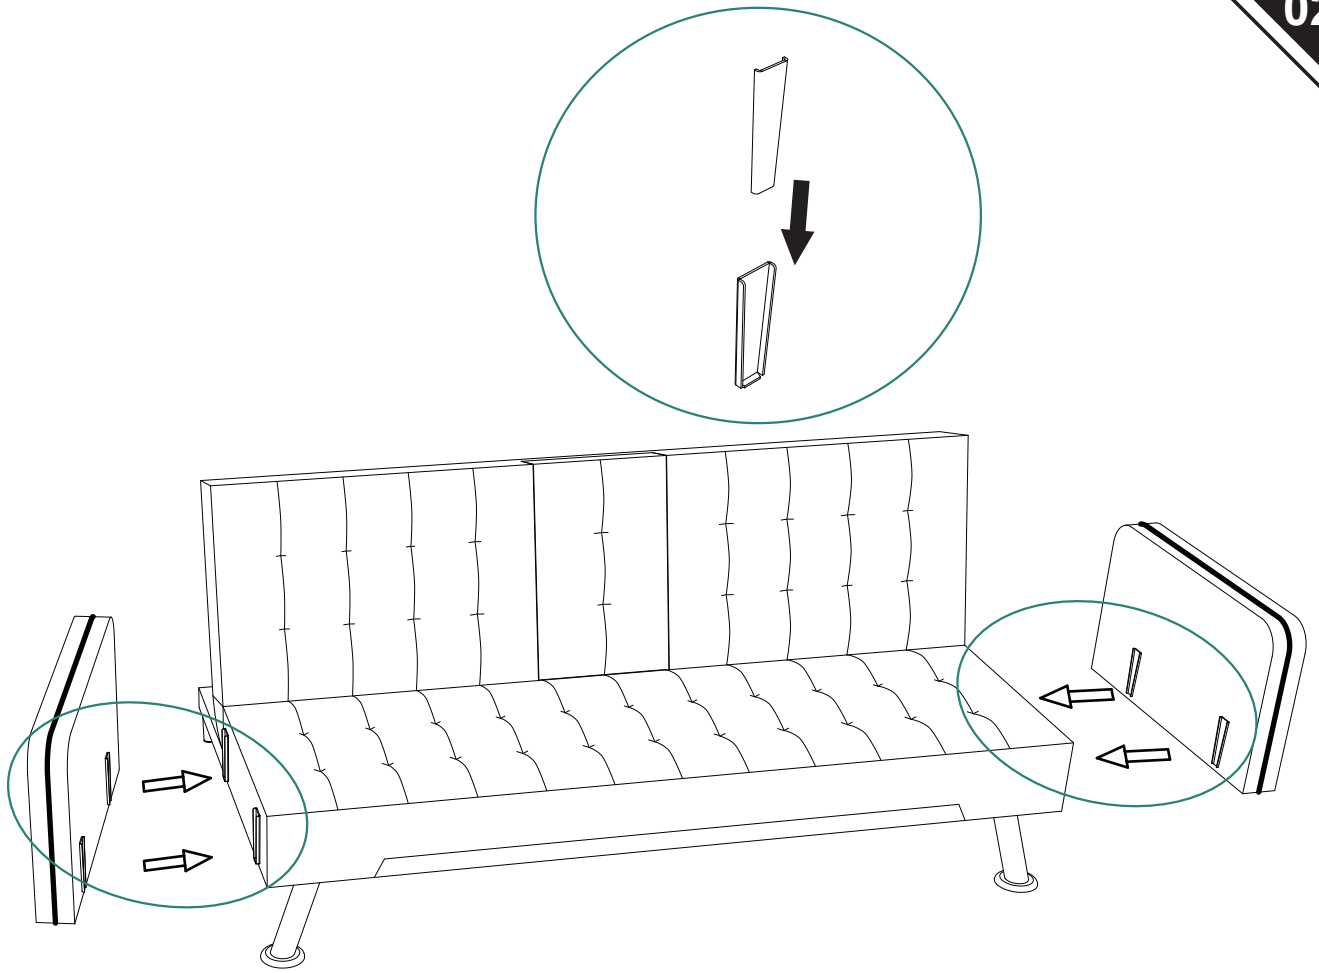

03

