


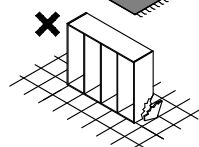
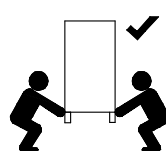
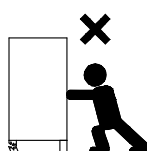

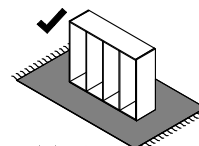
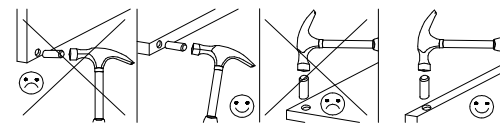
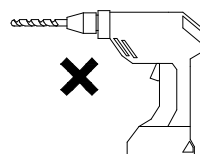
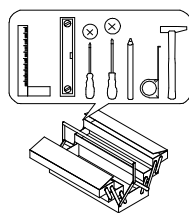
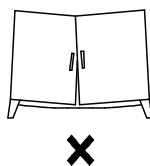
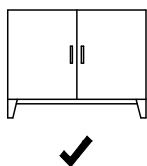
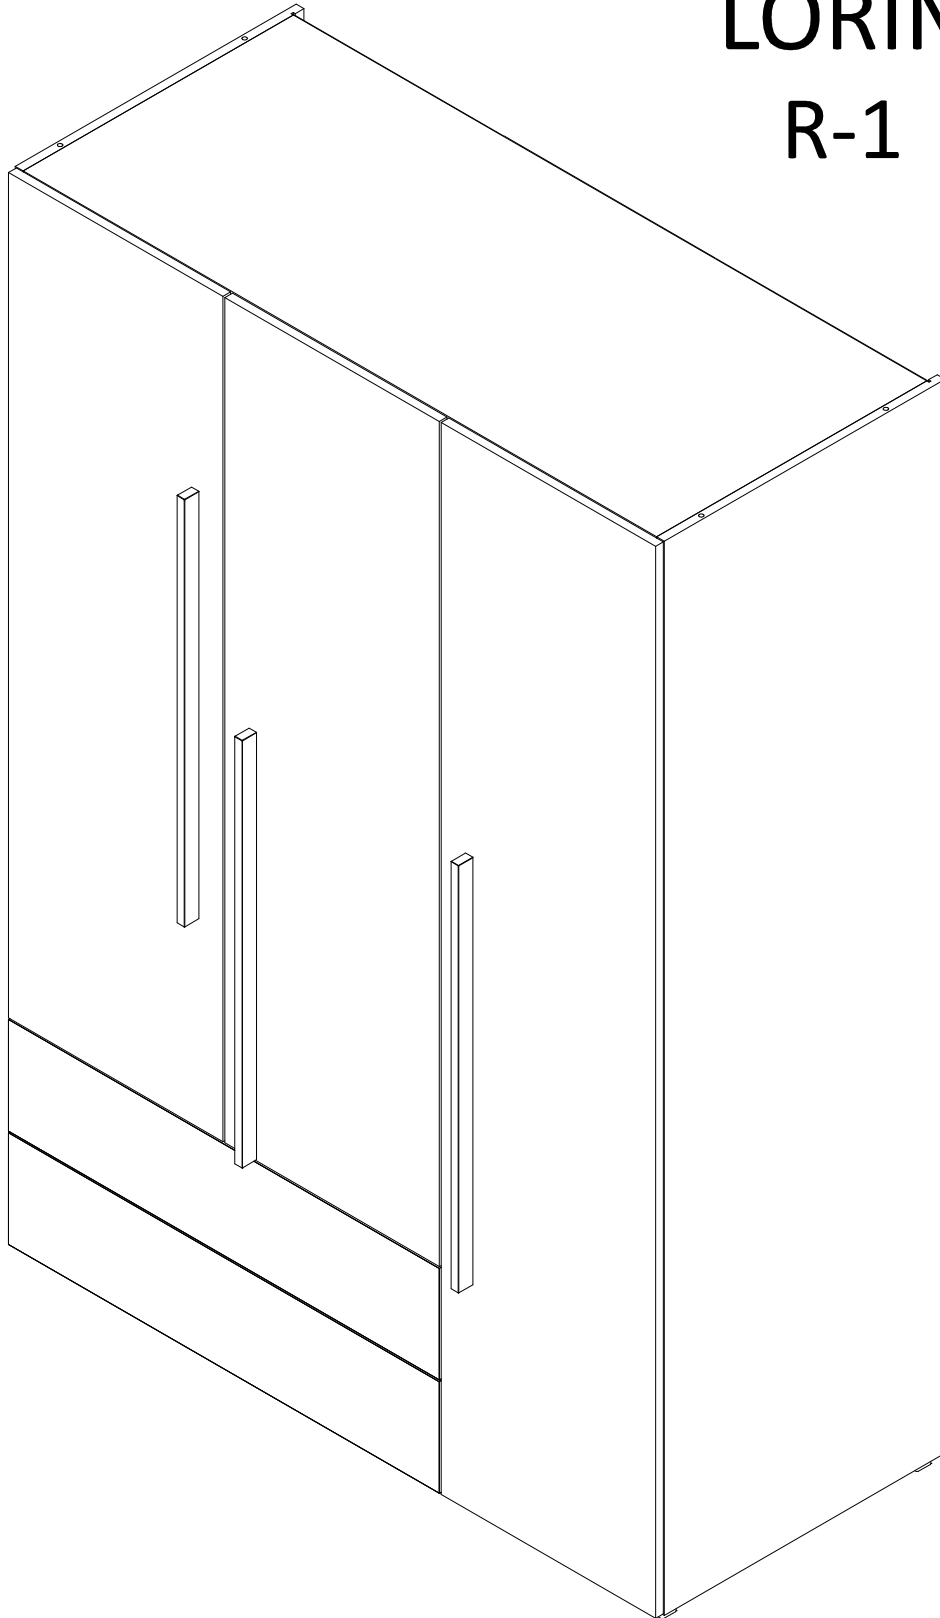



























LORIN

R-1

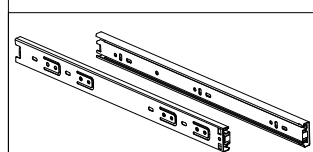


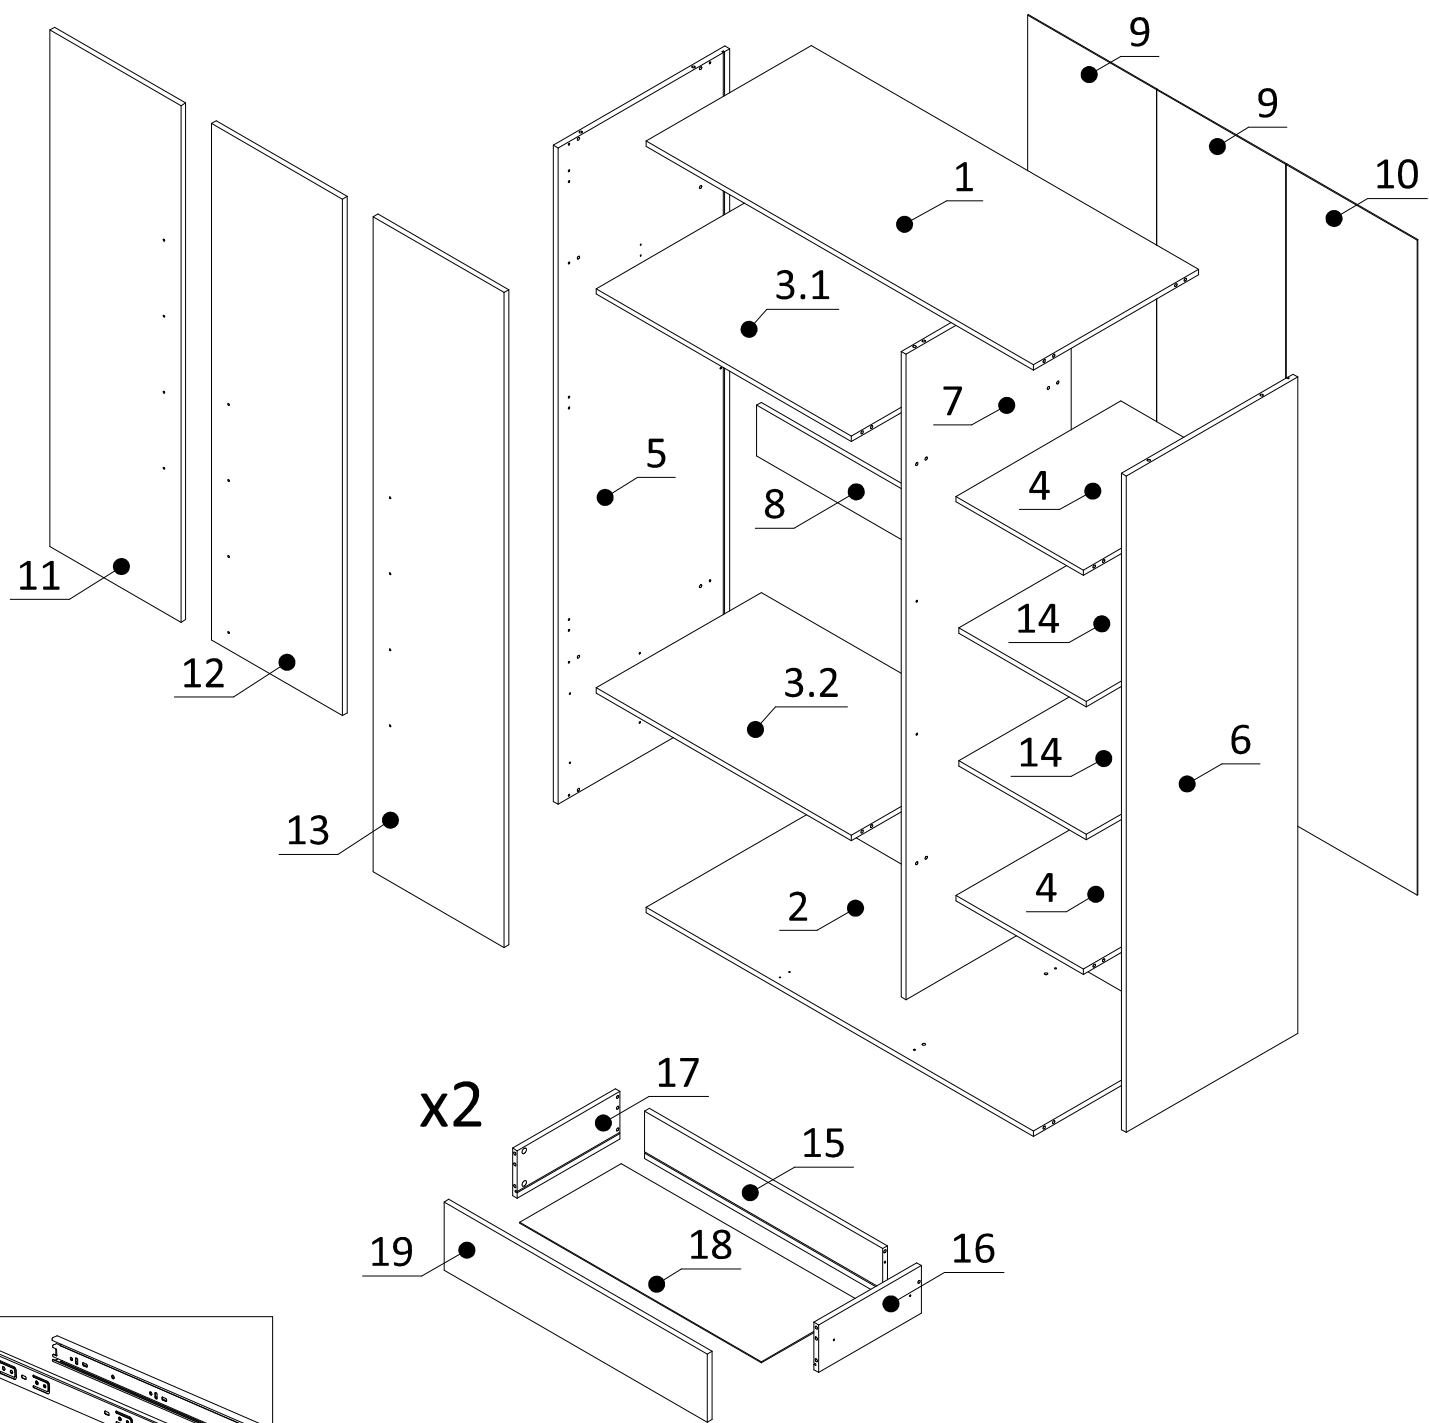


2kpl. PK-0H35-350

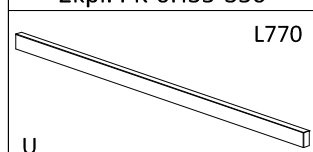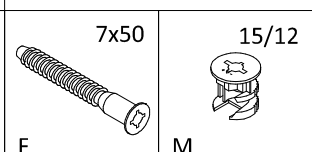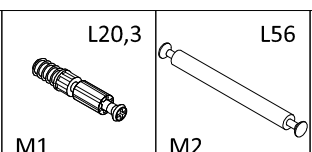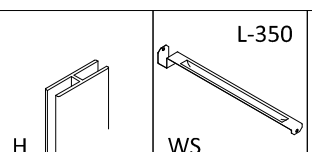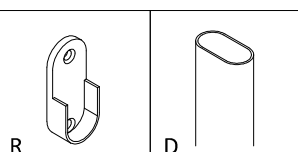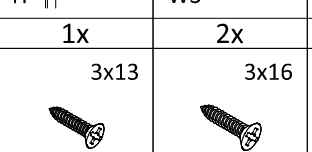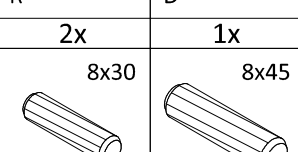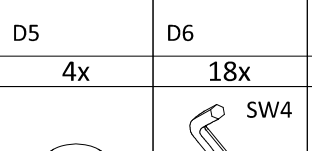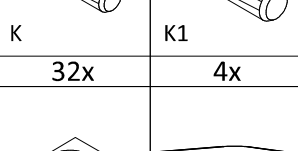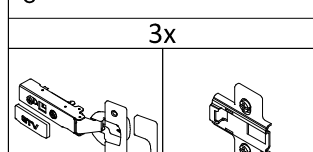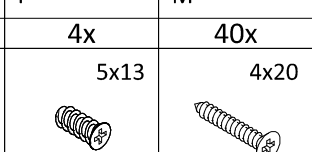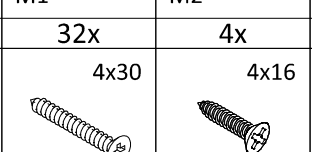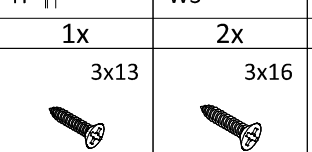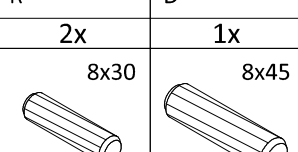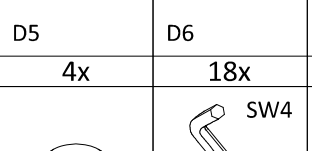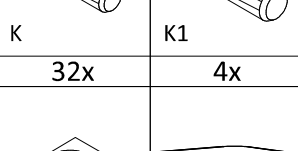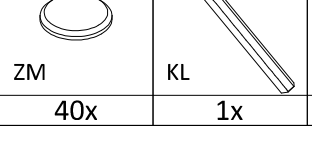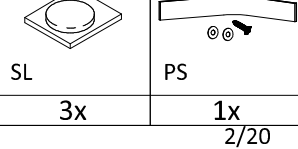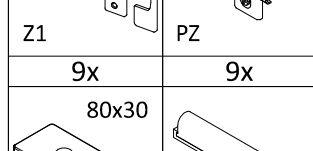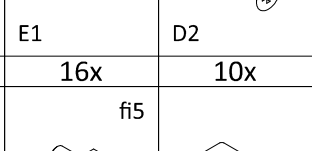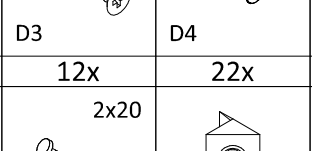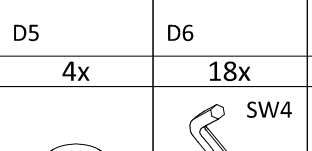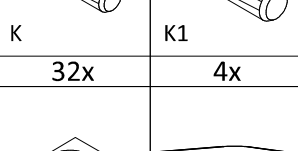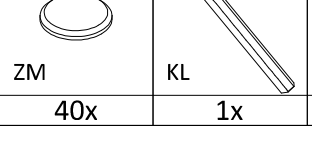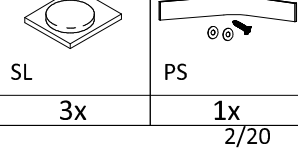 L770		 7x50		 15/12		 L20,3		 L56		 H		 L-350		 R		 D	
U		F		M		M1		M2		H		WS		R		D	
3x		4x		40x		32x		4x		1x		2x		2x		1x	
 Z1		 PZ		 E1		 D2		 D3		 D4		 D5		 D6		 K	
9x		9x		16x		10x		12x		22x		4x		18x		32x	
 80x30		 T		 P		 BL		 G		 S		 ZM		KL		SL	
5x		2x		8x		18x		56x		10x		40x		1x		3x	


1

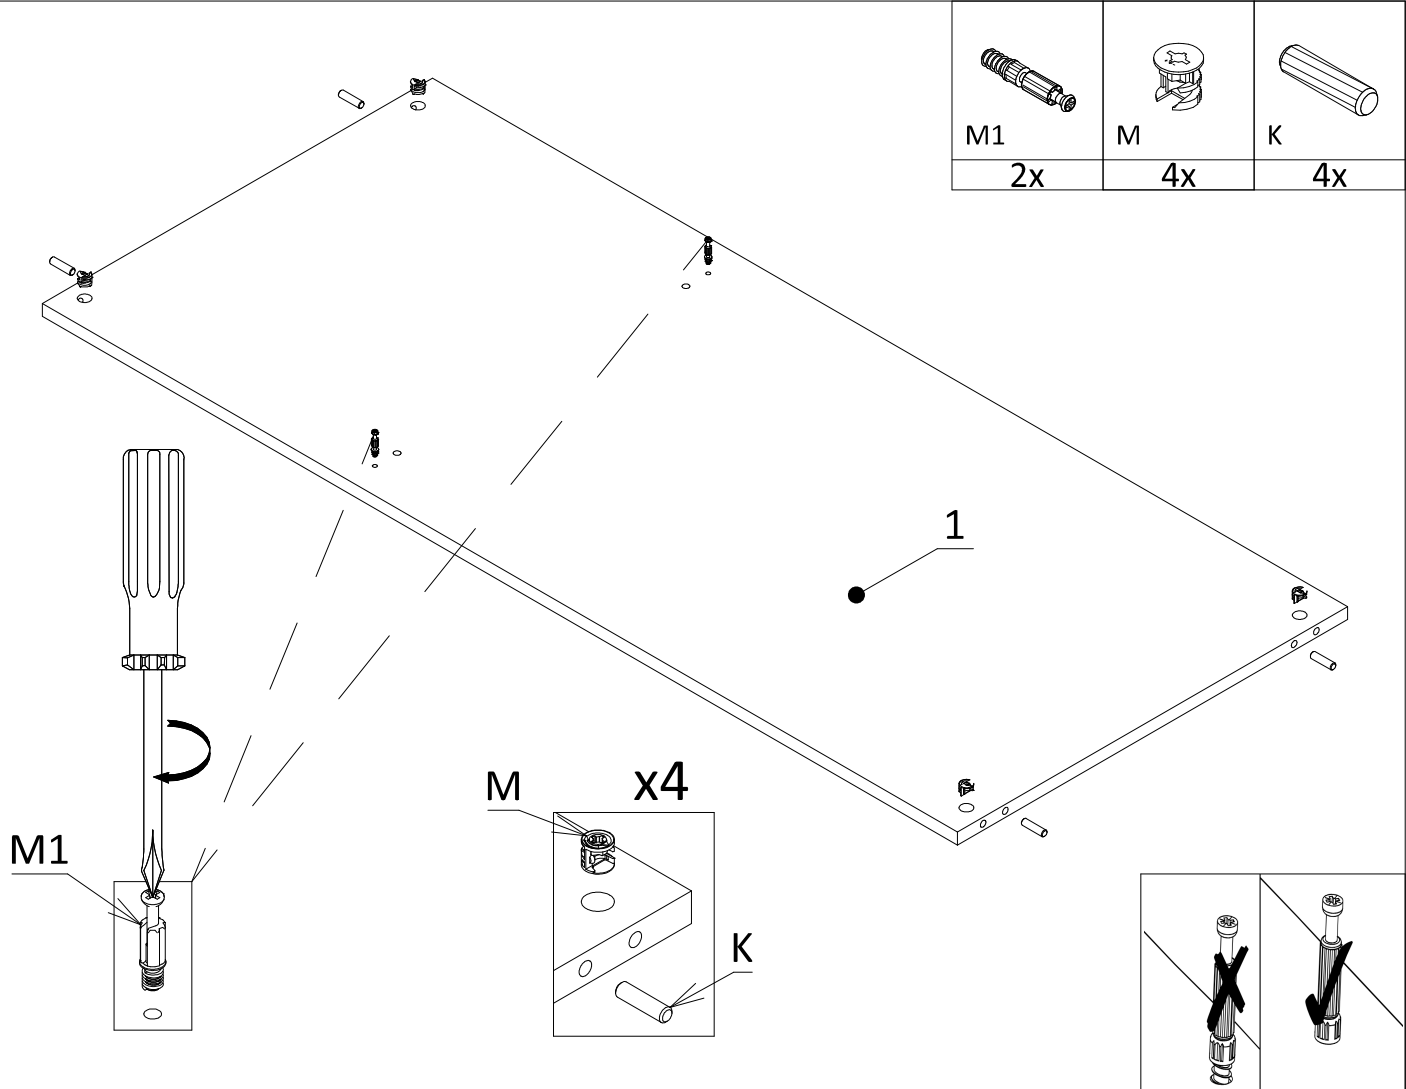


2

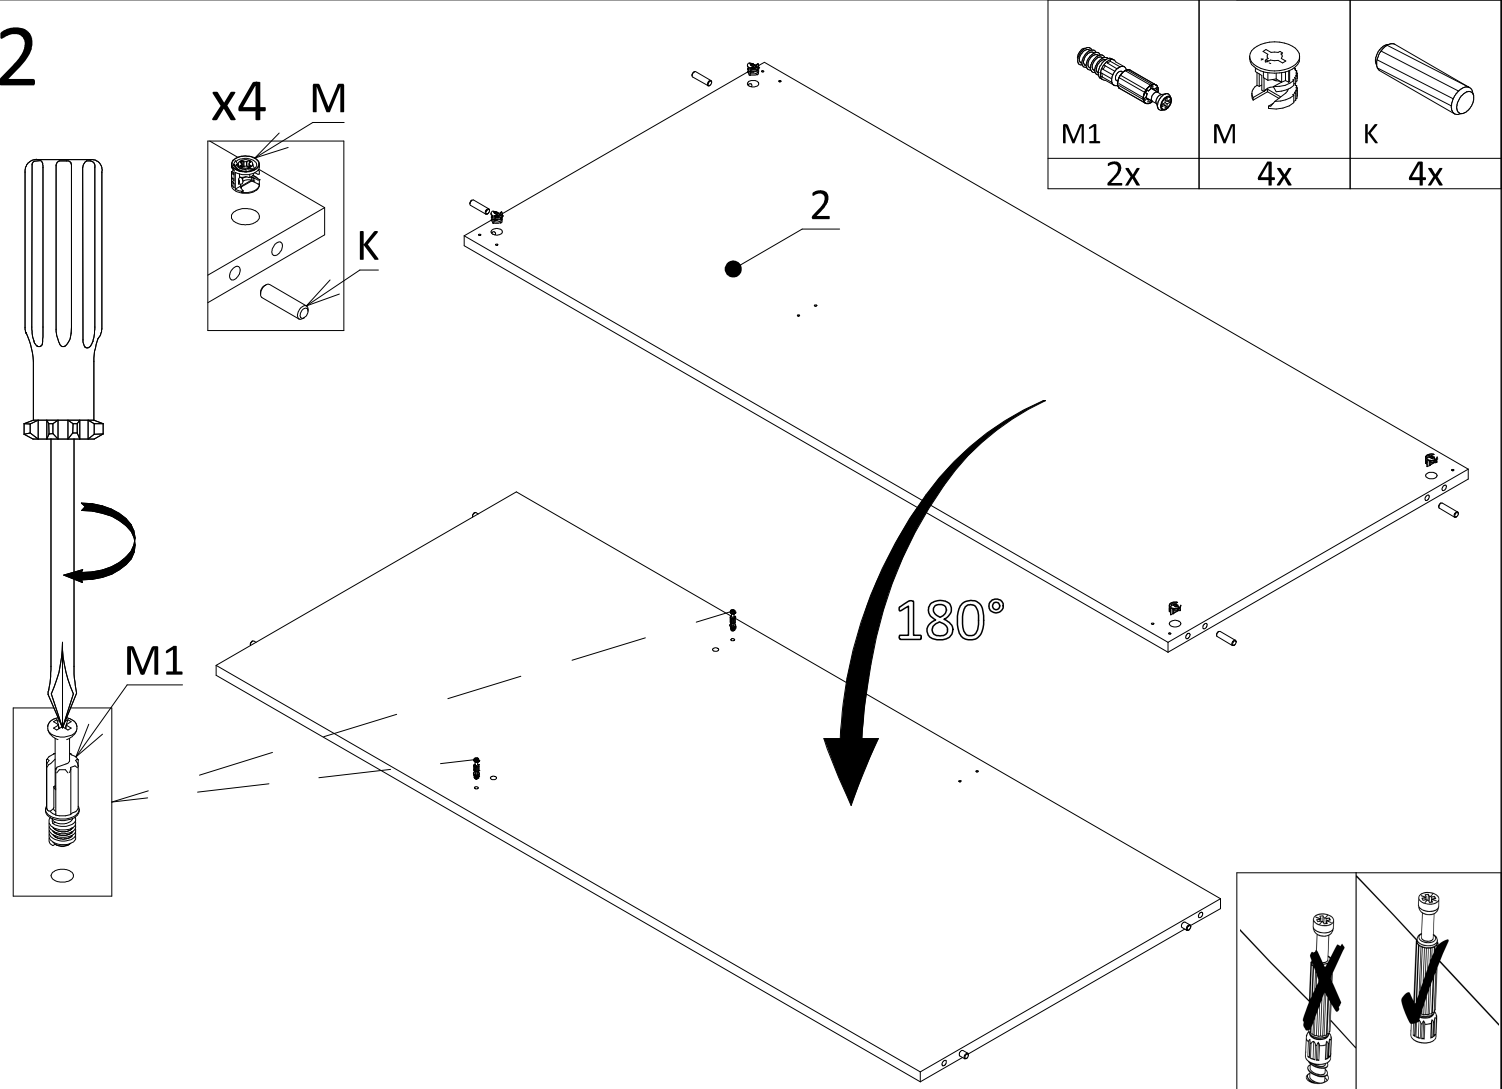


3

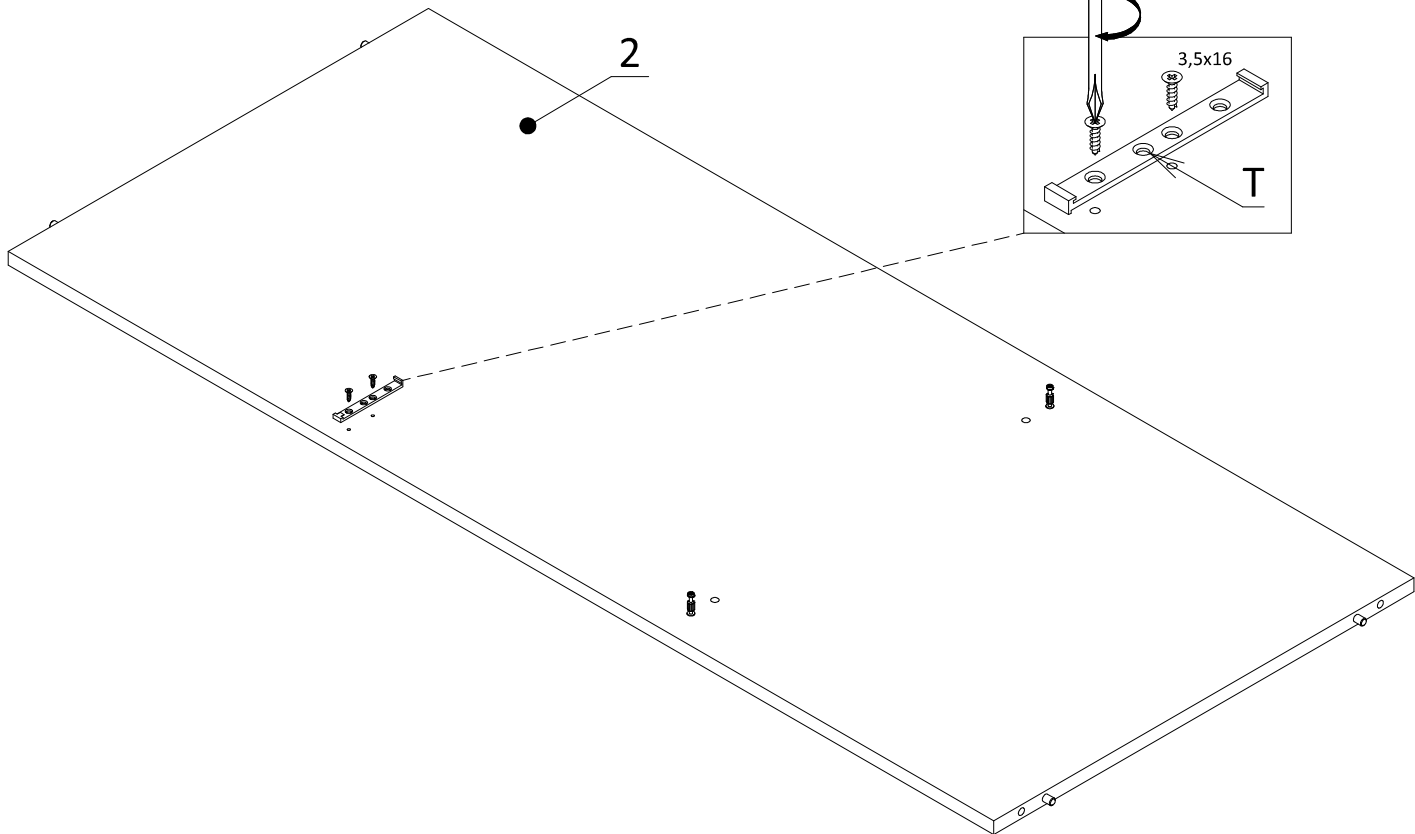


4


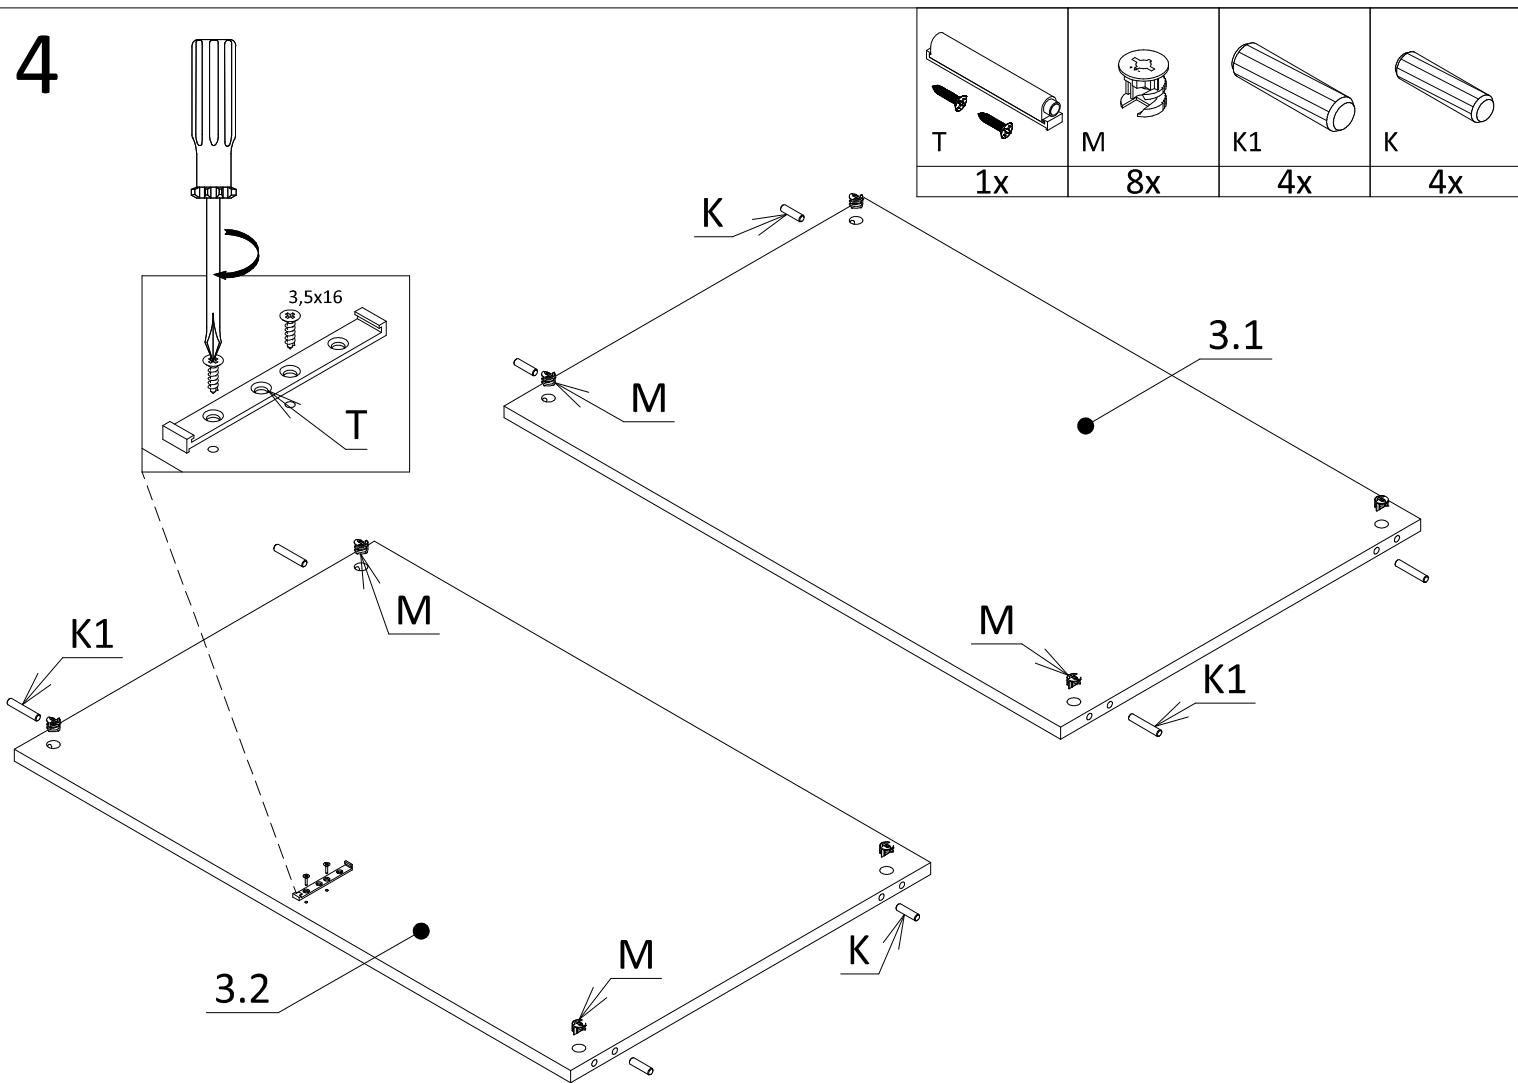



5

	
K	M
4x	12x

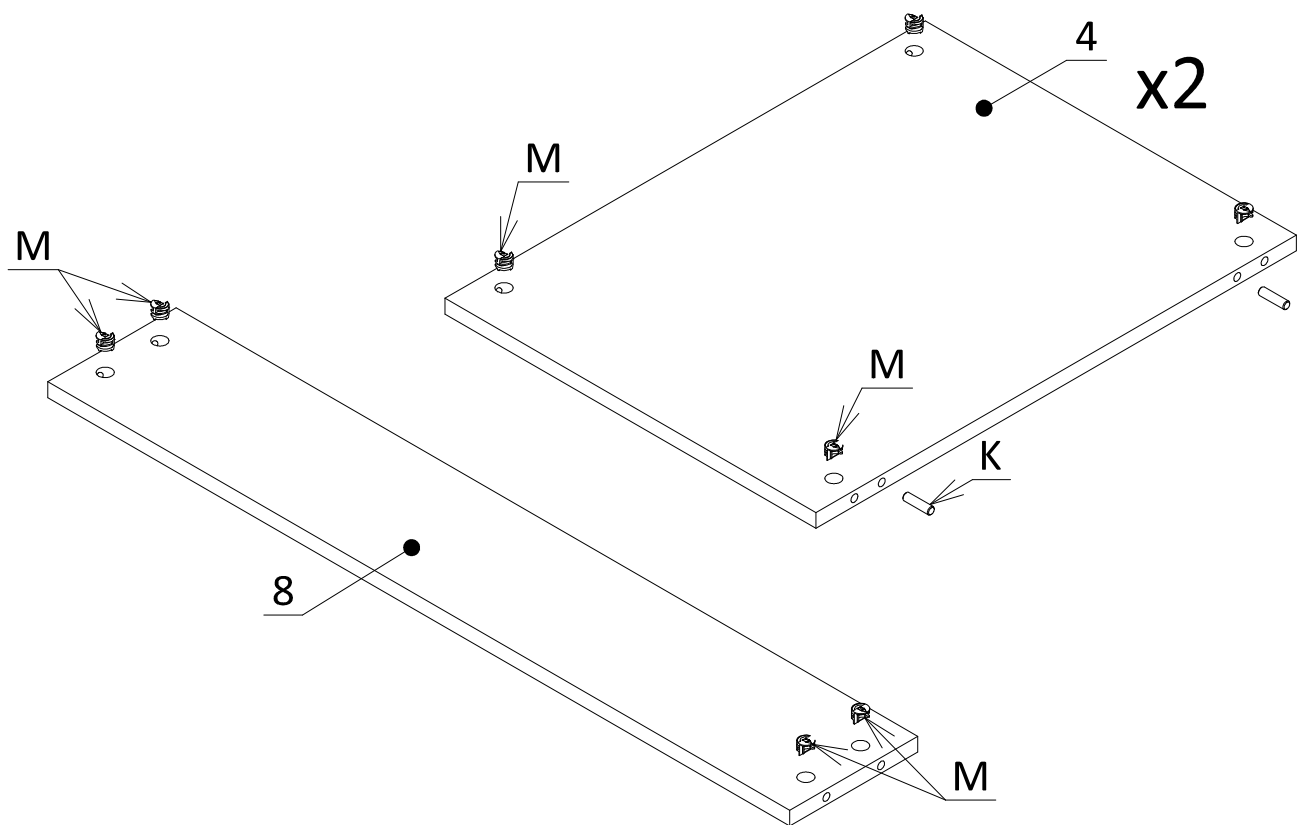


6


		
M1	D4	R
10x	2x	1x

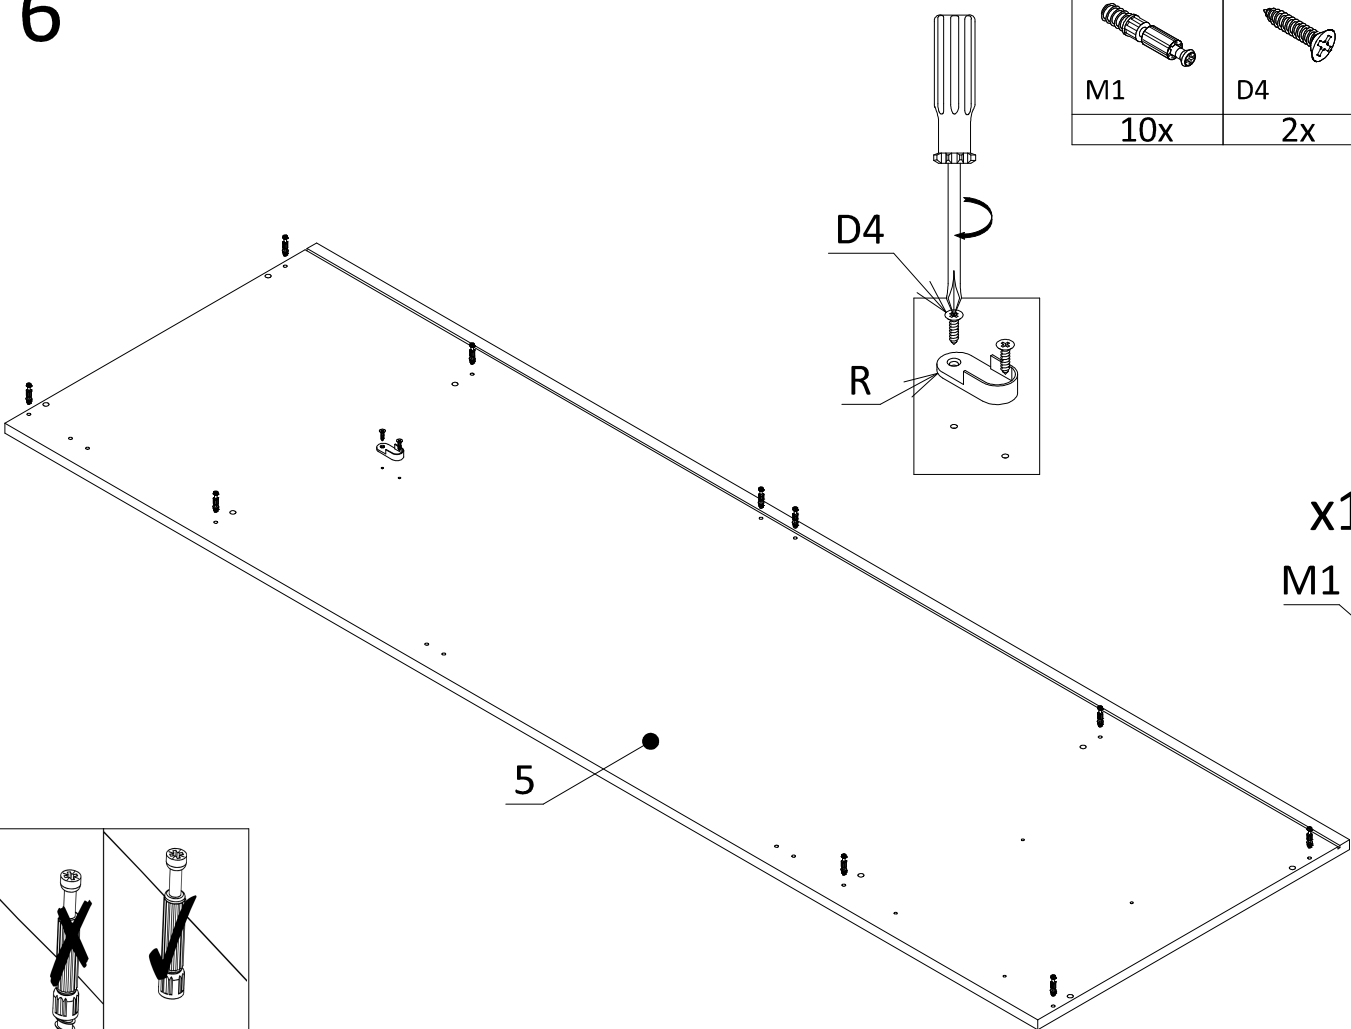

7

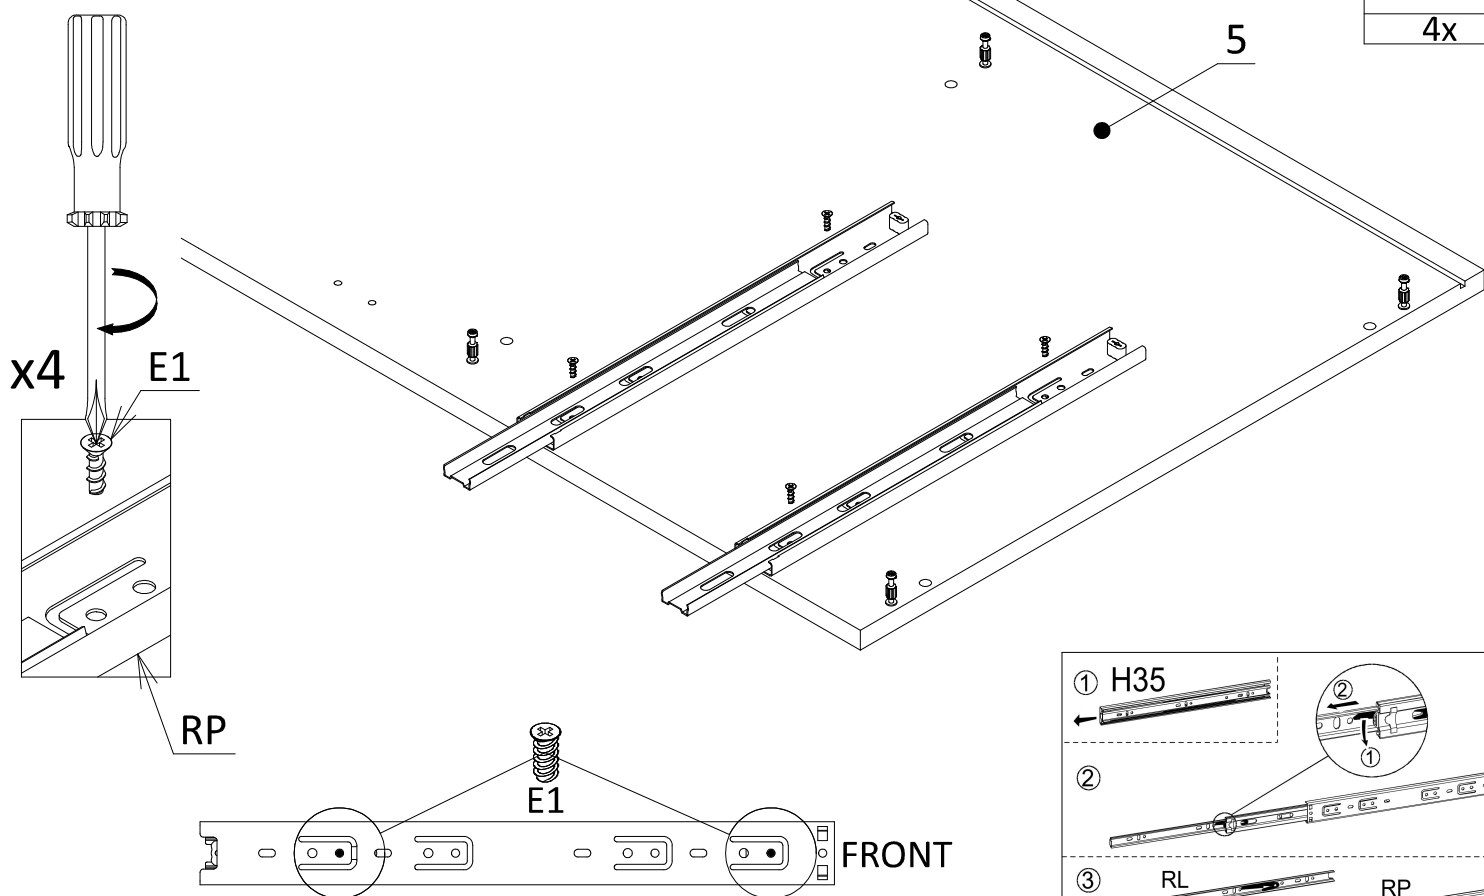

8

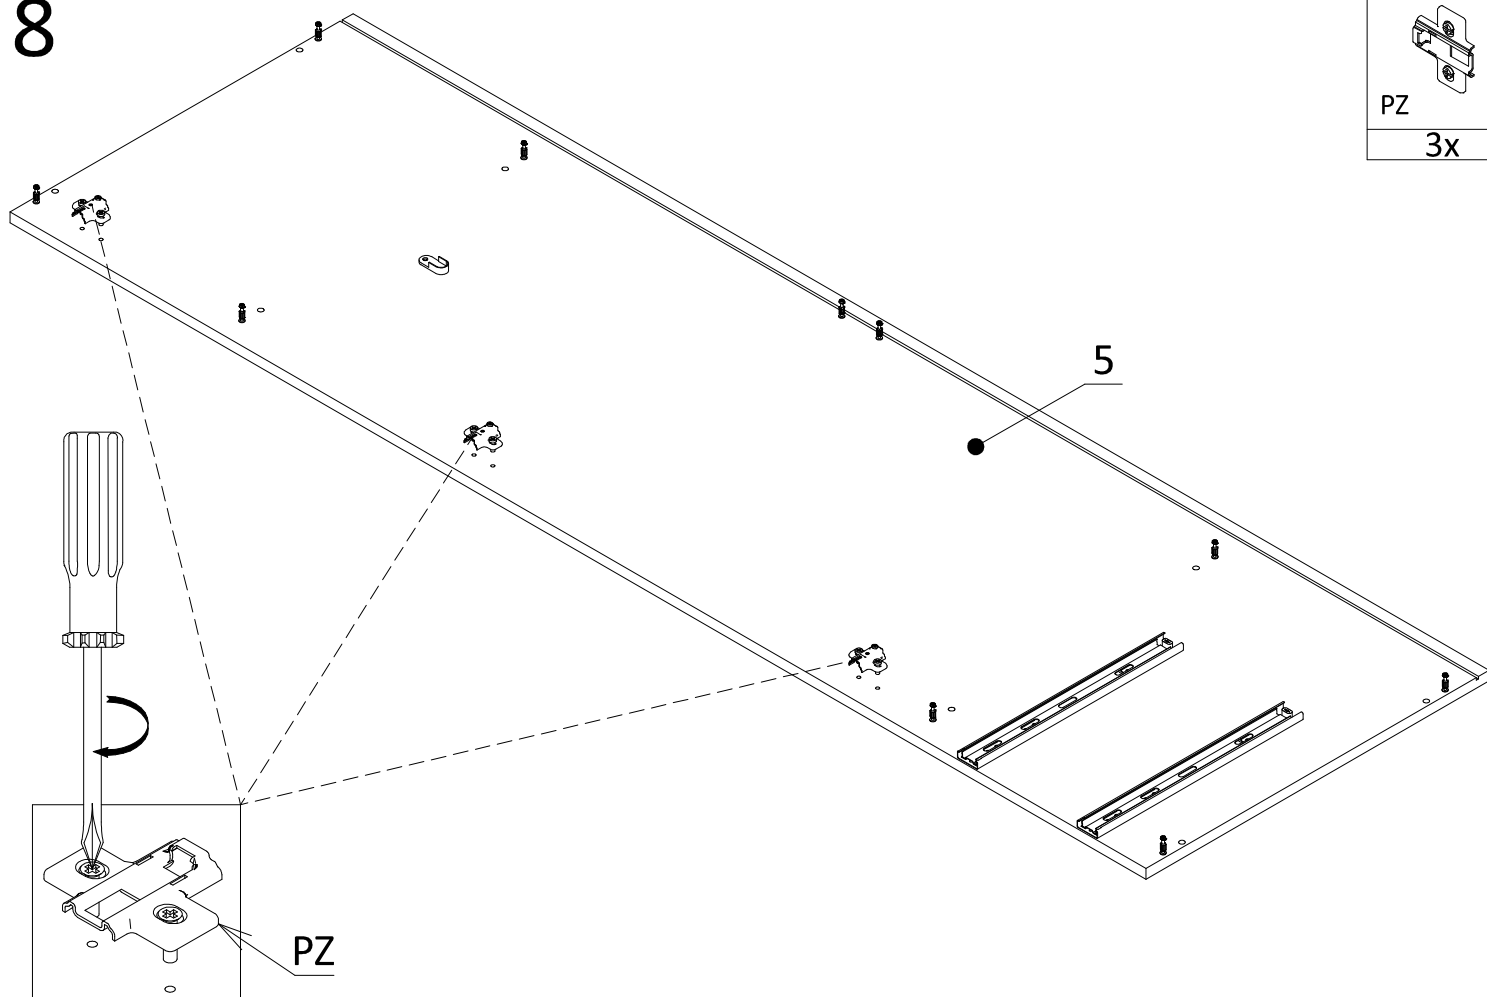

9

M1	P
8x	4x

The diagram illustrates the final assembly step of attaching the panel to the frame. A screwdriver is shown tightening M1 screws into pre-drilled holes along the perimeter of the panel. The diagram includes callouts for 'M1' and 'P' parts, a quantity table, and a warning about correct screw placement.

M1

x8

P

6


Warning: The diagram shows two types of screws. The one on the left is crossed out with a large 'X', indicating it is incorrect. The one on the right has a checkmark, indicating it is the correct type to use.

10


6

PZ 3x


11

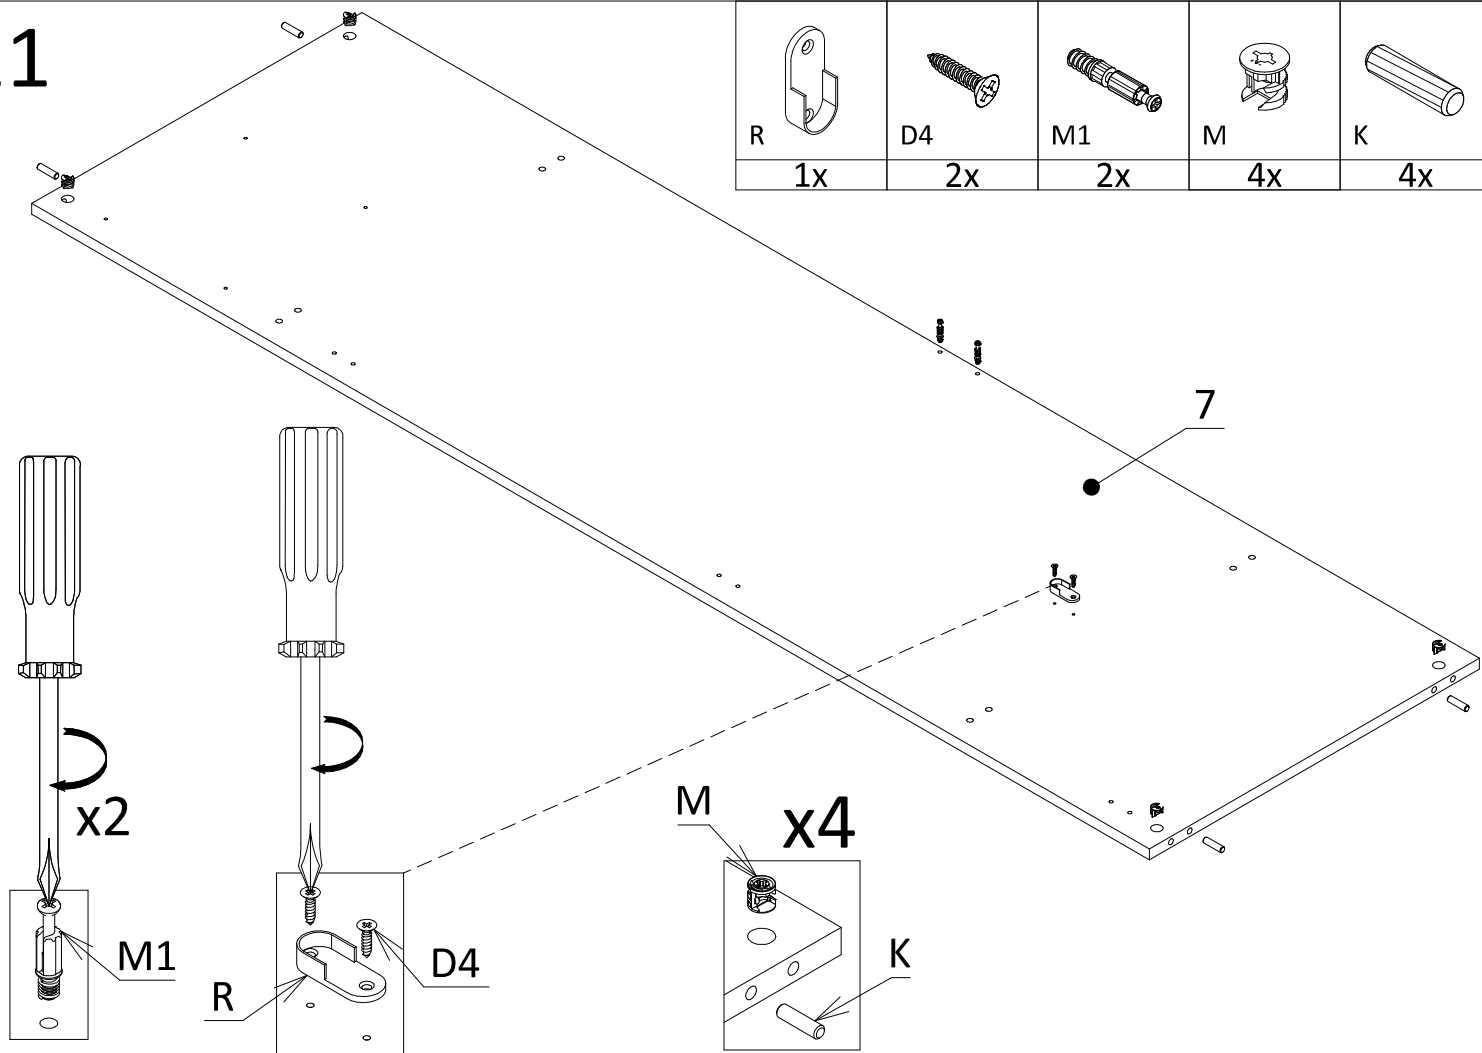

12

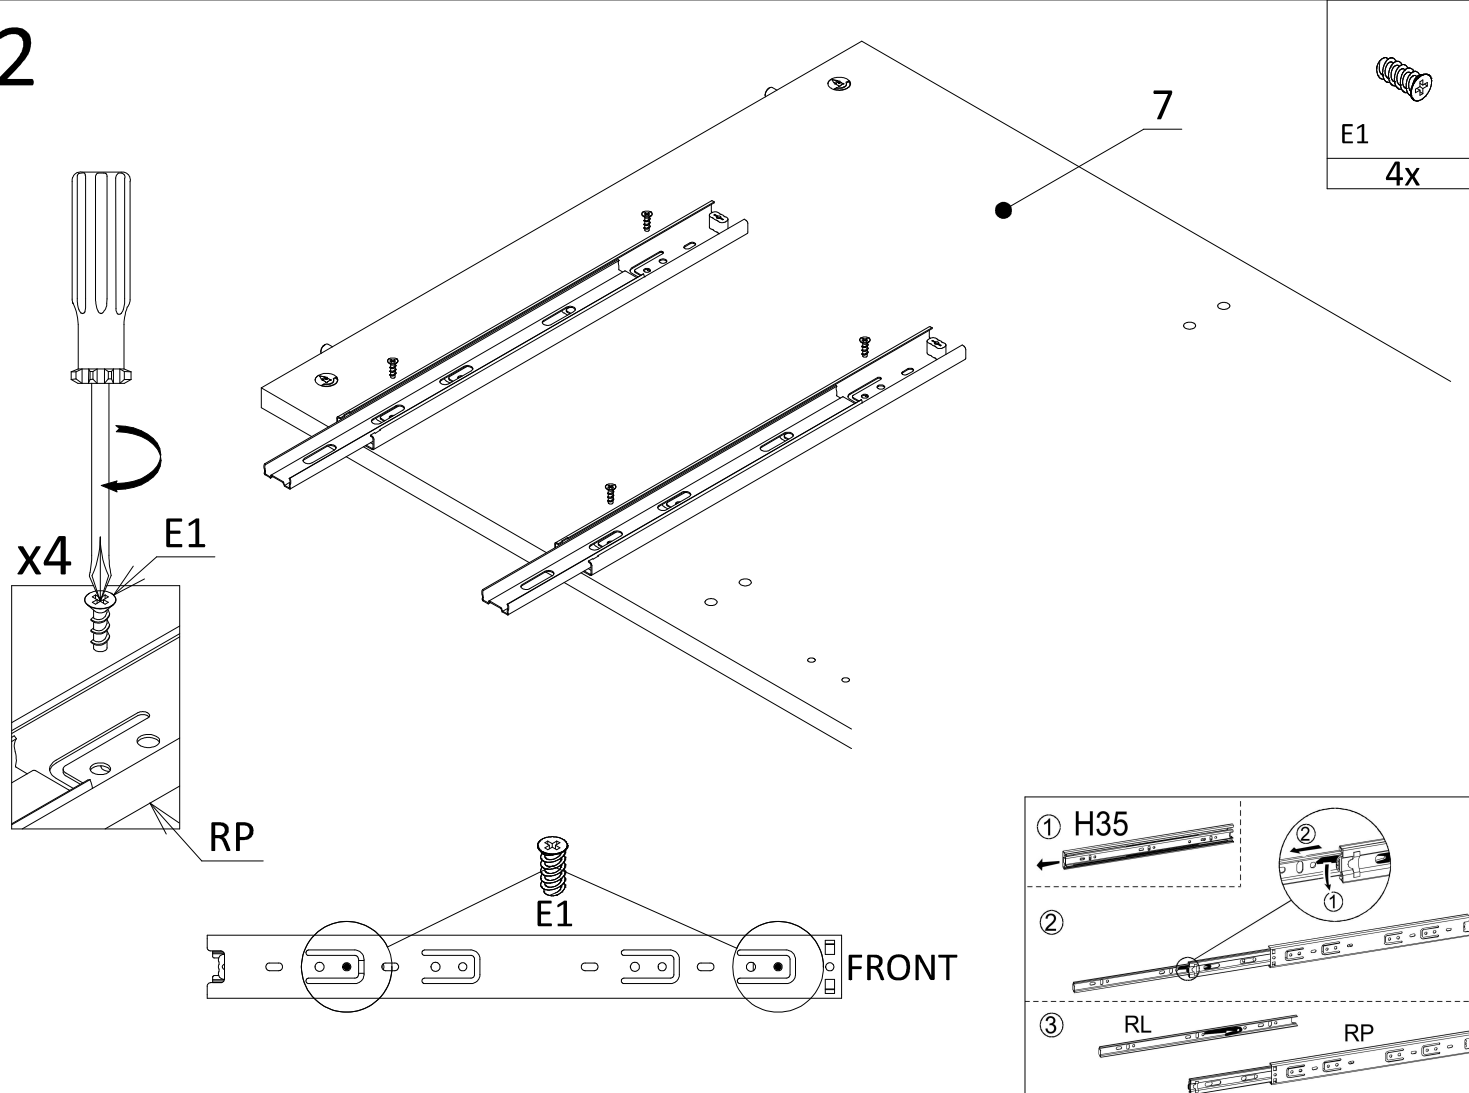


13

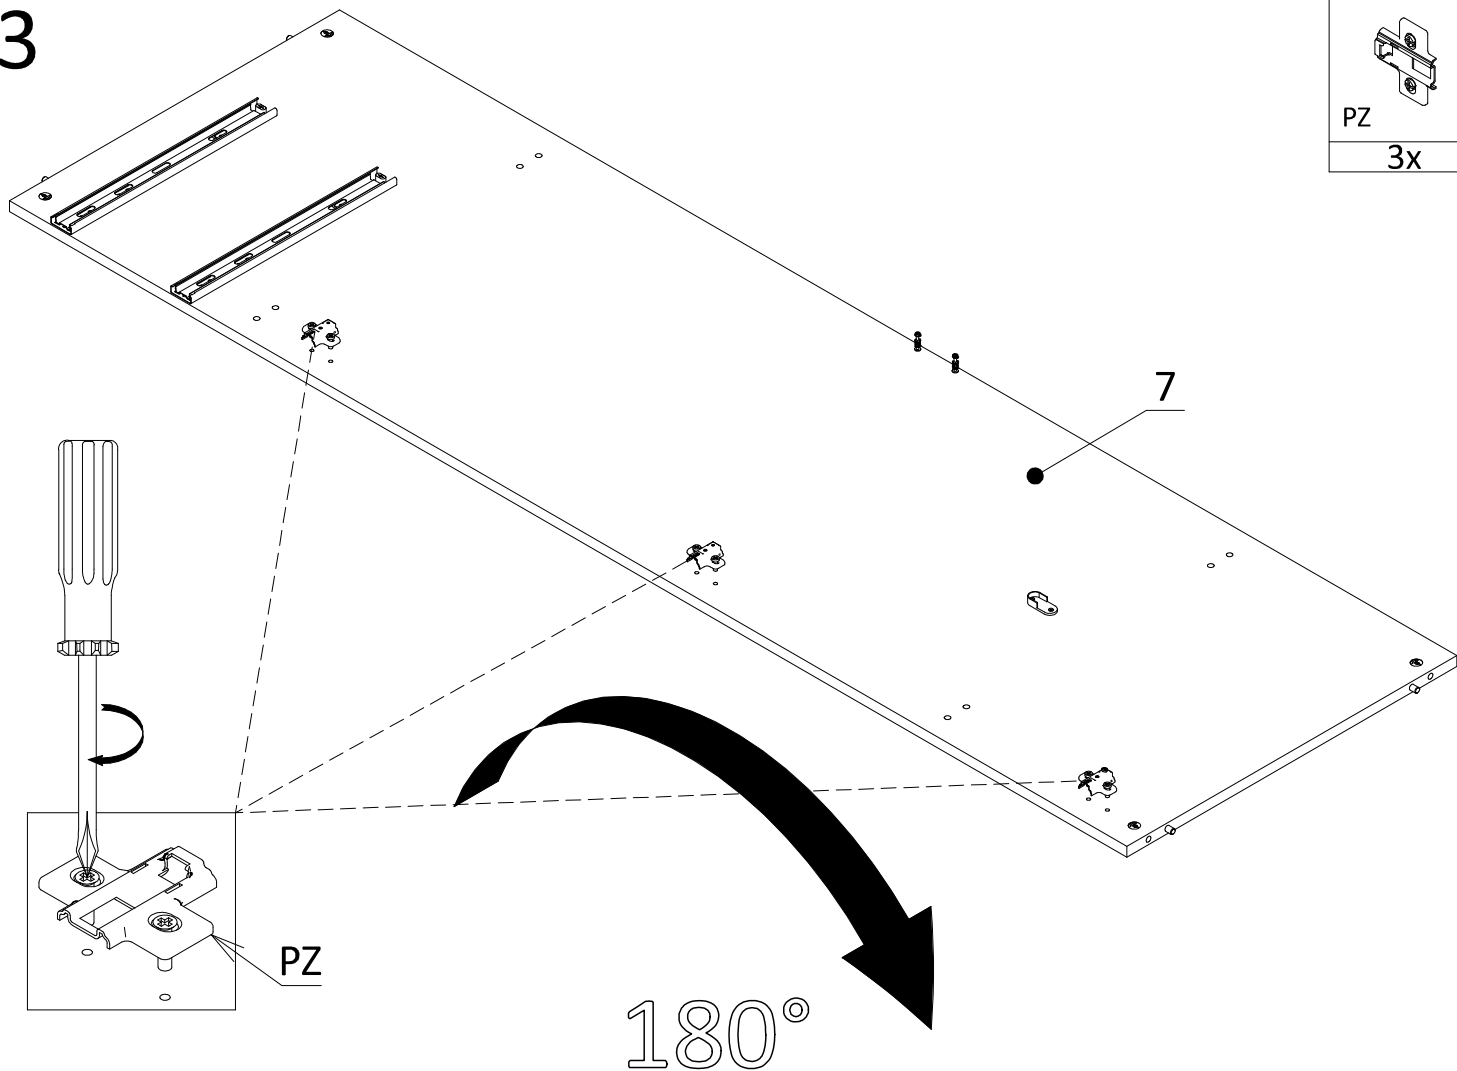


PZ
3x


14

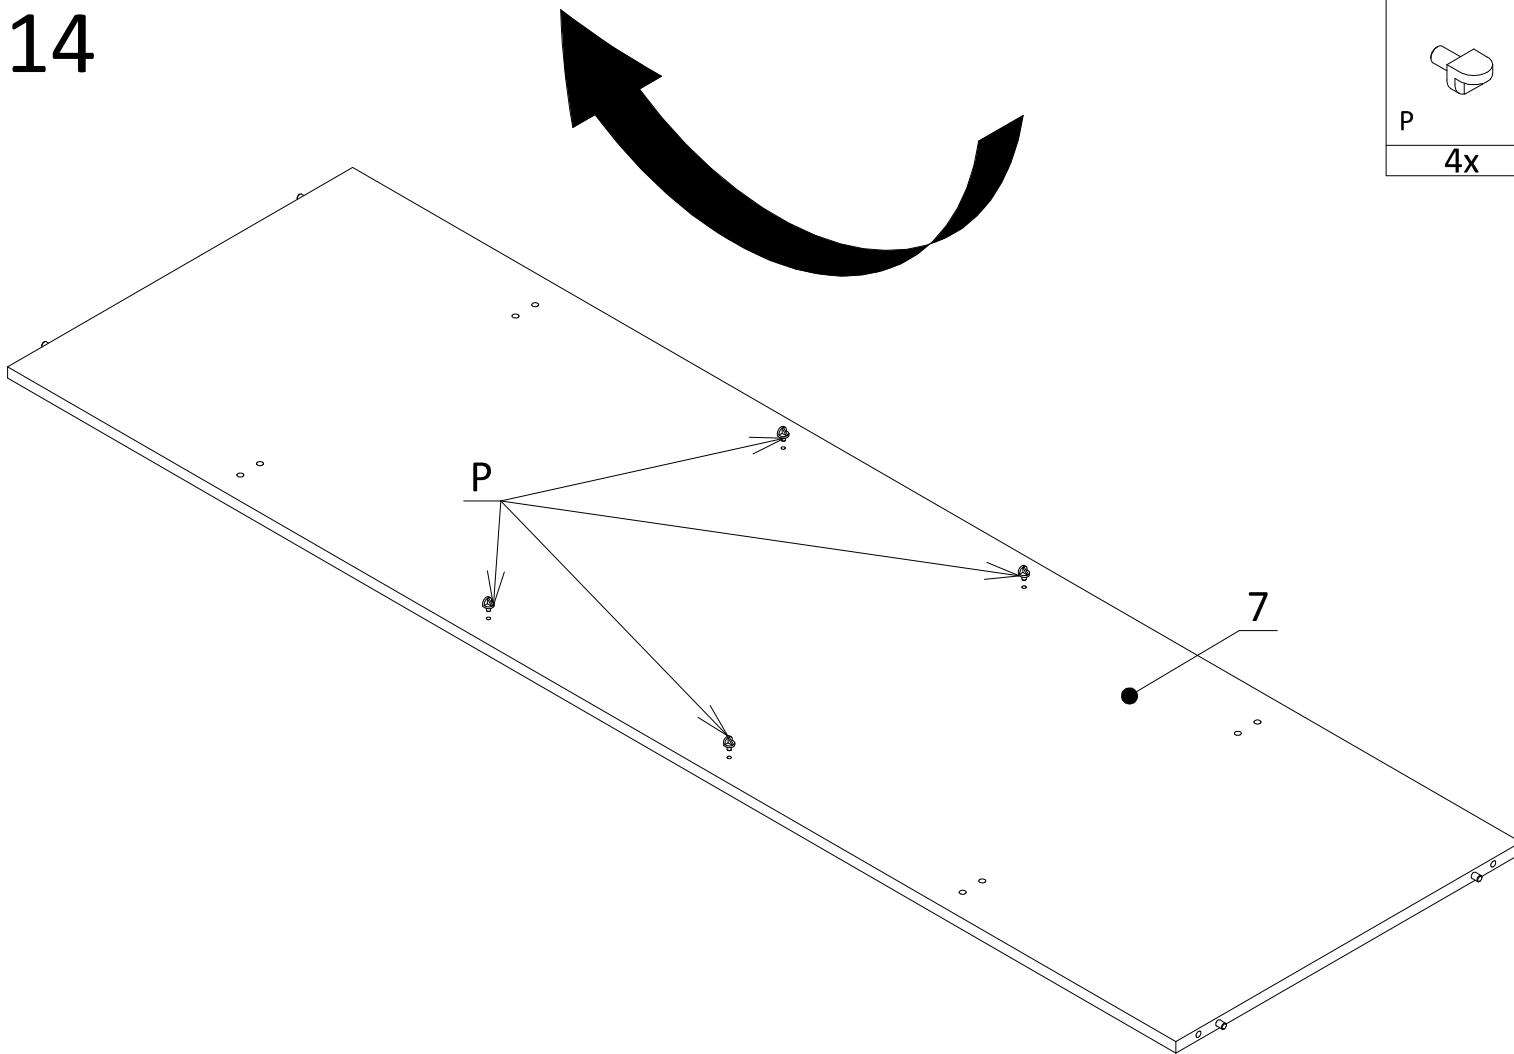


P
4x


15

	
D4	Z1
6x	3x

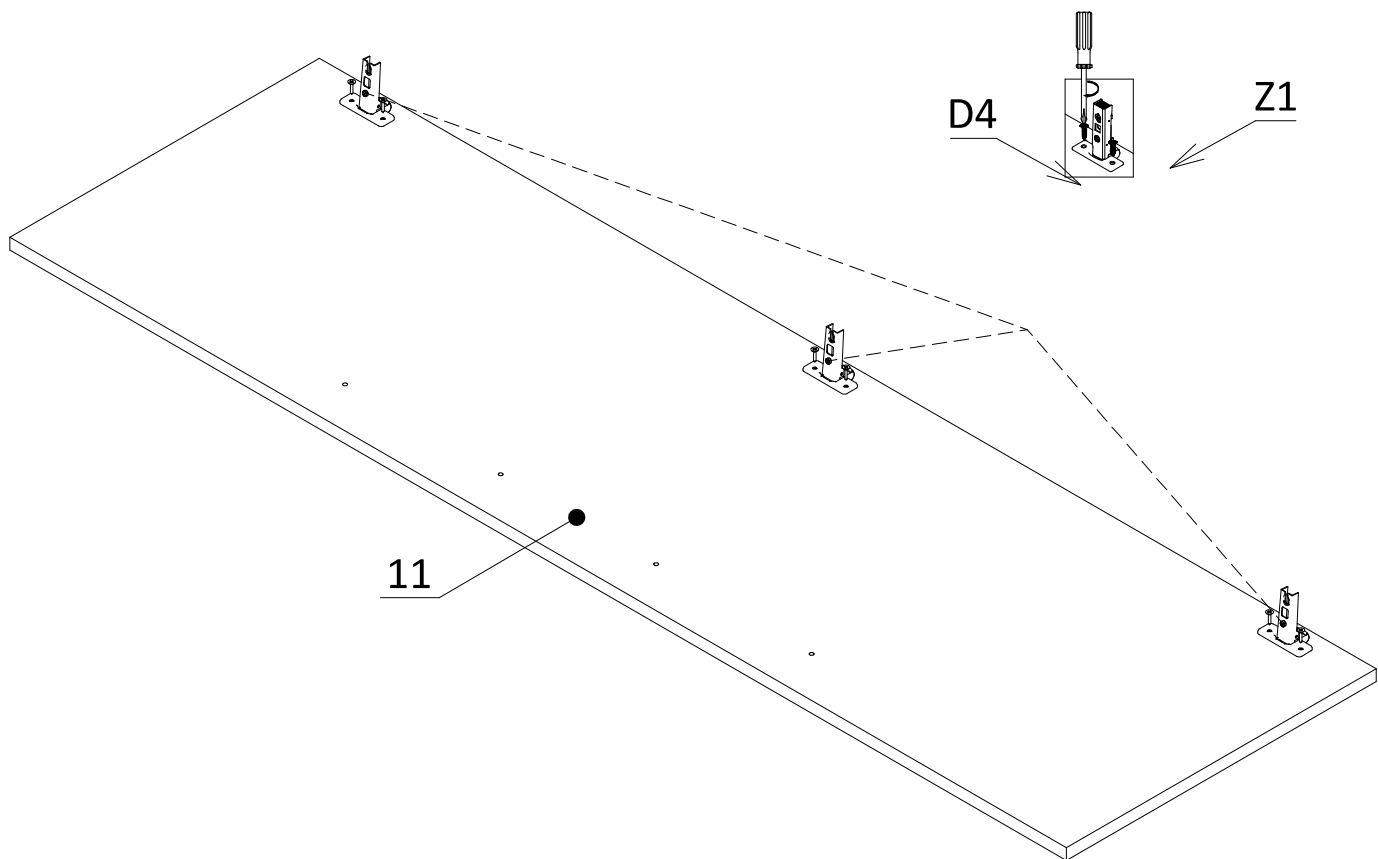



16

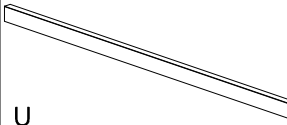	
U	D3
1x	4x


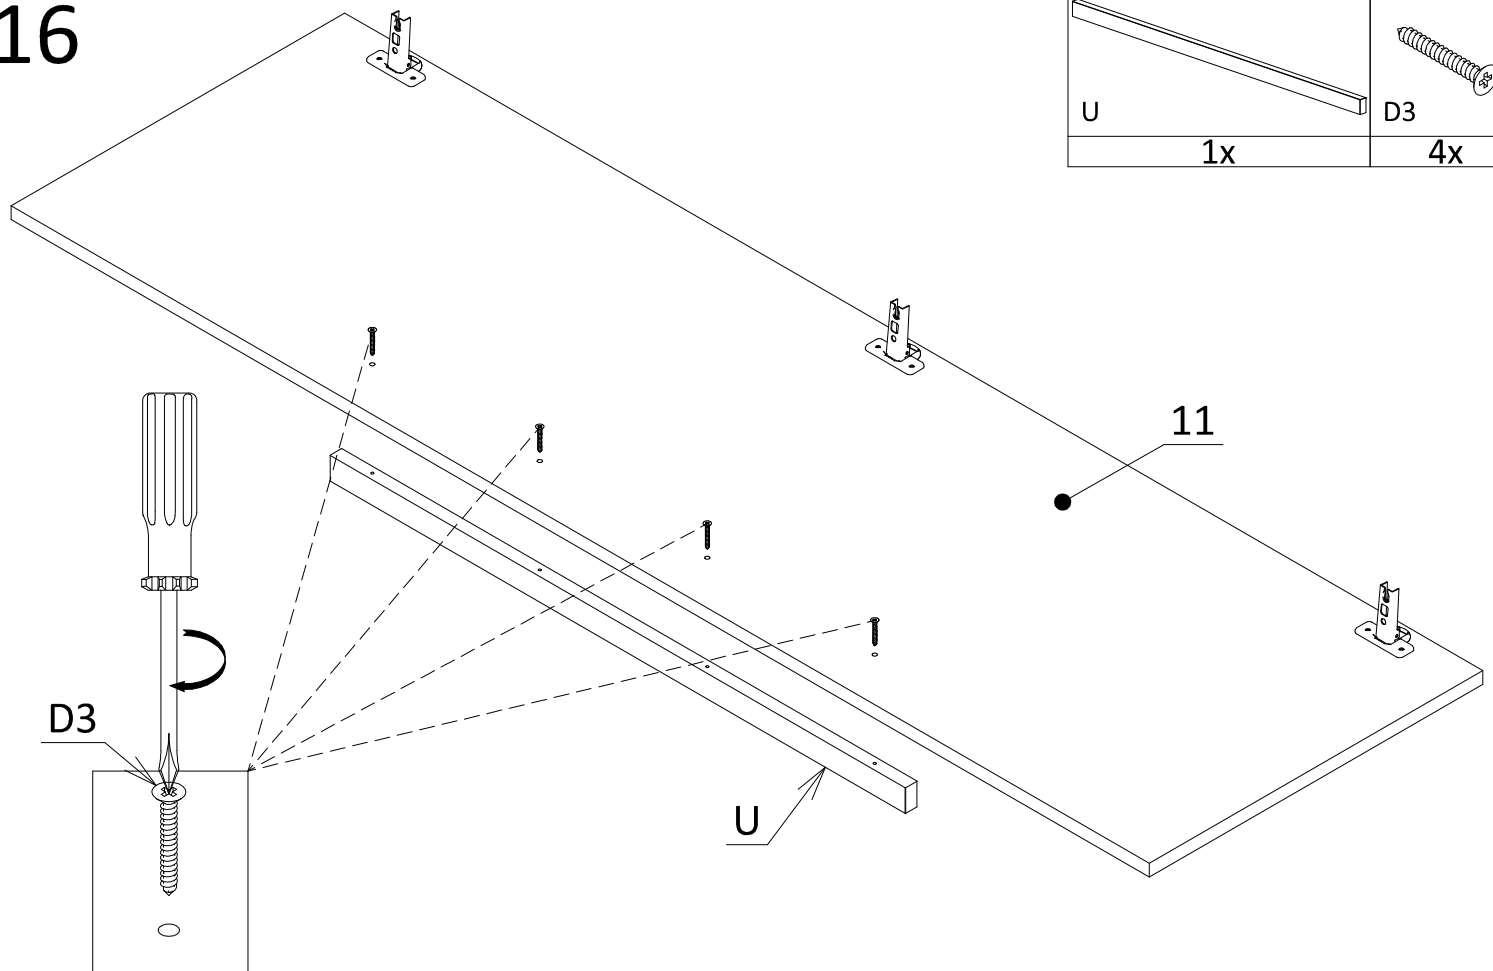



17

	
D4	Z1
6x	3x

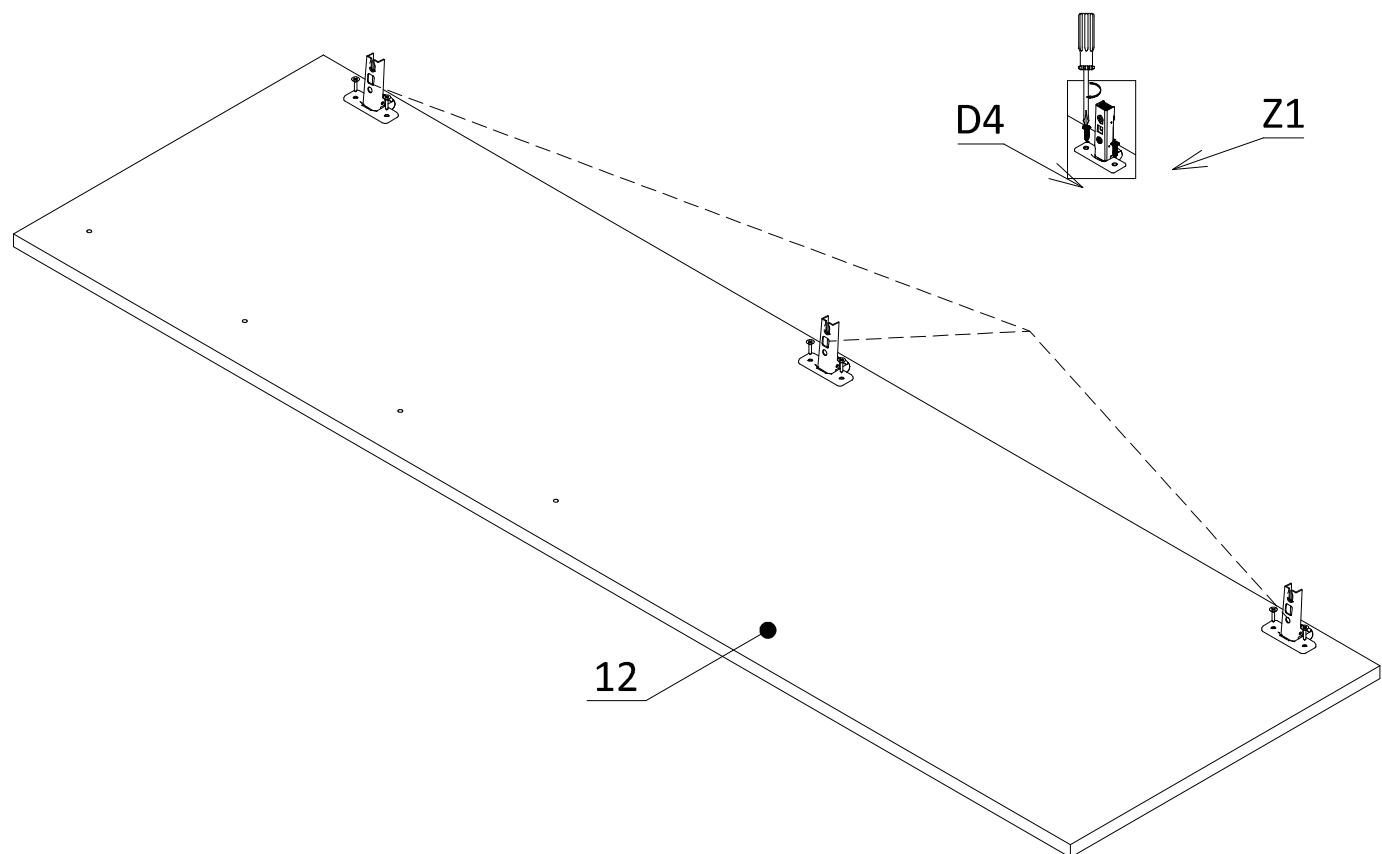



18

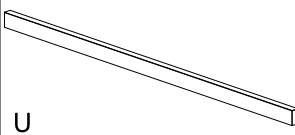	
U	D3
1x	4x

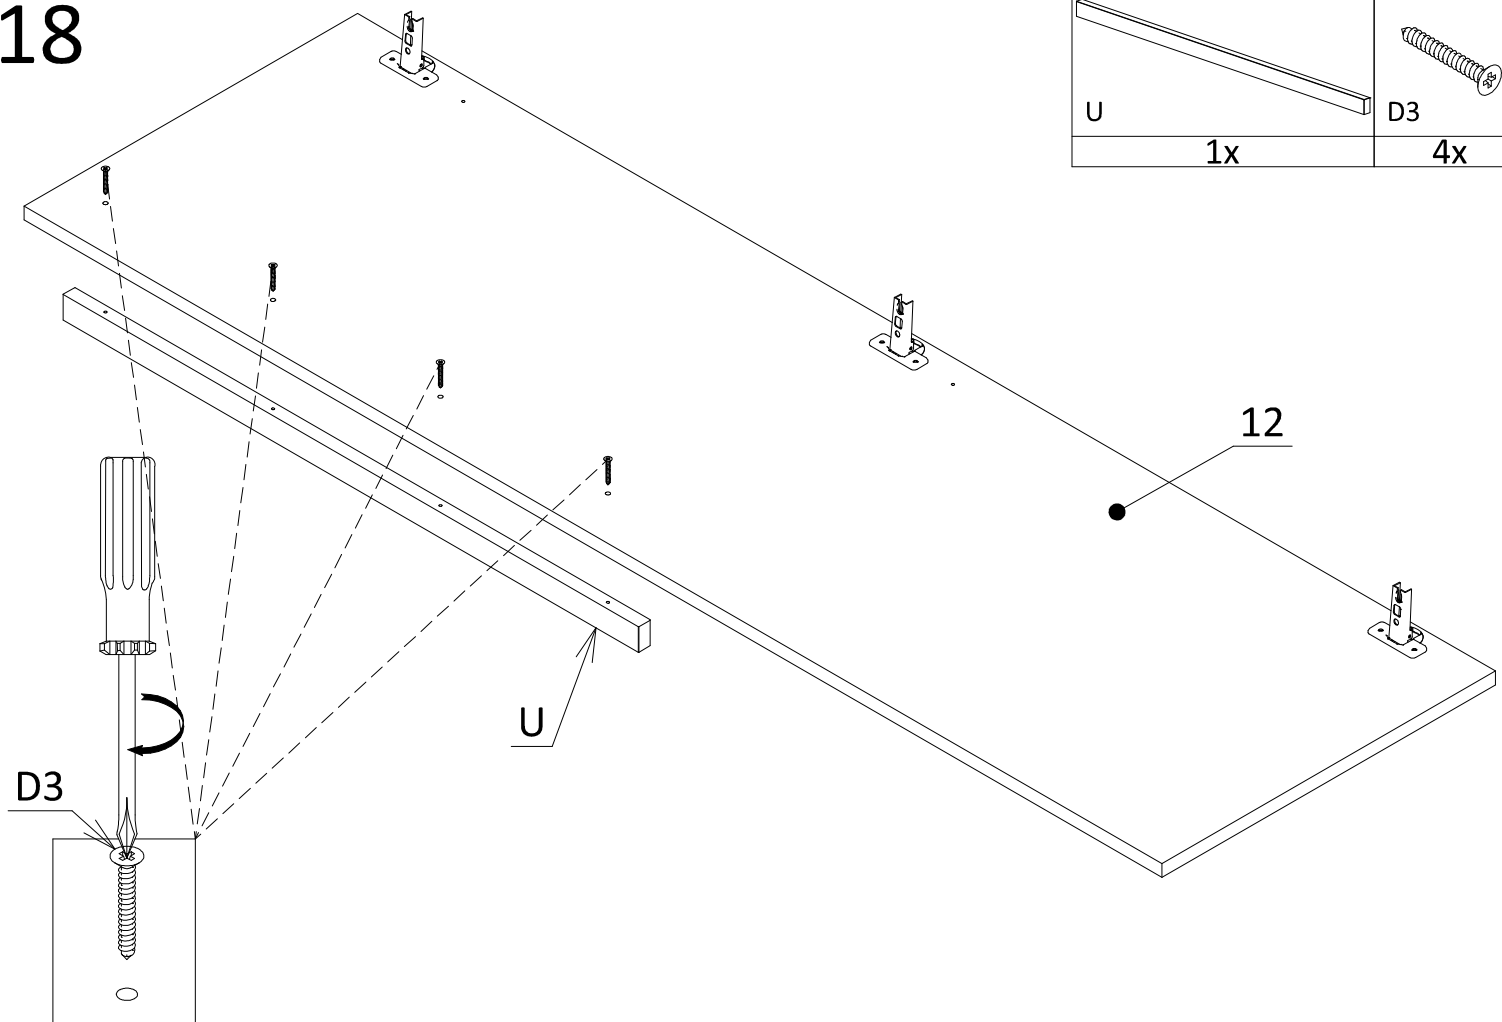



19

	
D4	Z1
6x	3x

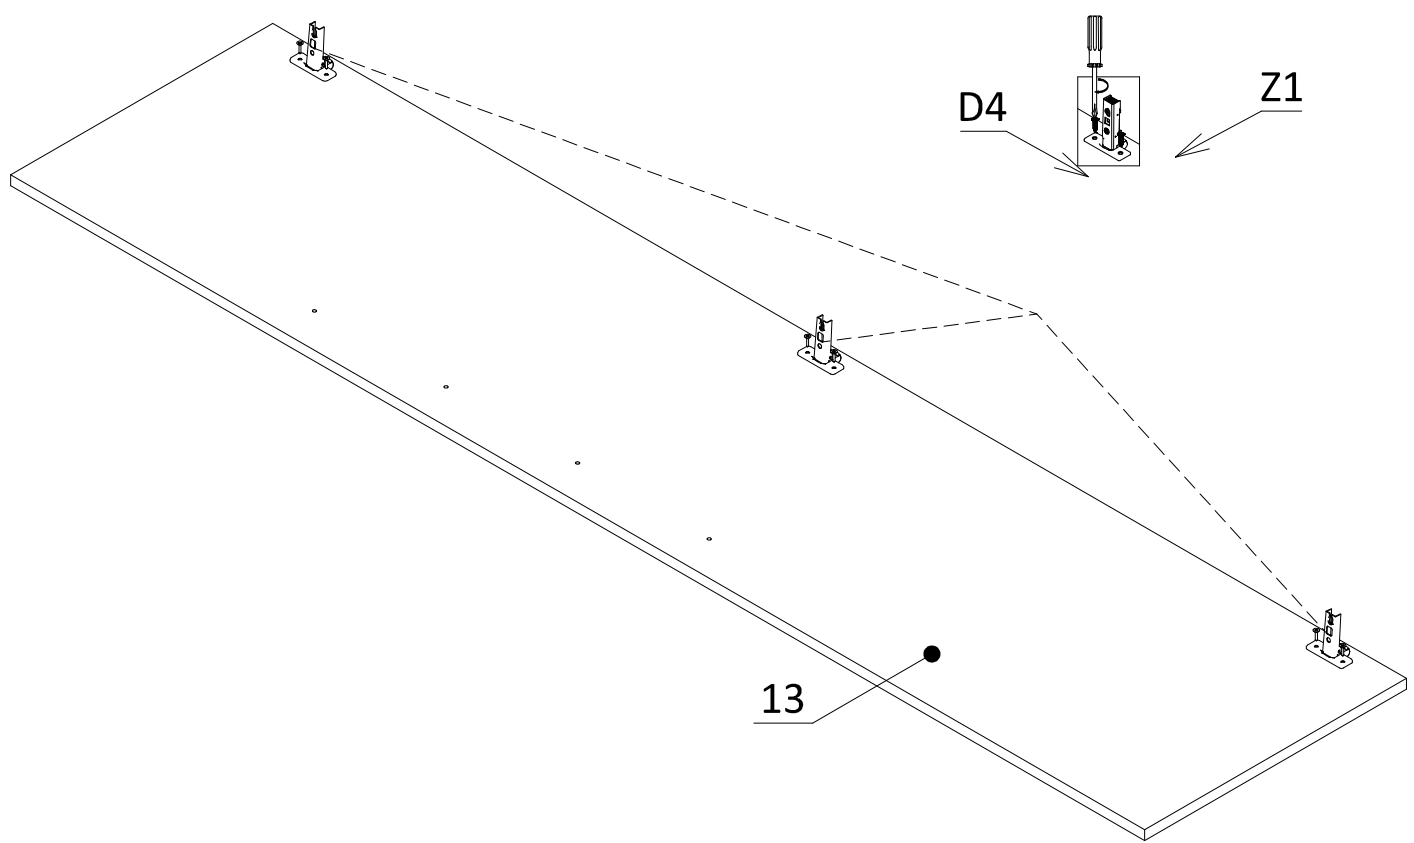


20

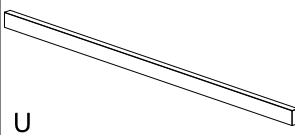
	
U	D3
1x	4x

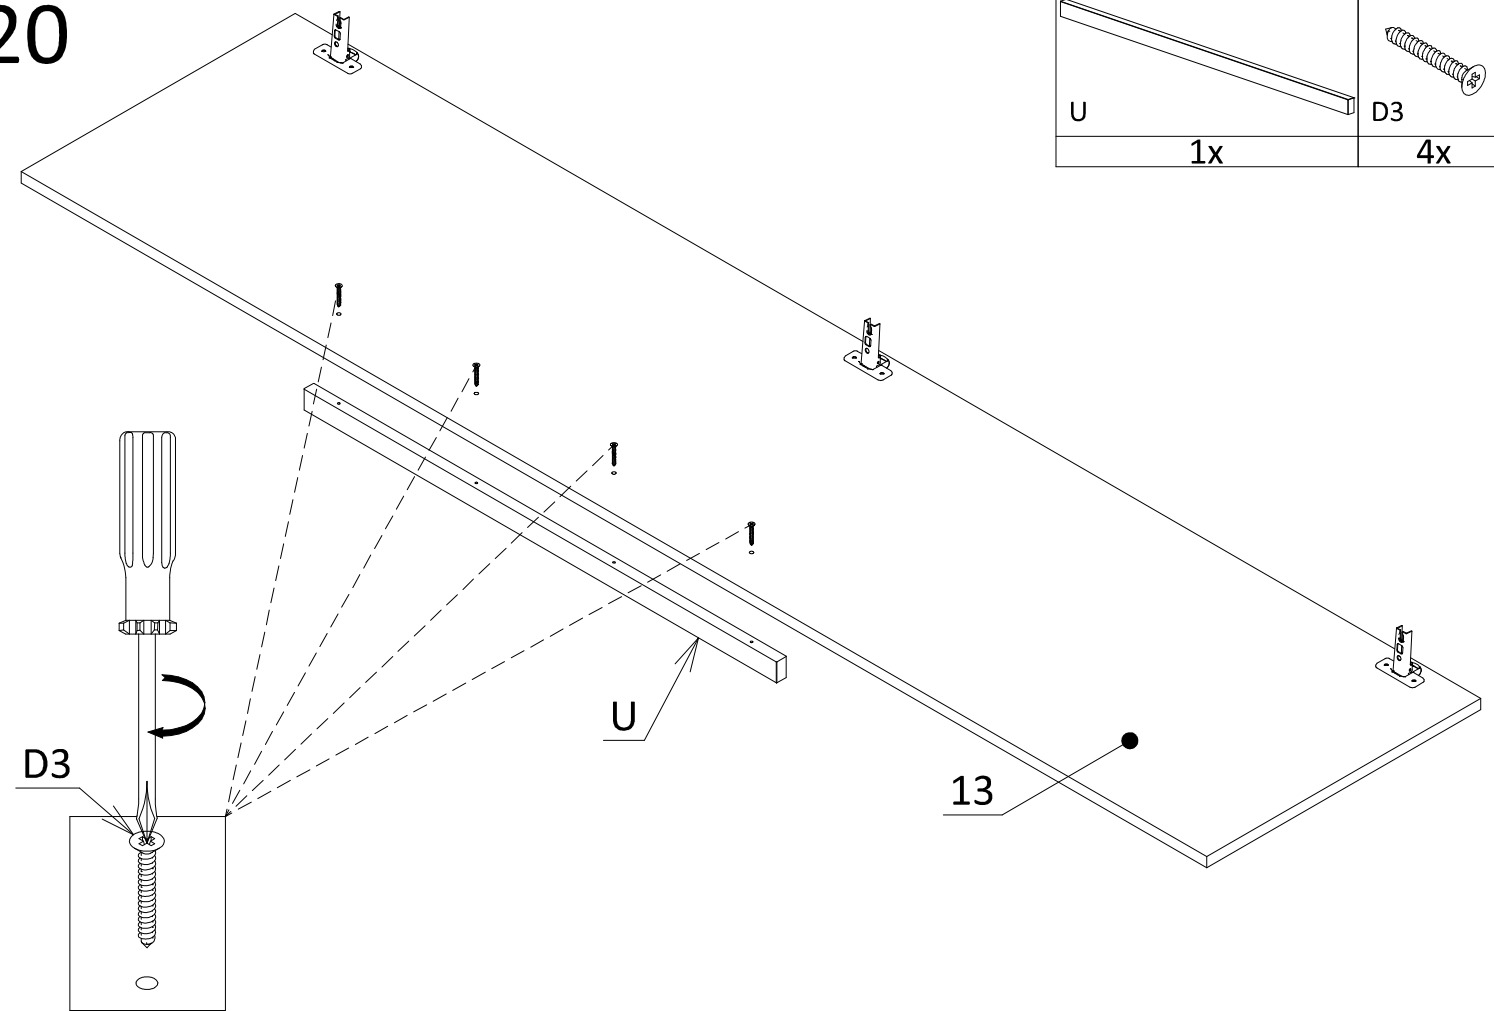


21

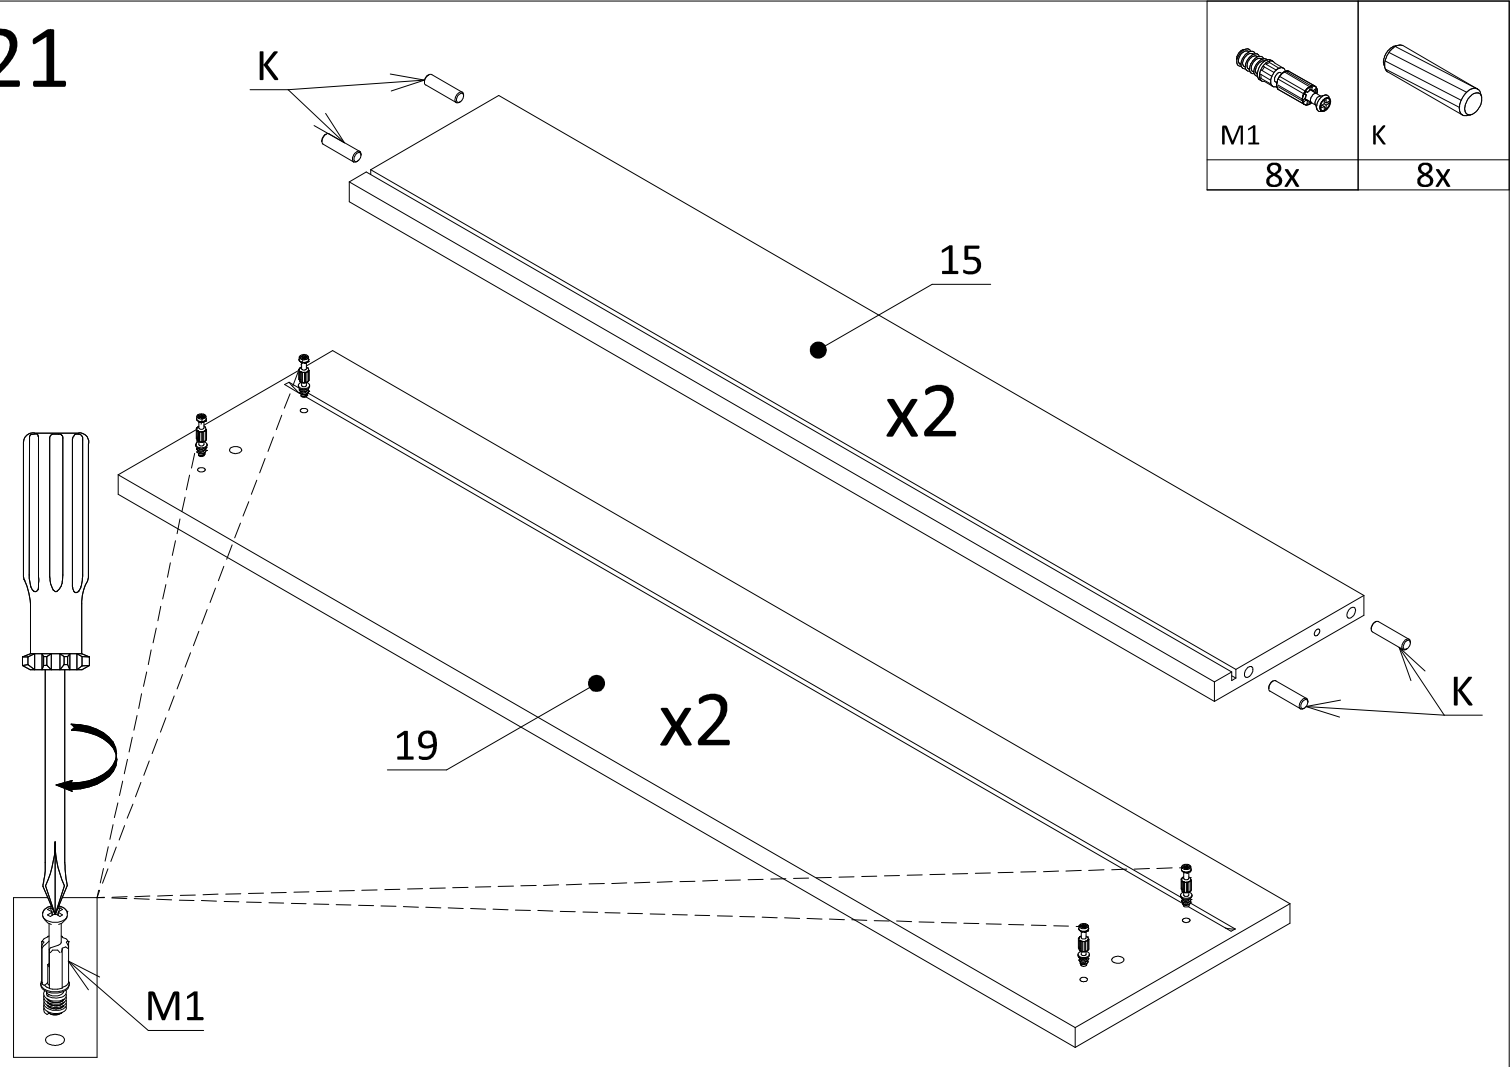


22

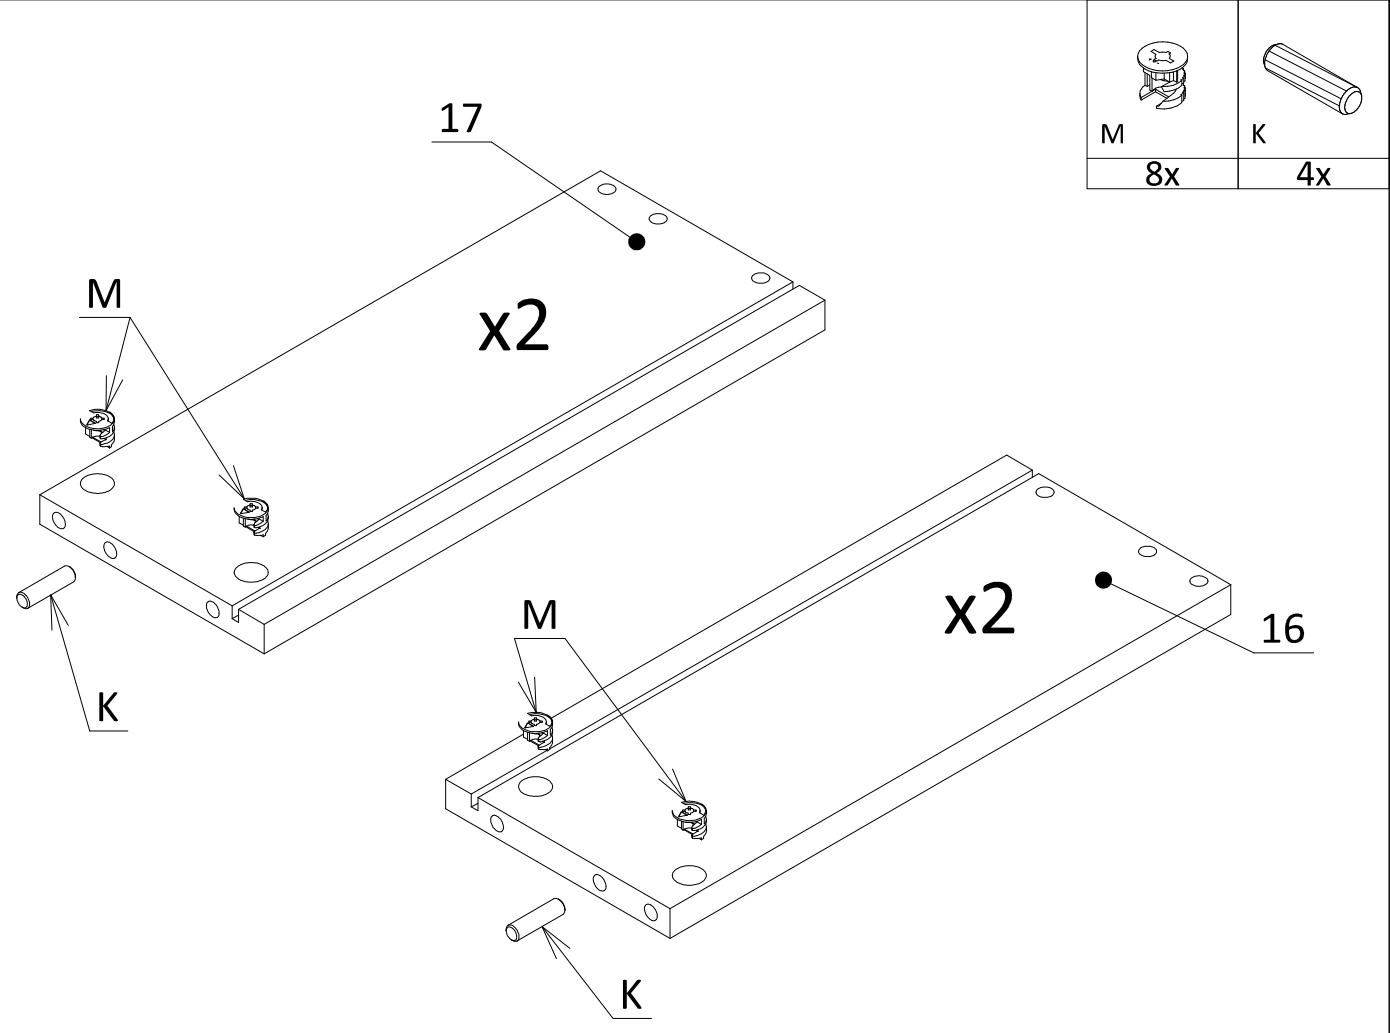


23

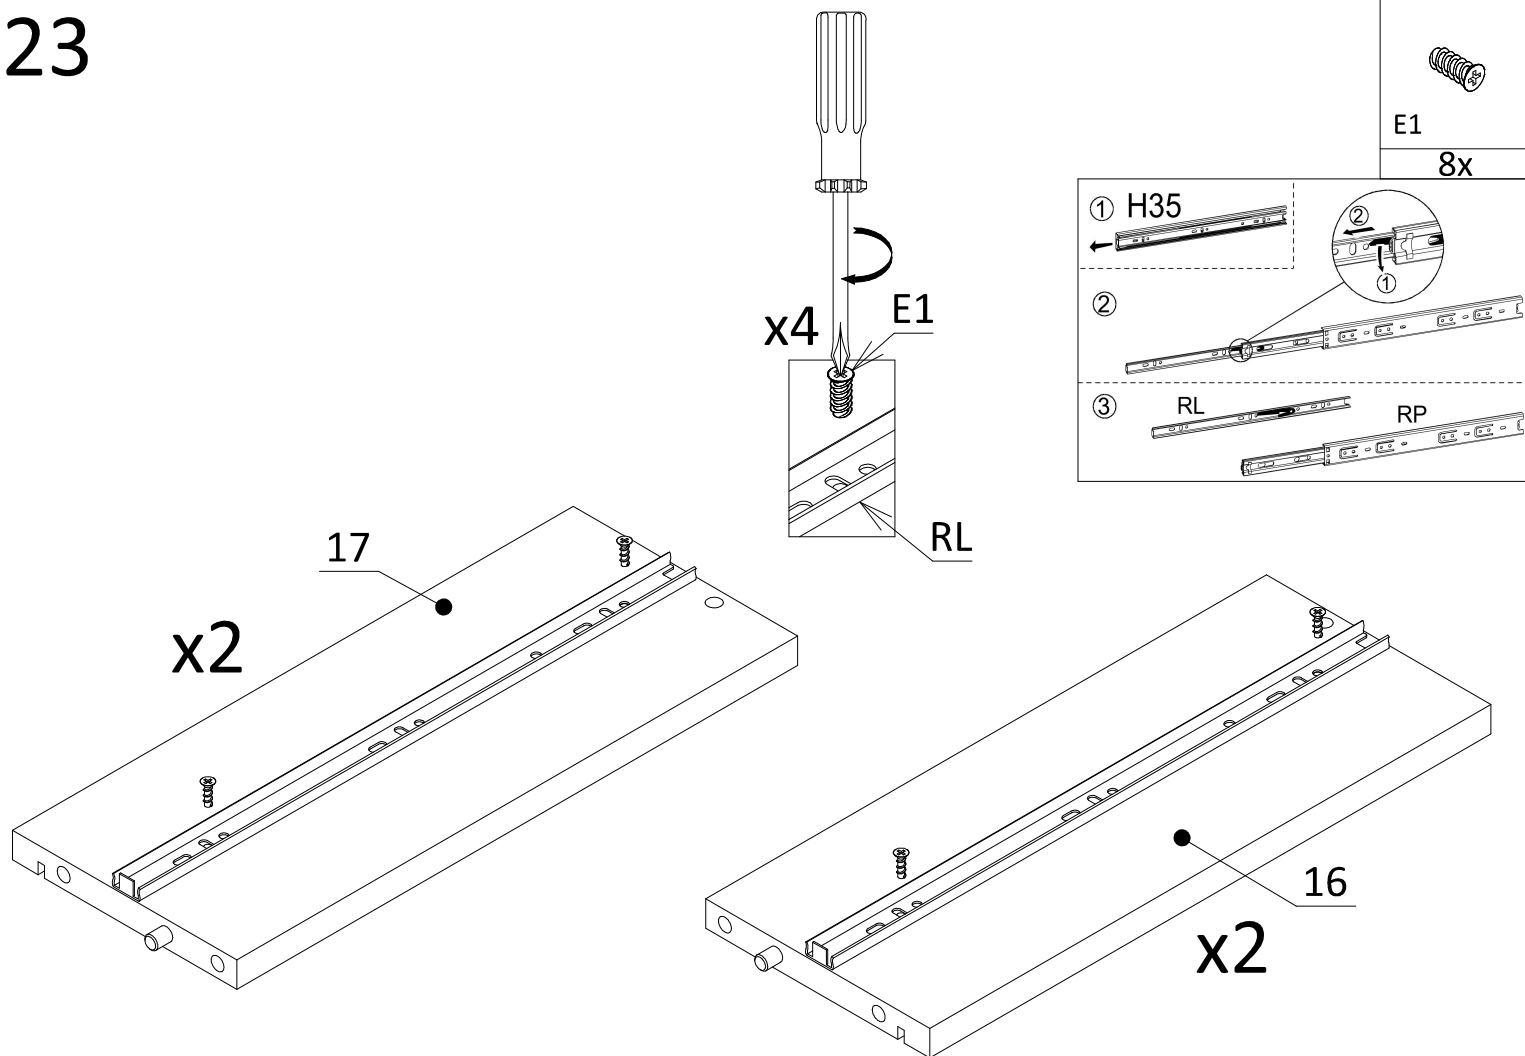


24

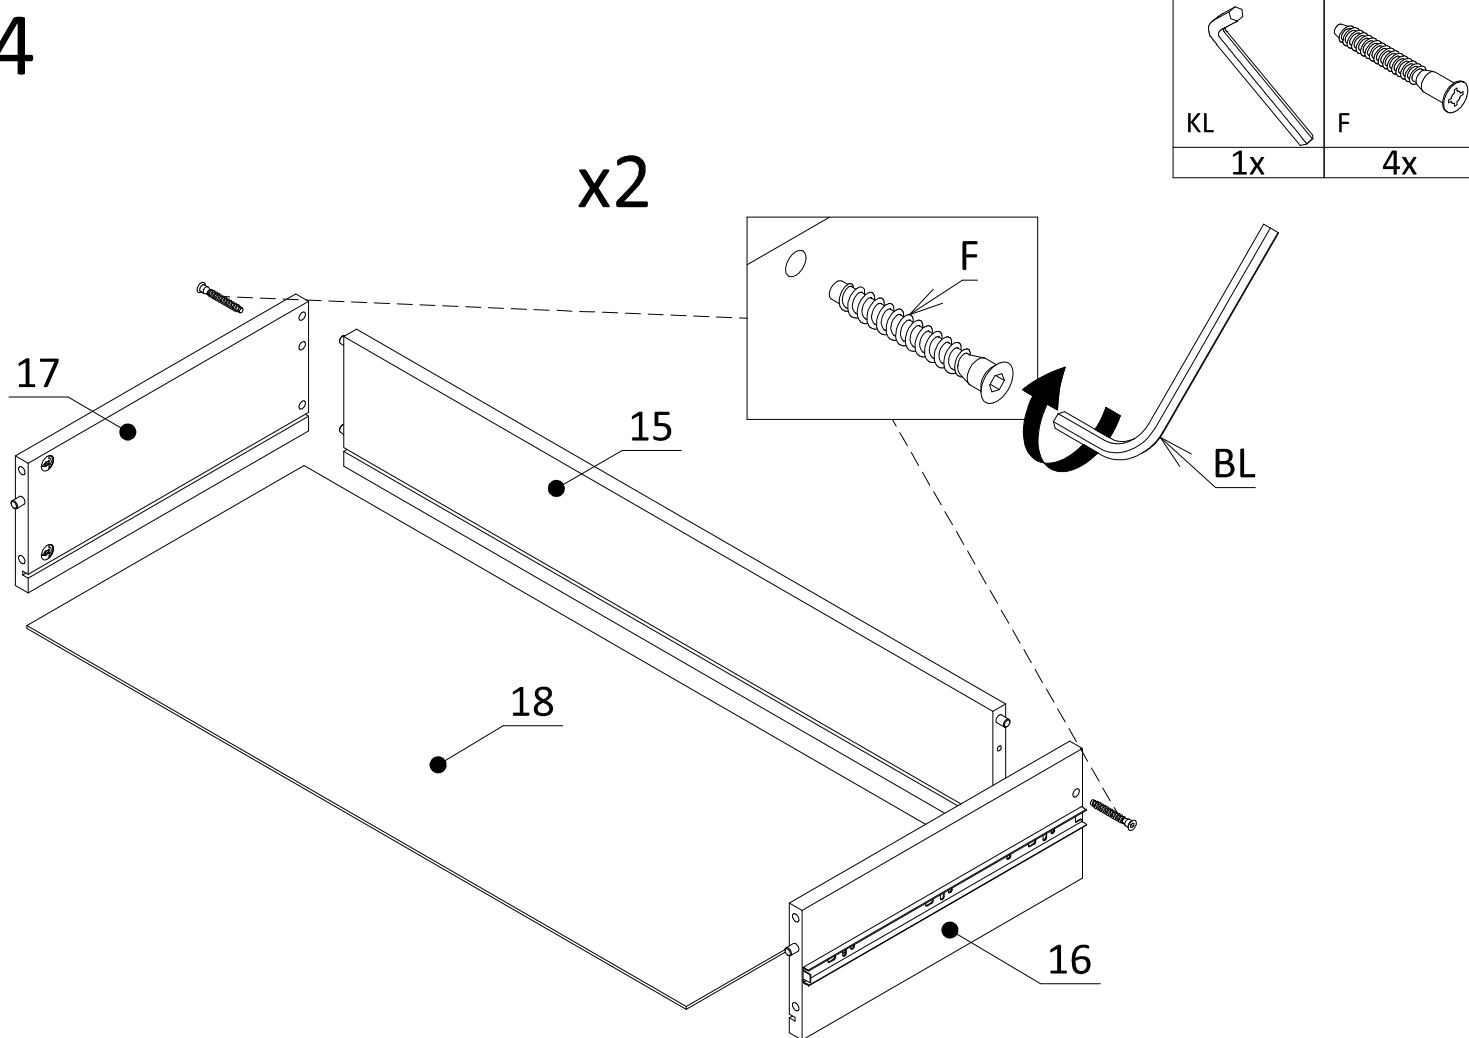


25

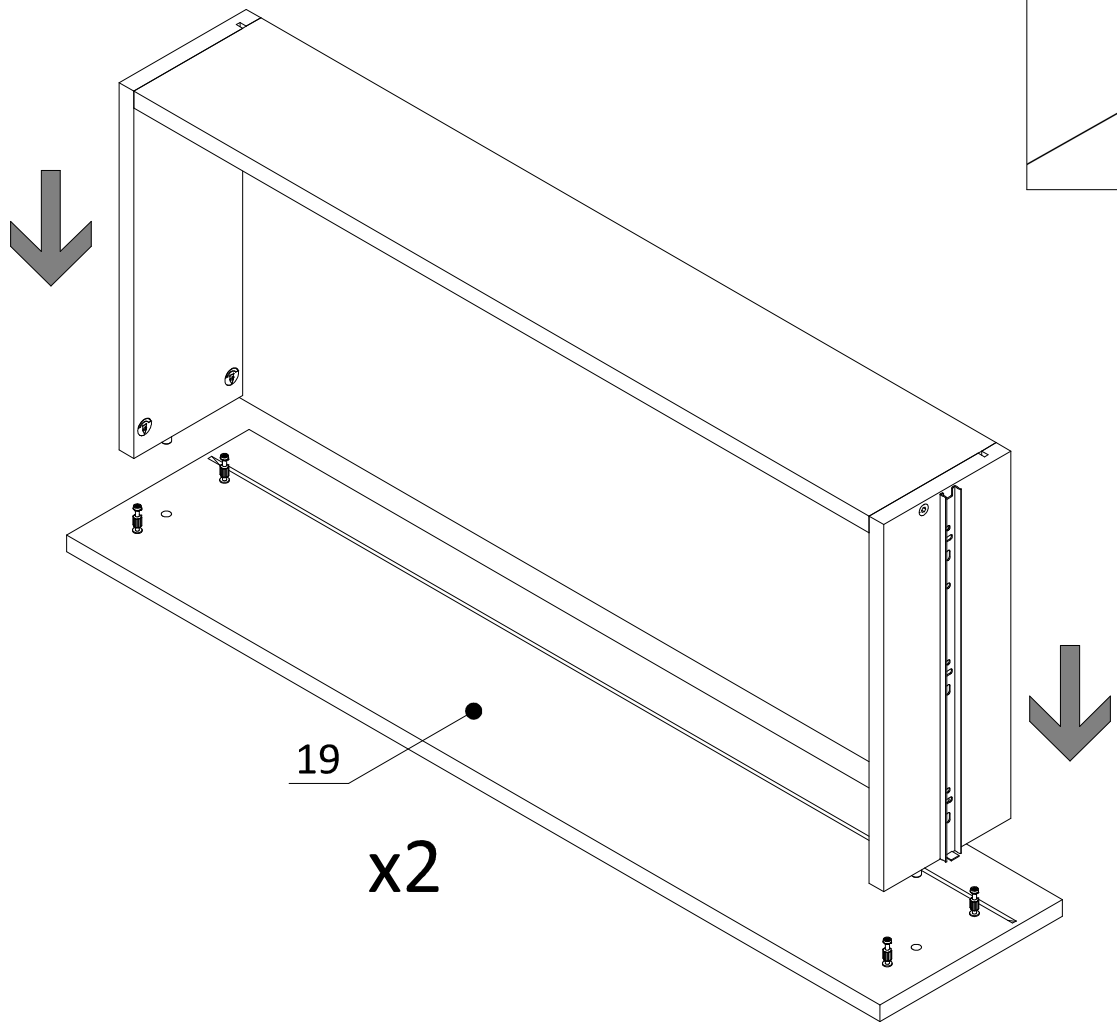


26

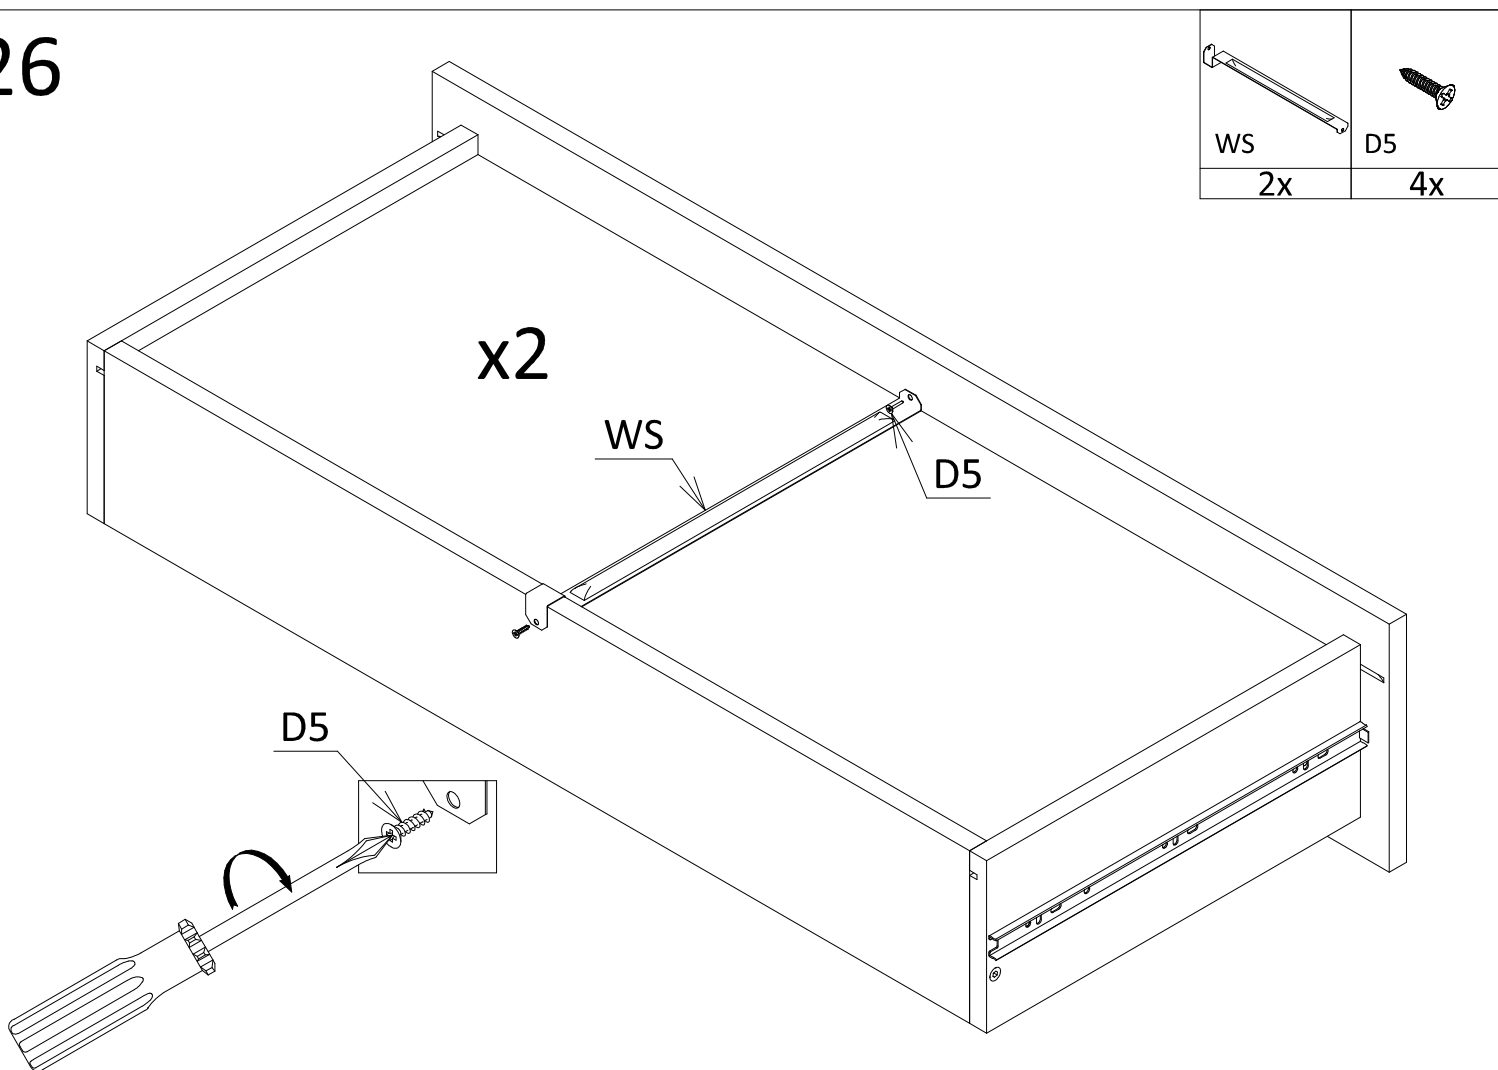


27

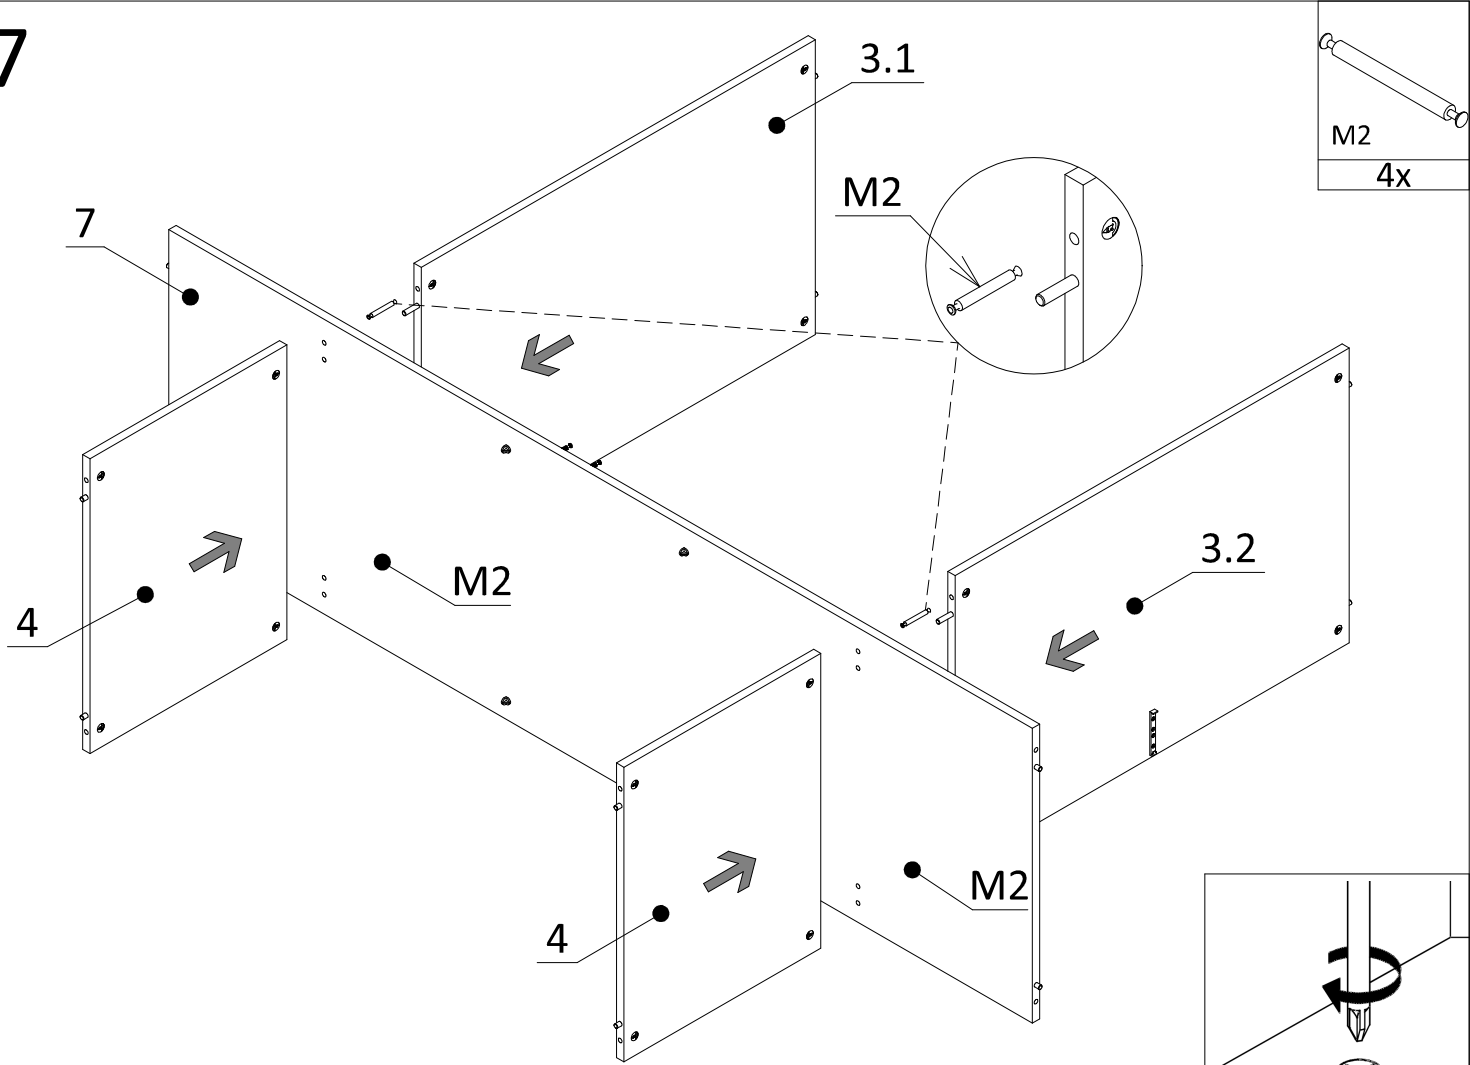


28


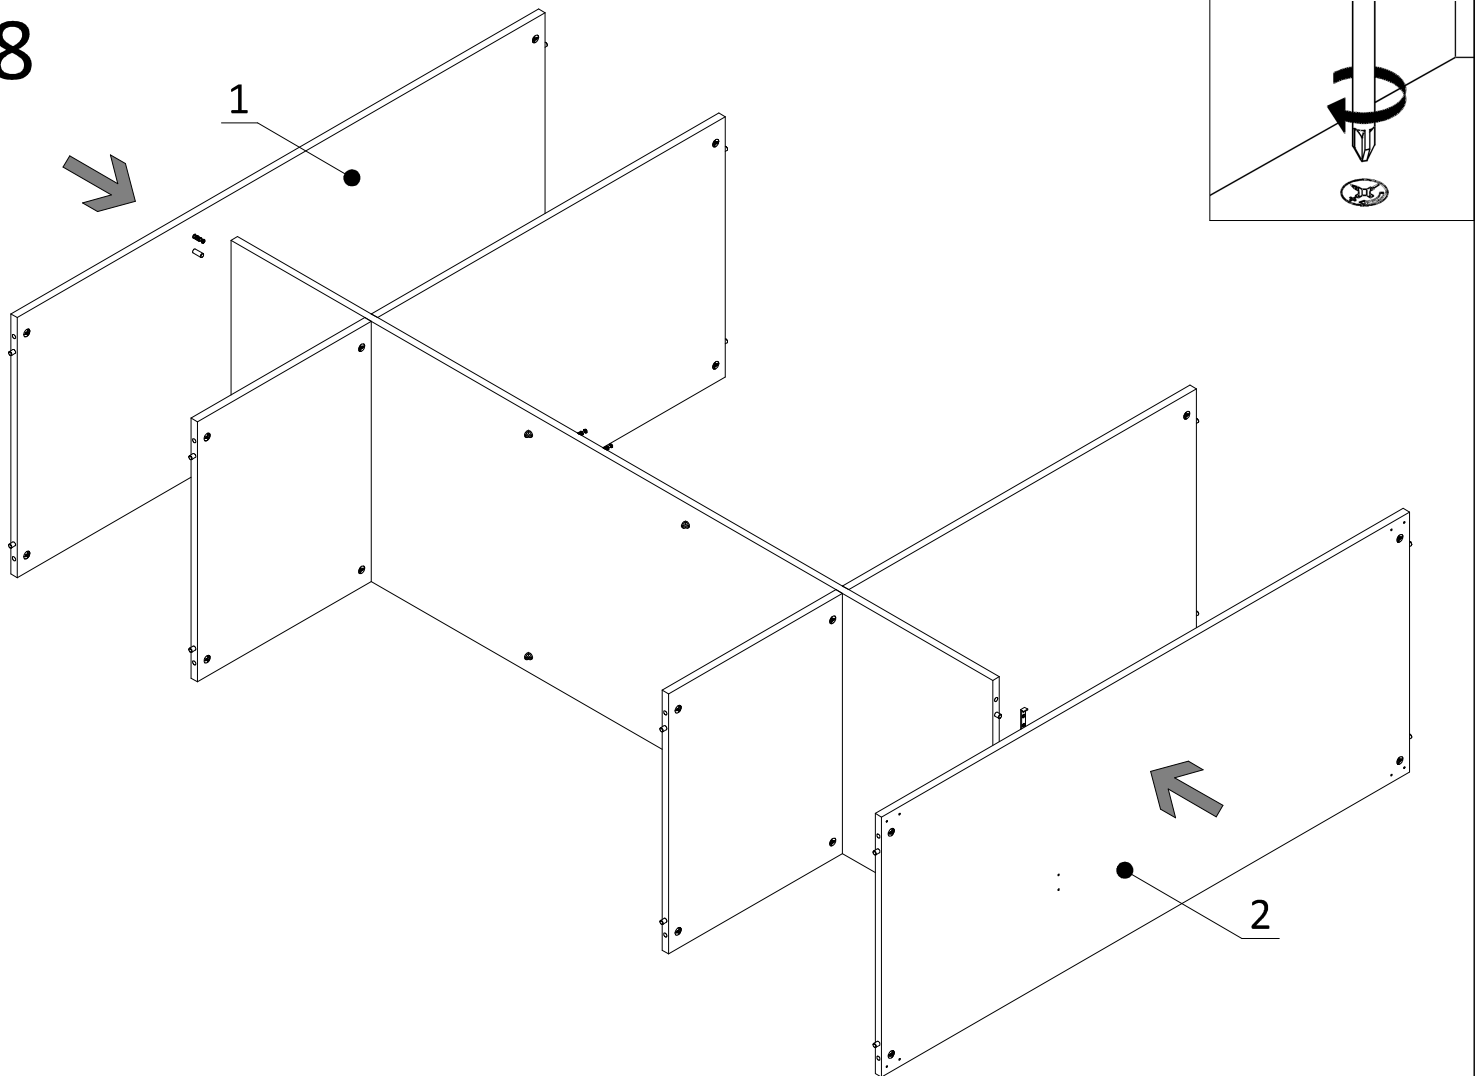




29

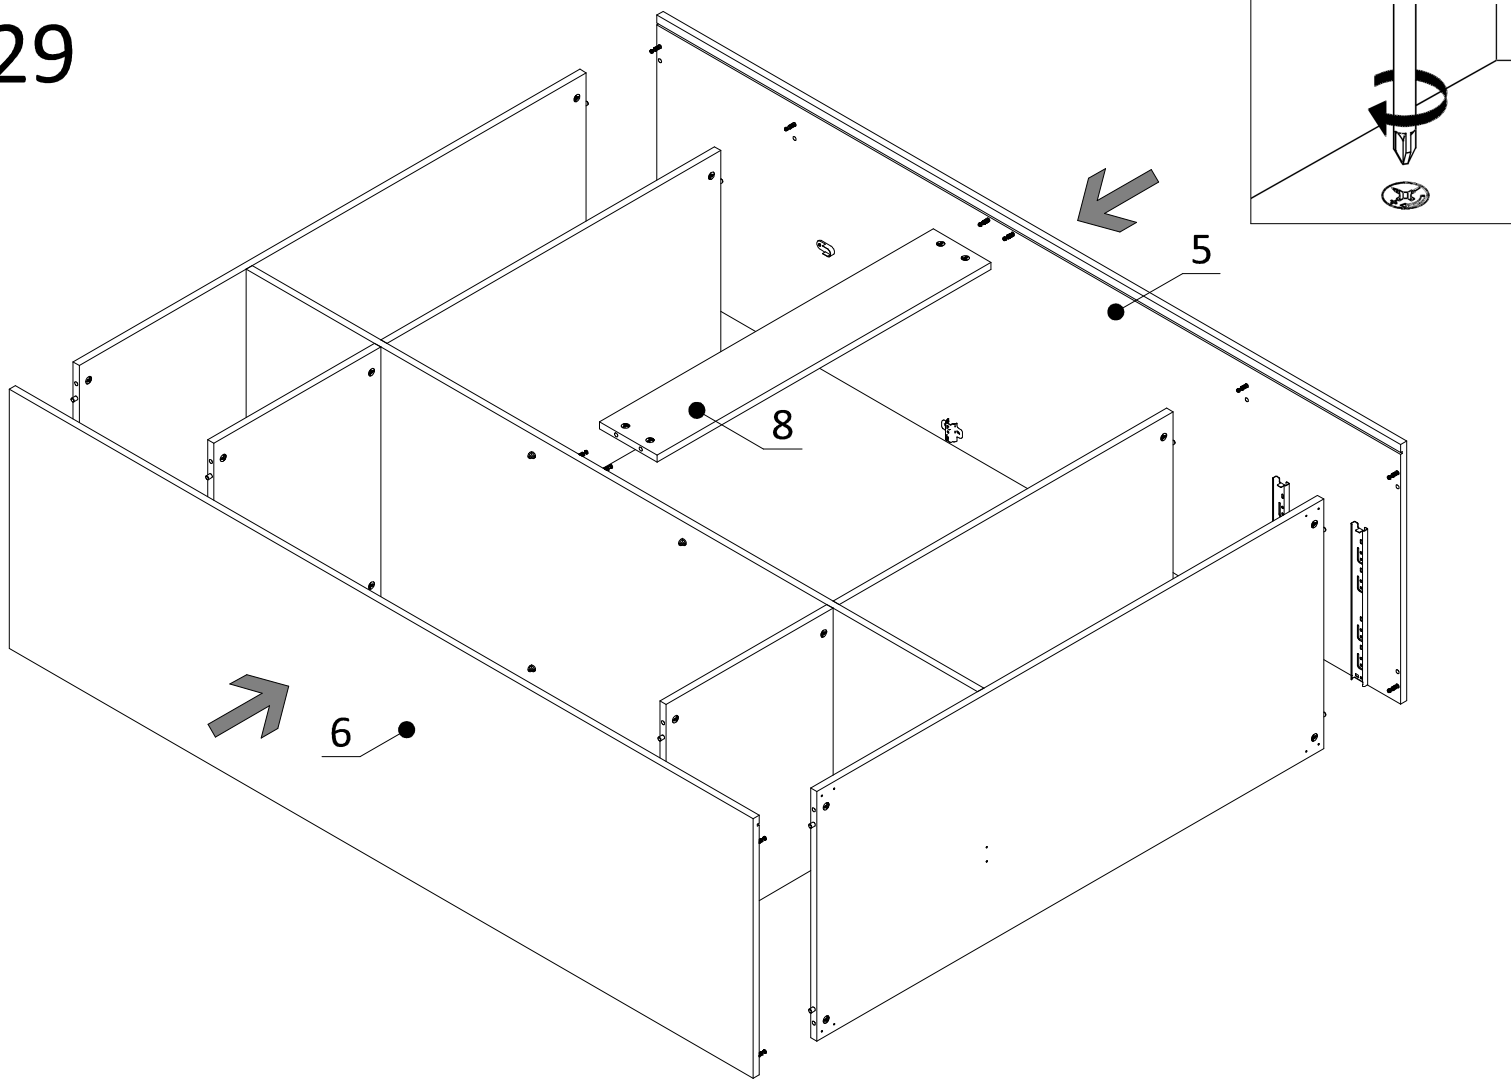


30

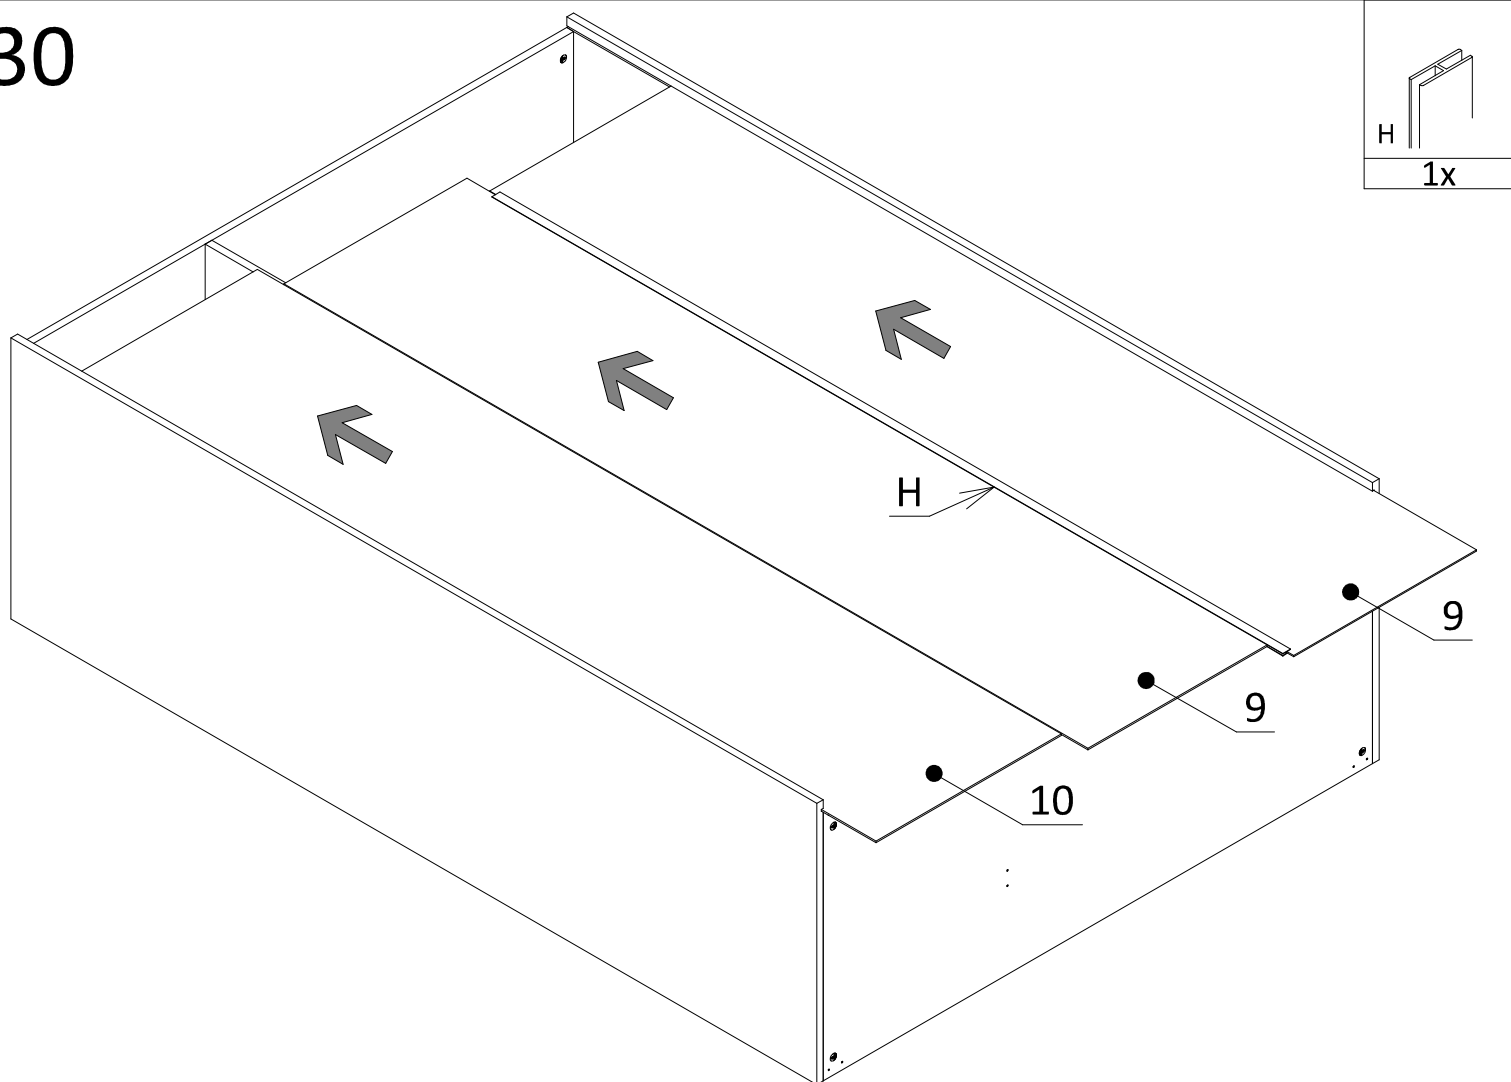


			
D6	BL	S	G
18x	18x	10x	56x

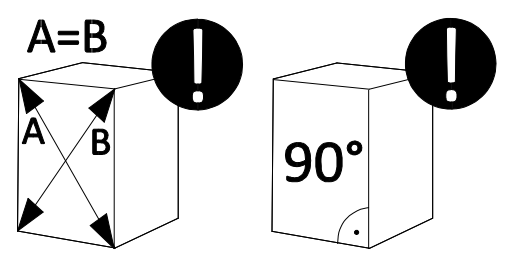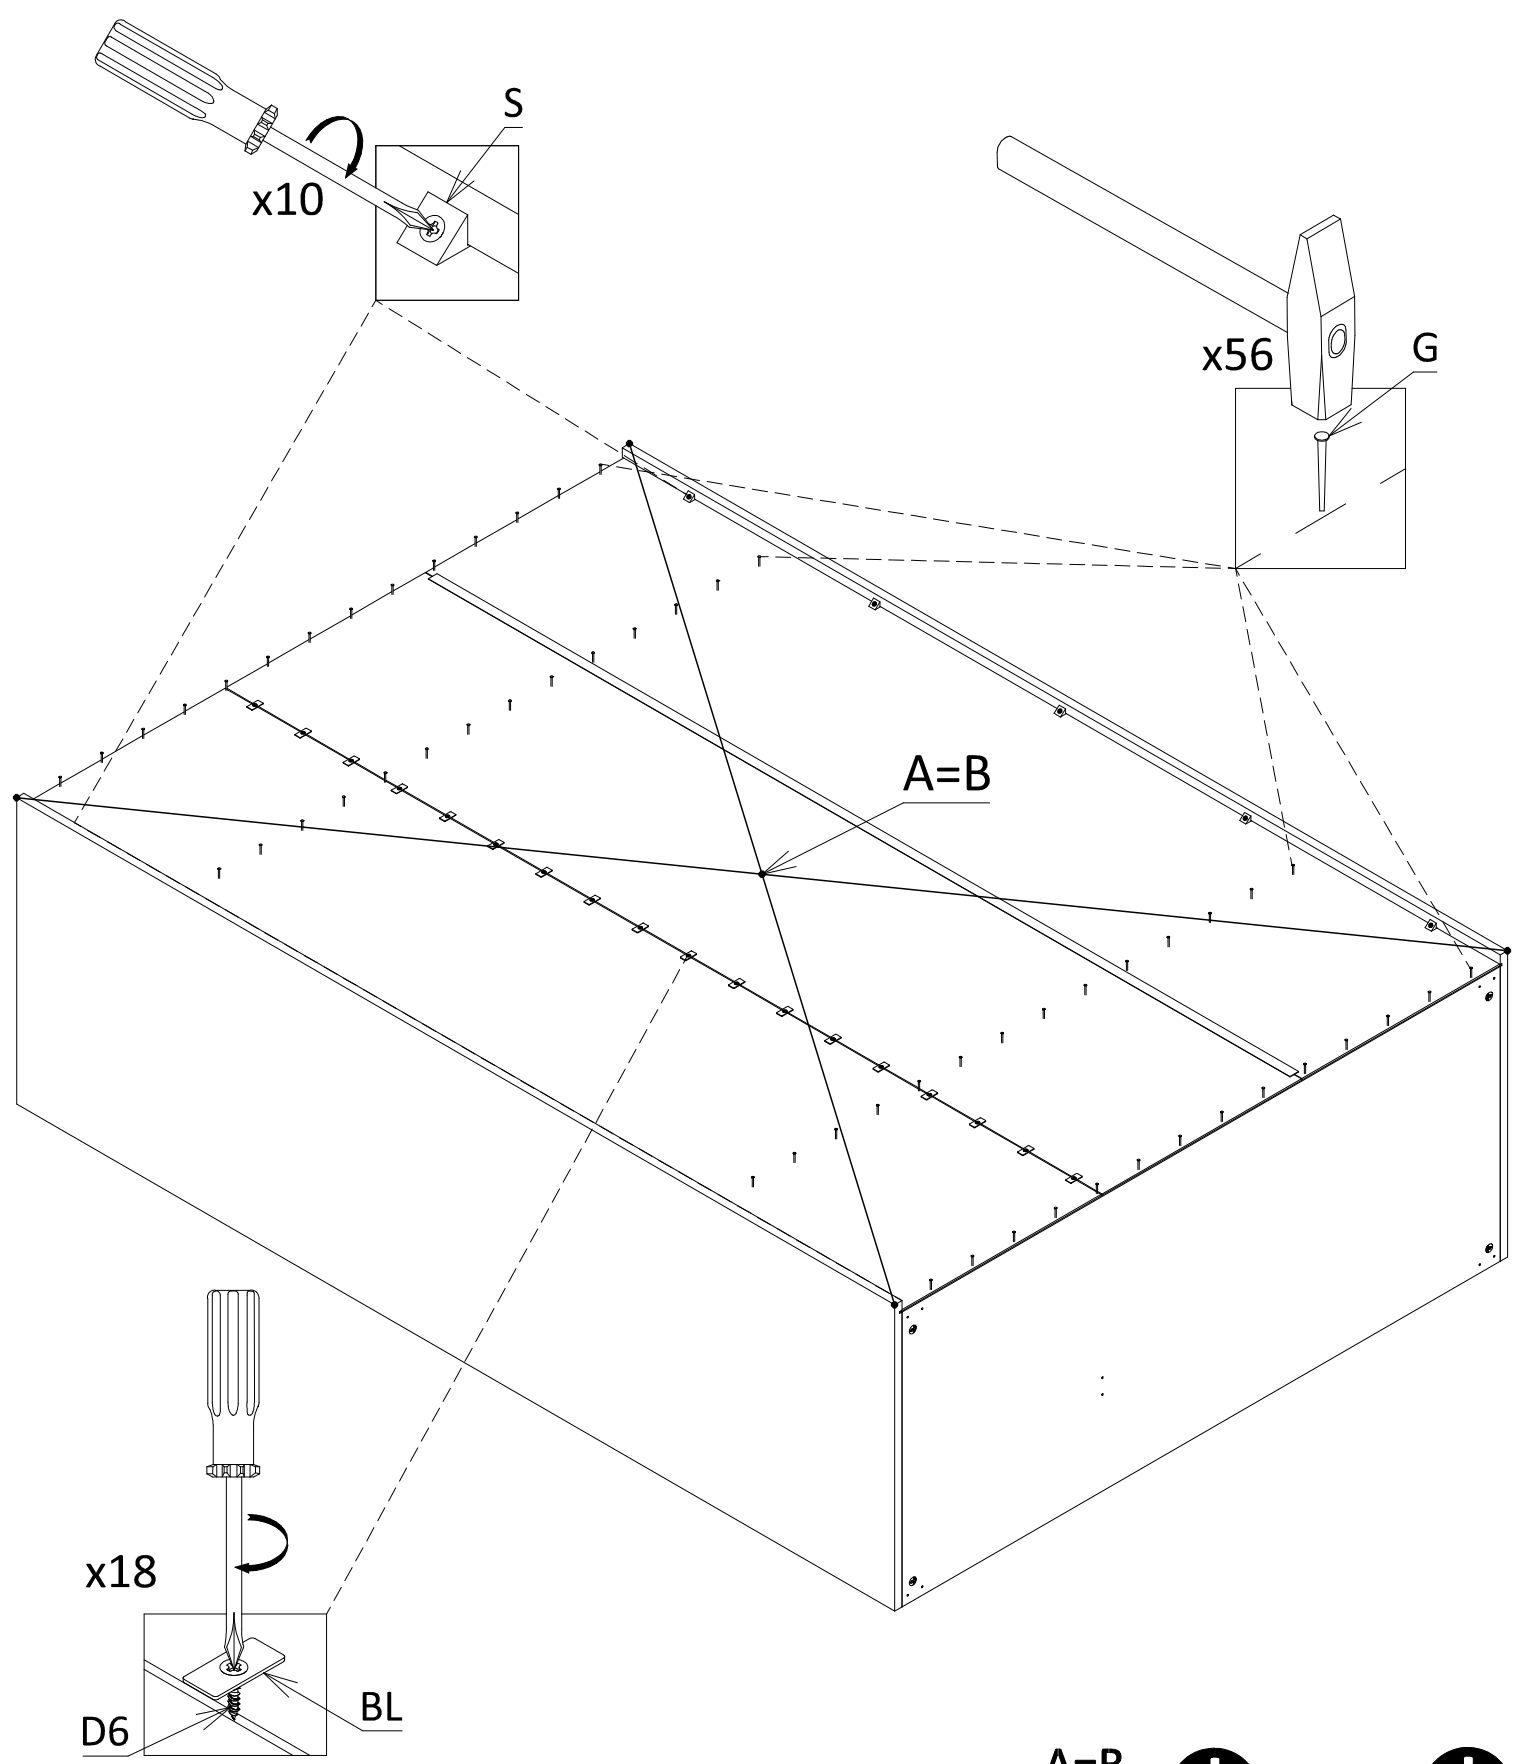




32

 N	 D2
5x	10x

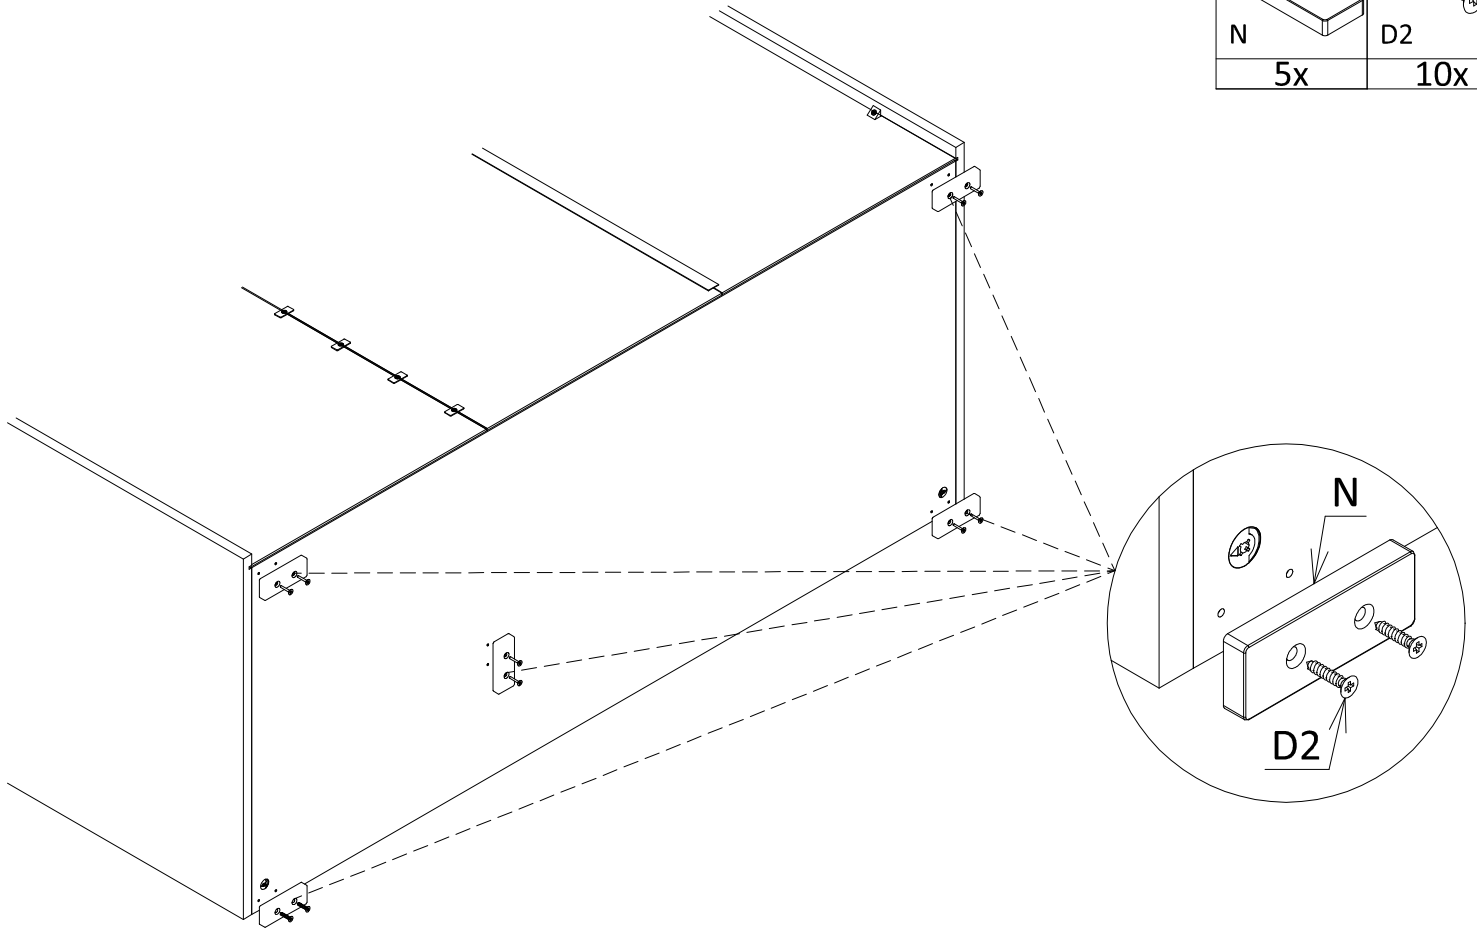


33

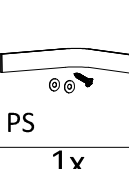
	 PS
	1x

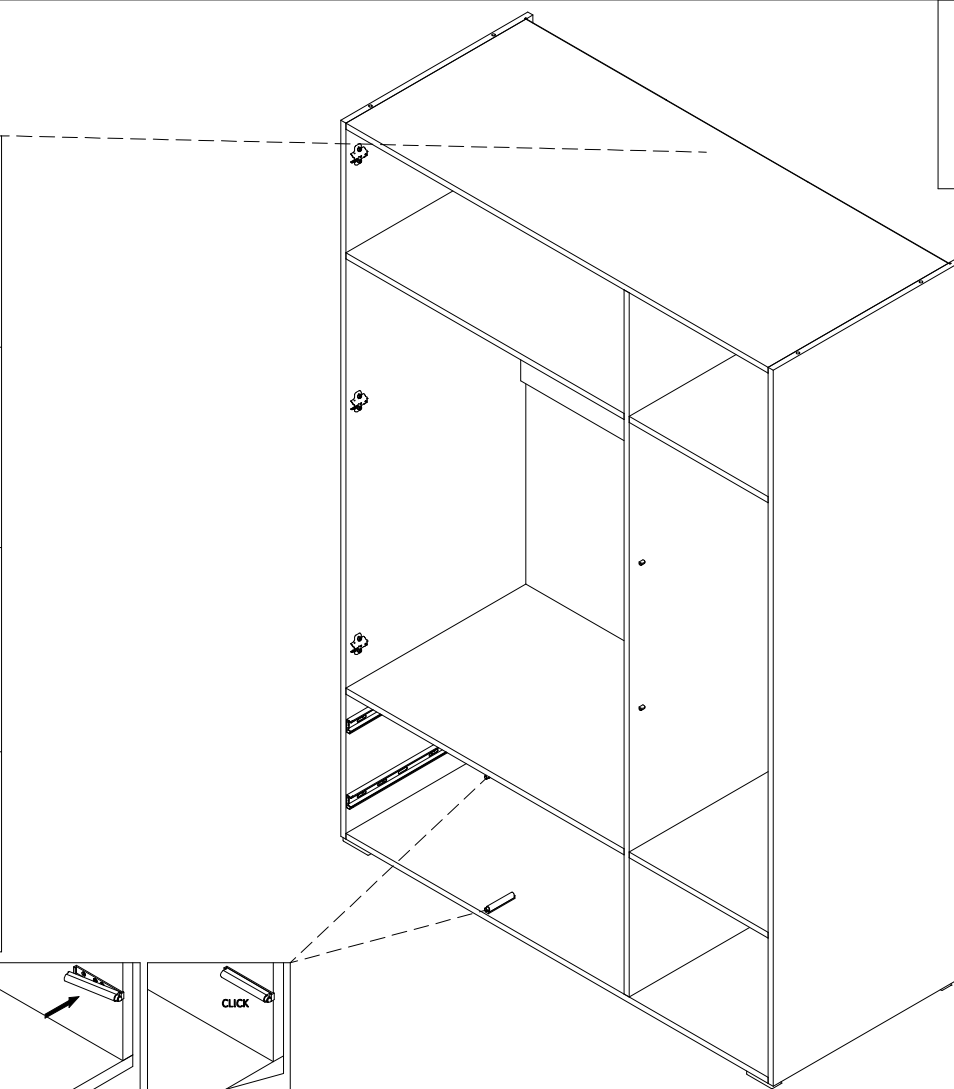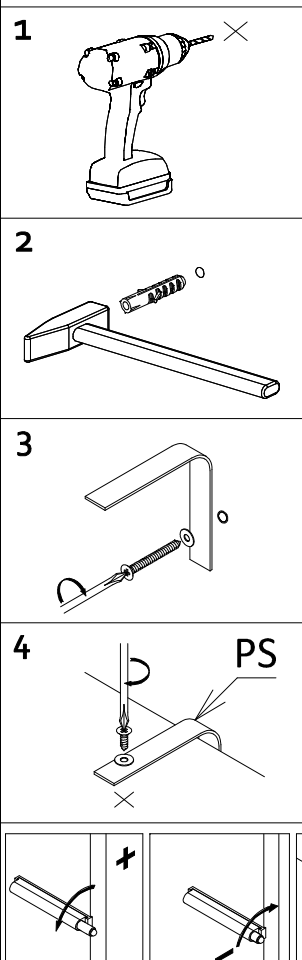

34












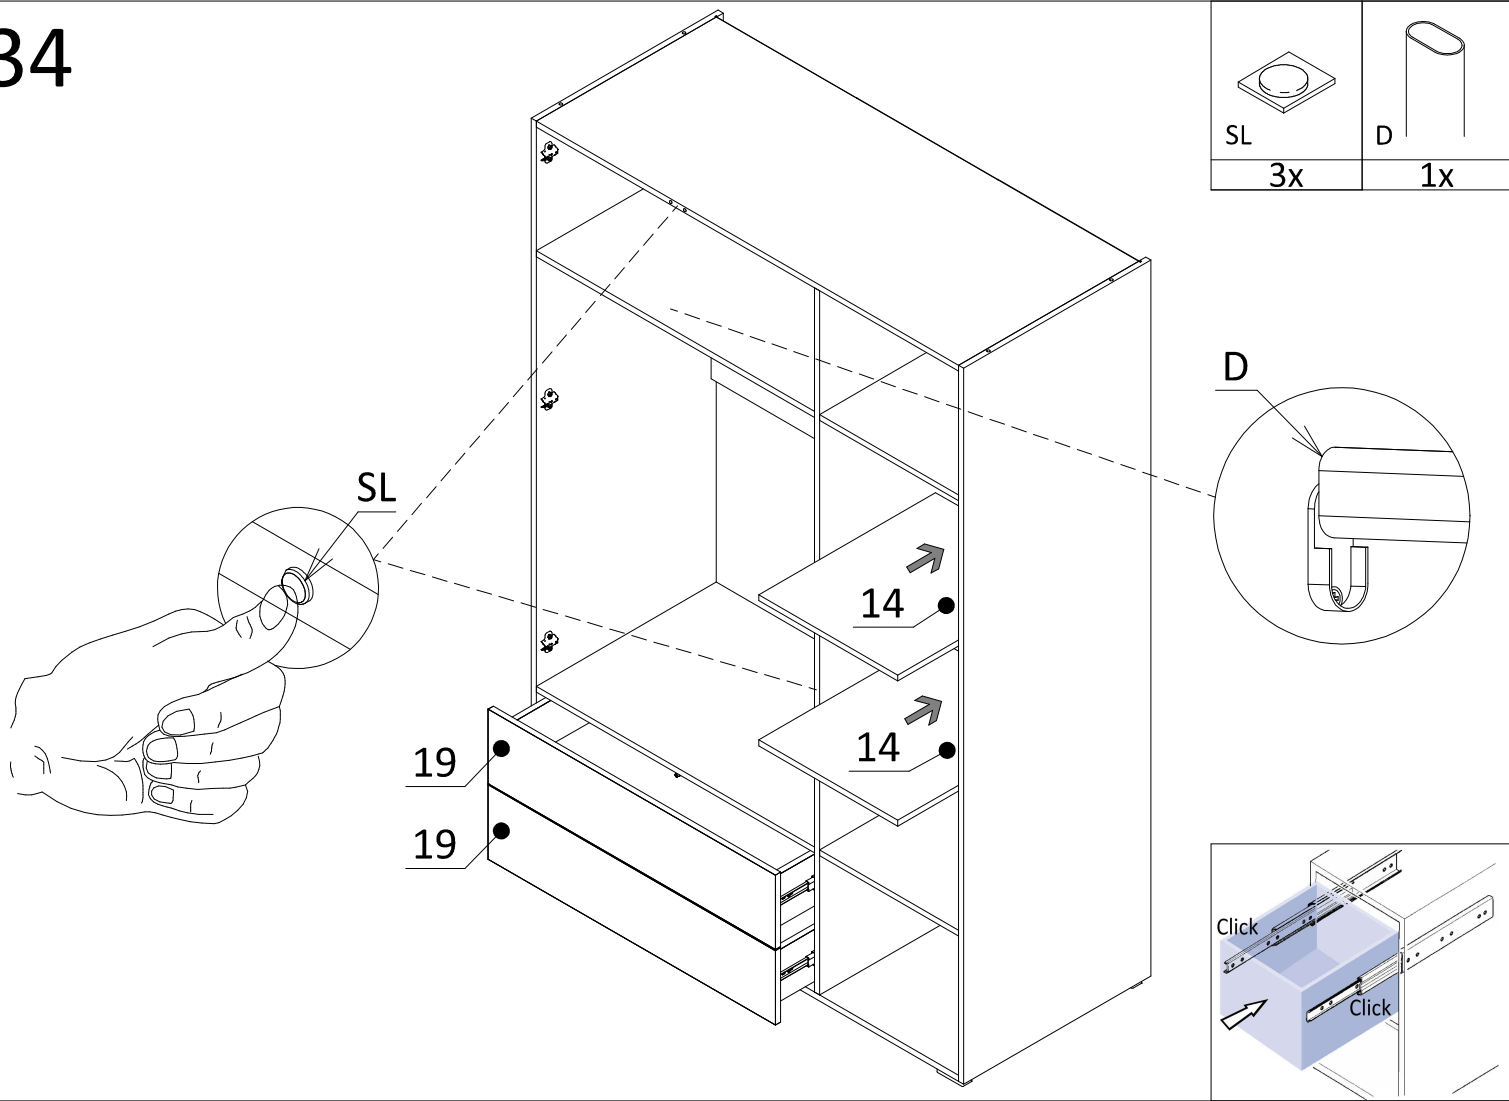



35







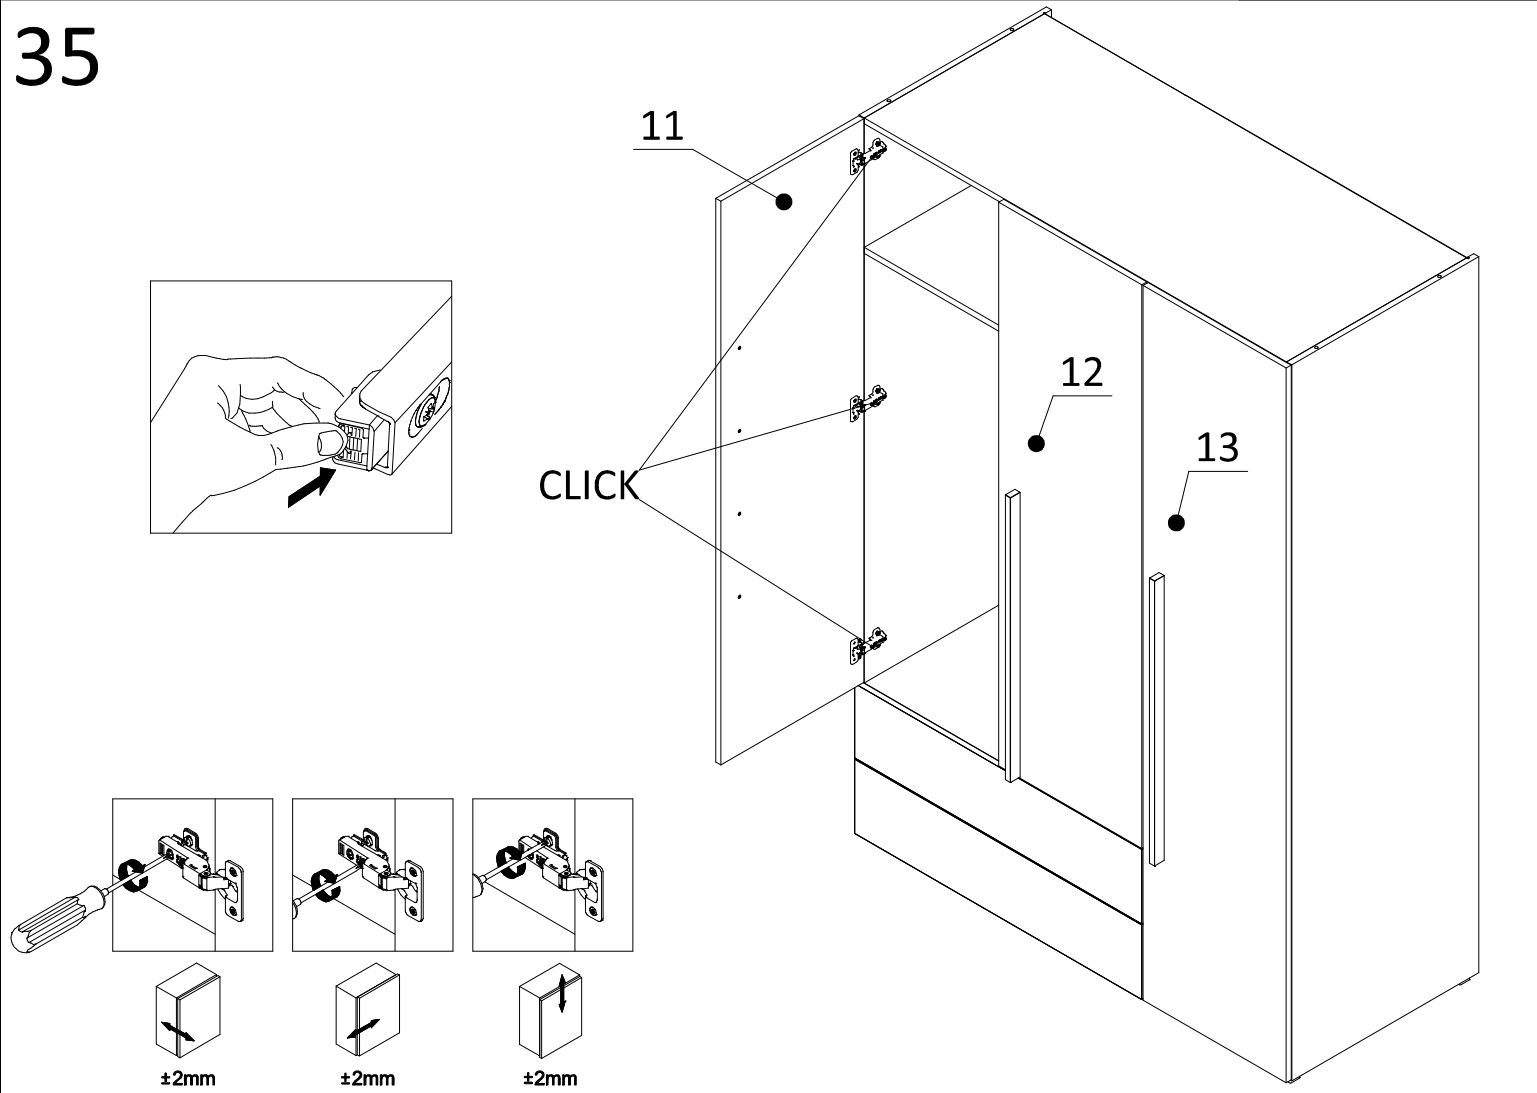


LORIN


R-17

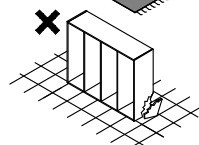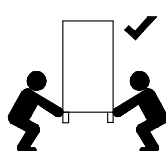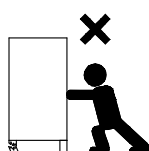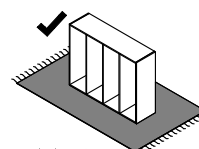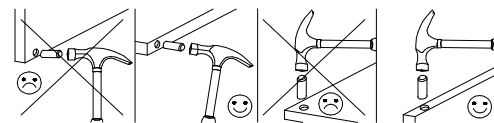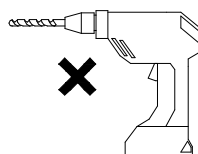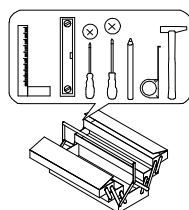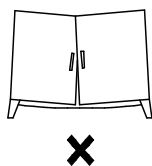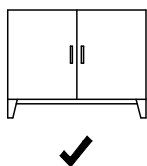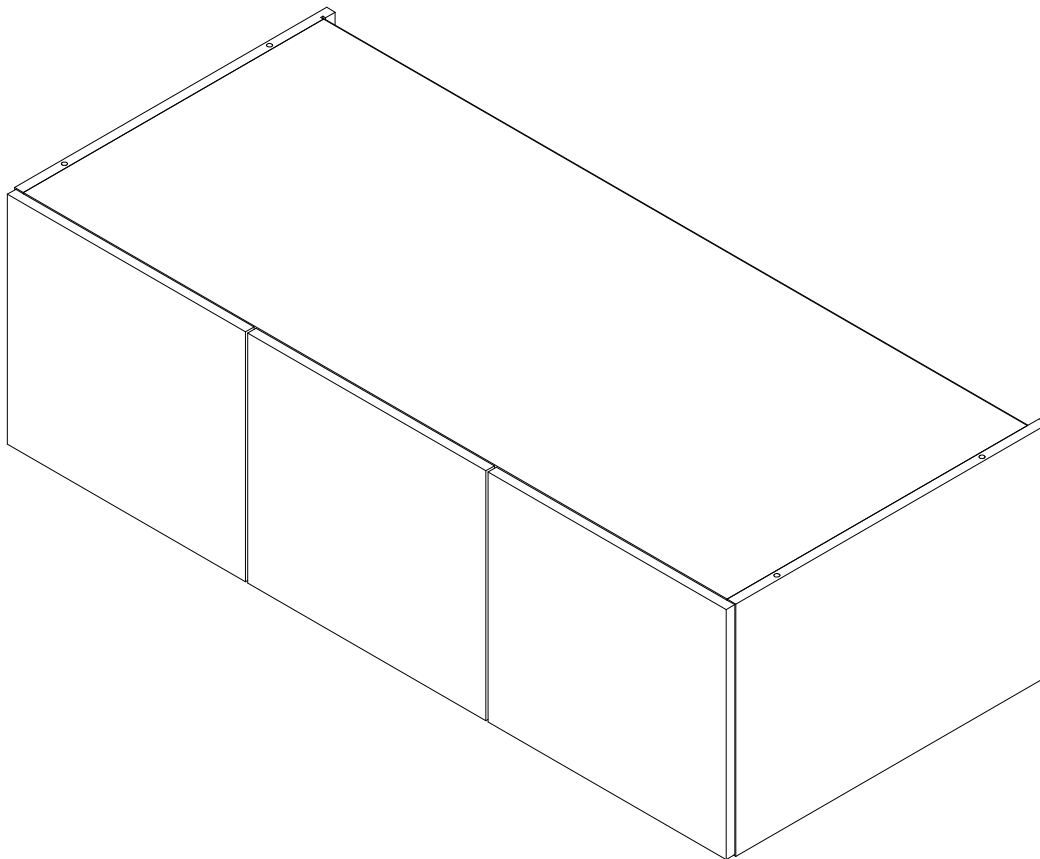

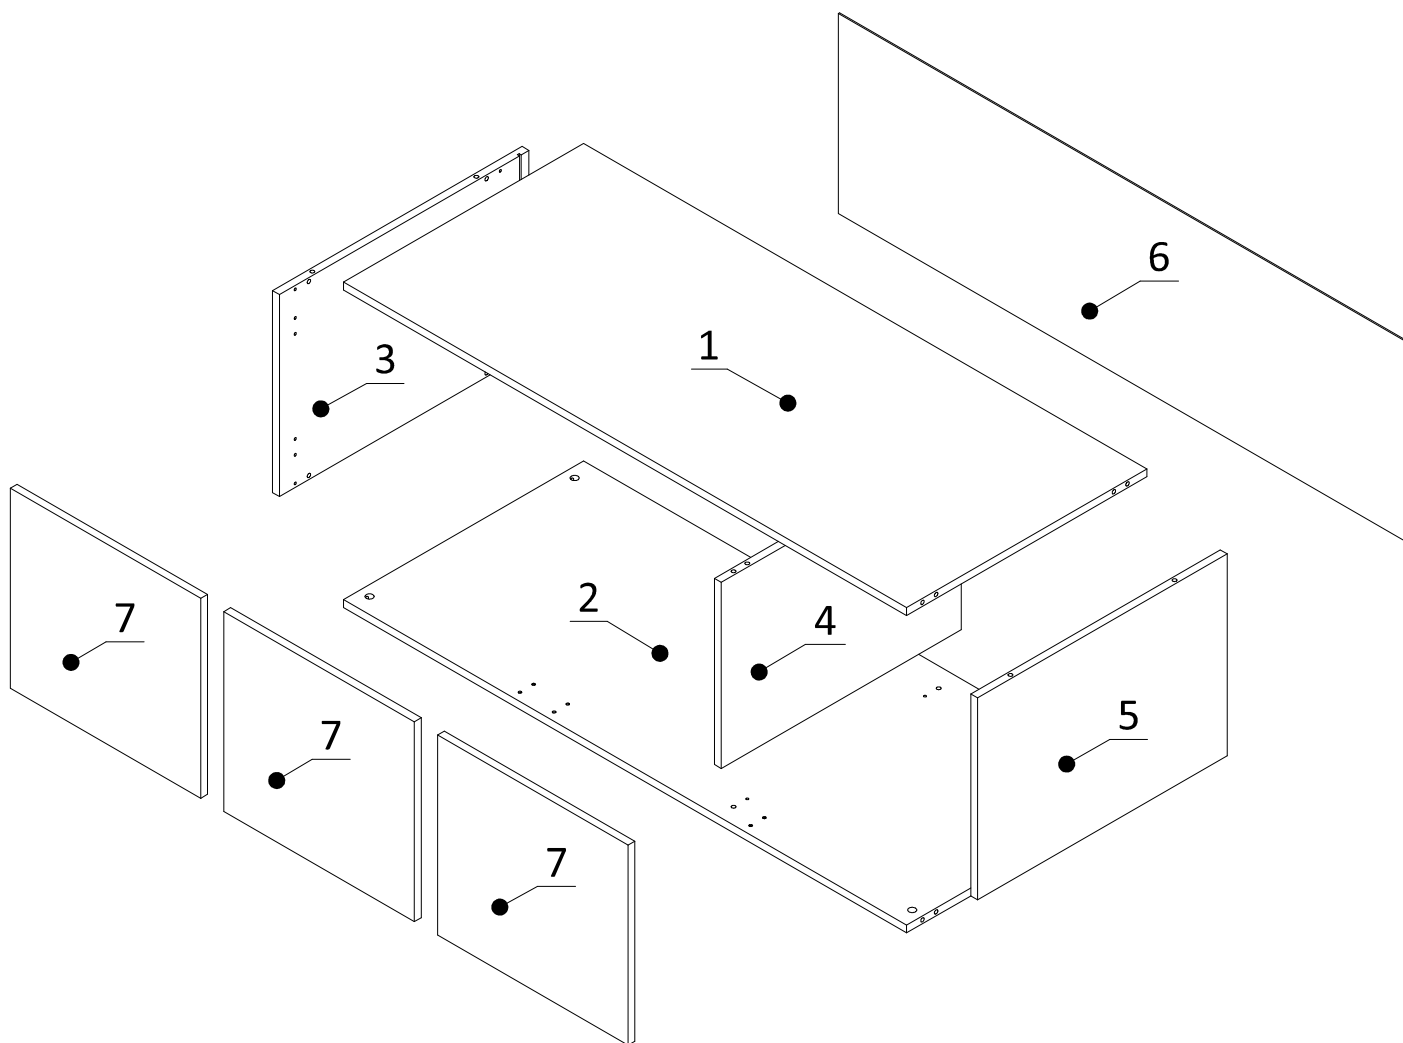


									
8x30	15/12	L20,3				4x16			2x20
K	M	M1	Z1	PZ	T	D4	S	ZM	G
16x	12x	12x	6x	6x	3x	12x	2x	12x	28x

1

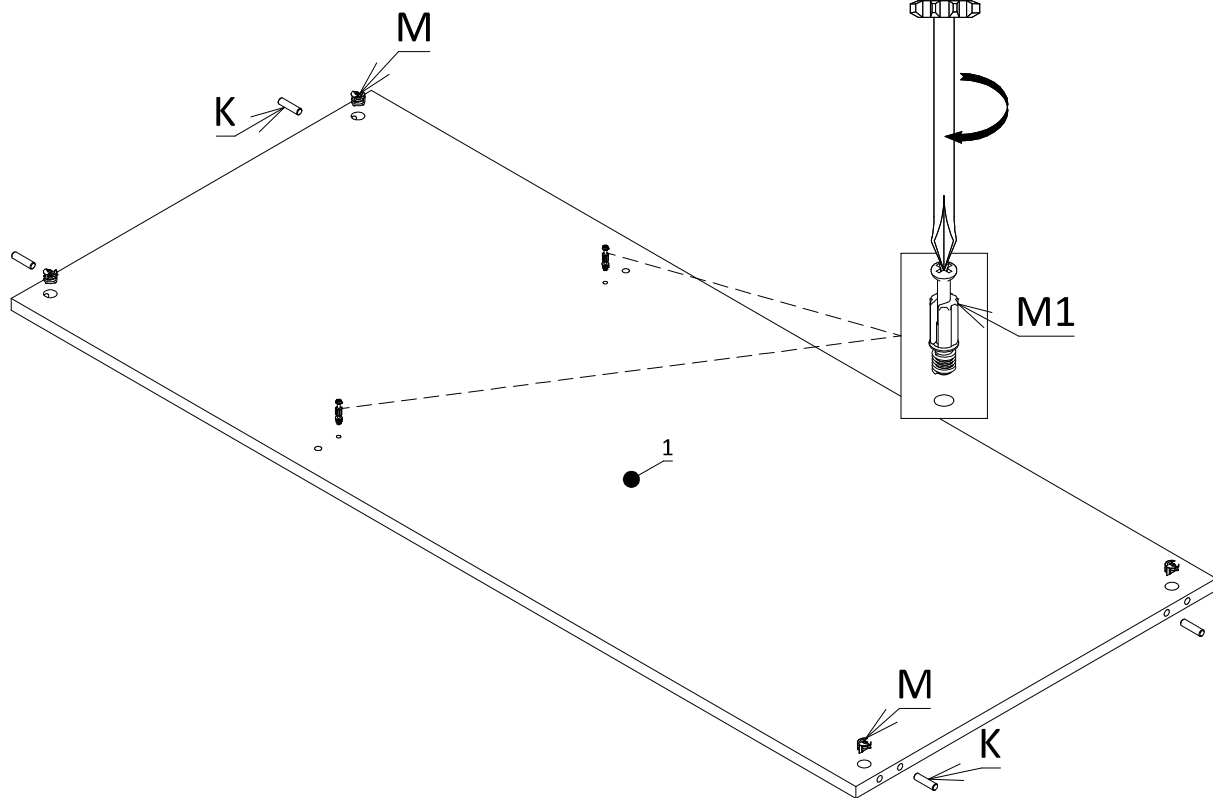


M1	M	K
2x	4x	4x


2

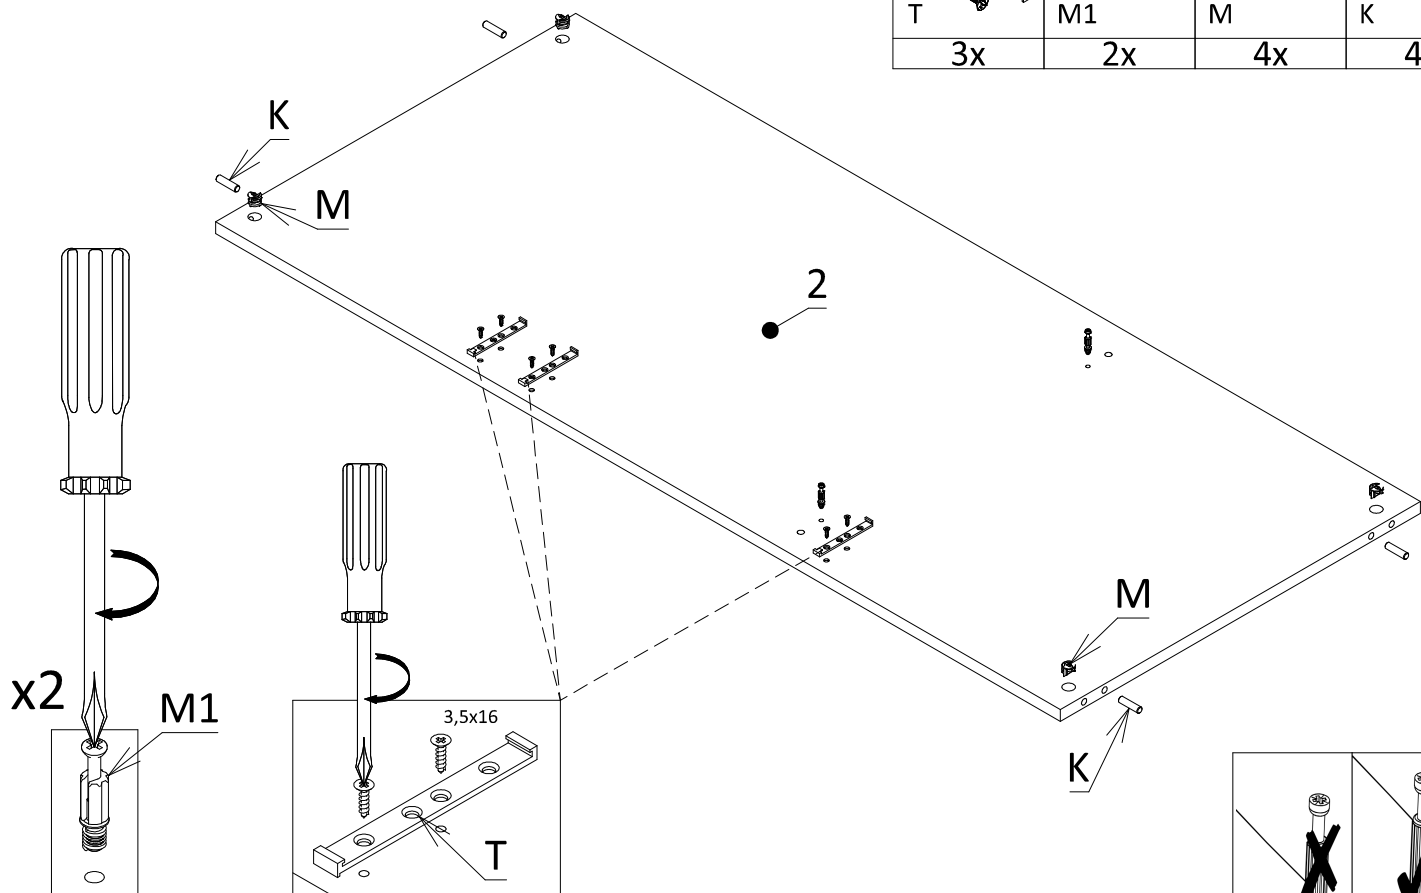


T	M1	M	K
3x	2x	4x	4x


3

	
PZ	M1
2x	4x

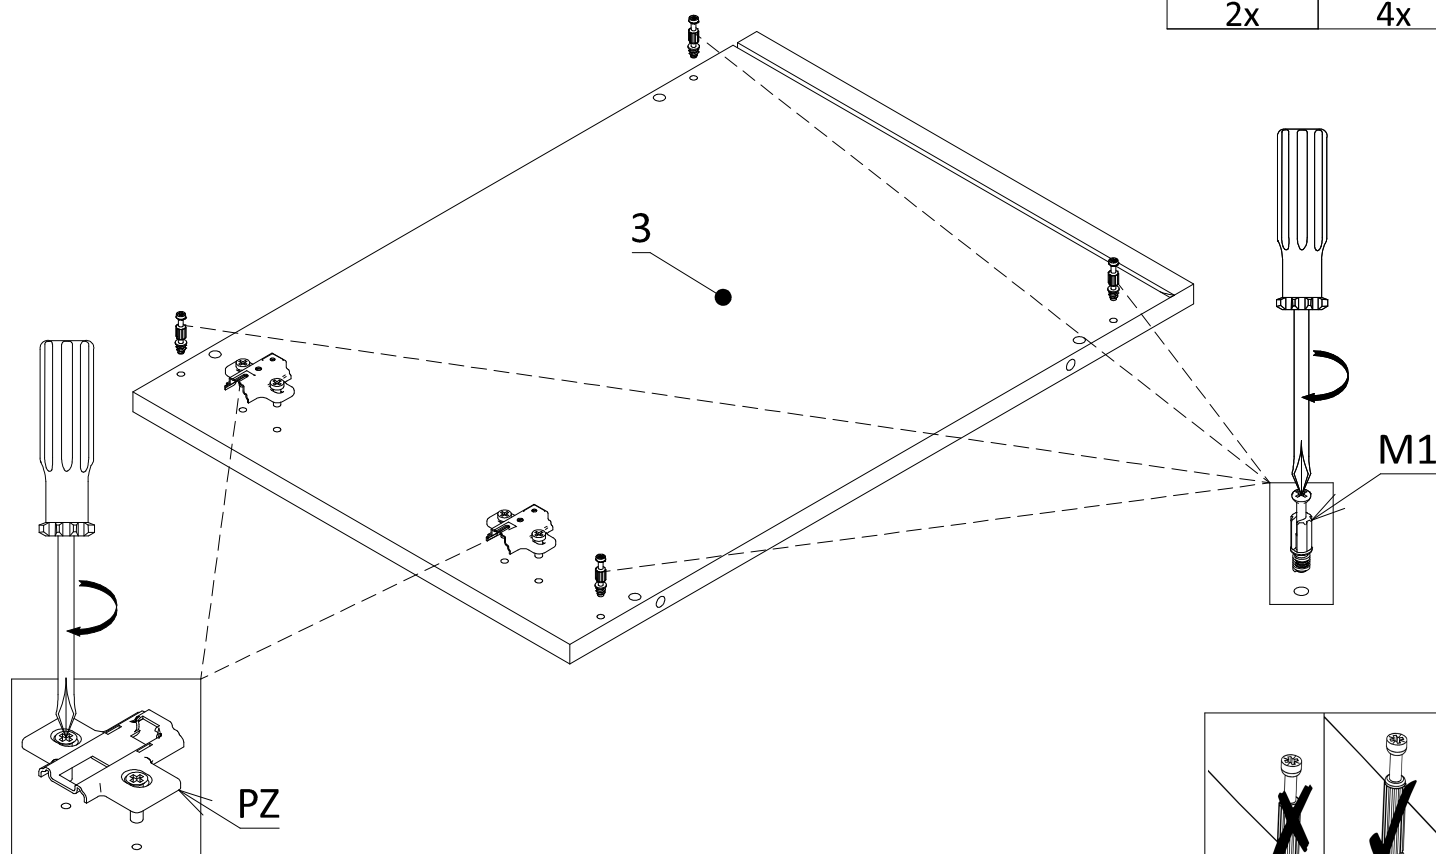



4

		
PZ	M	K
2x	4x	4x

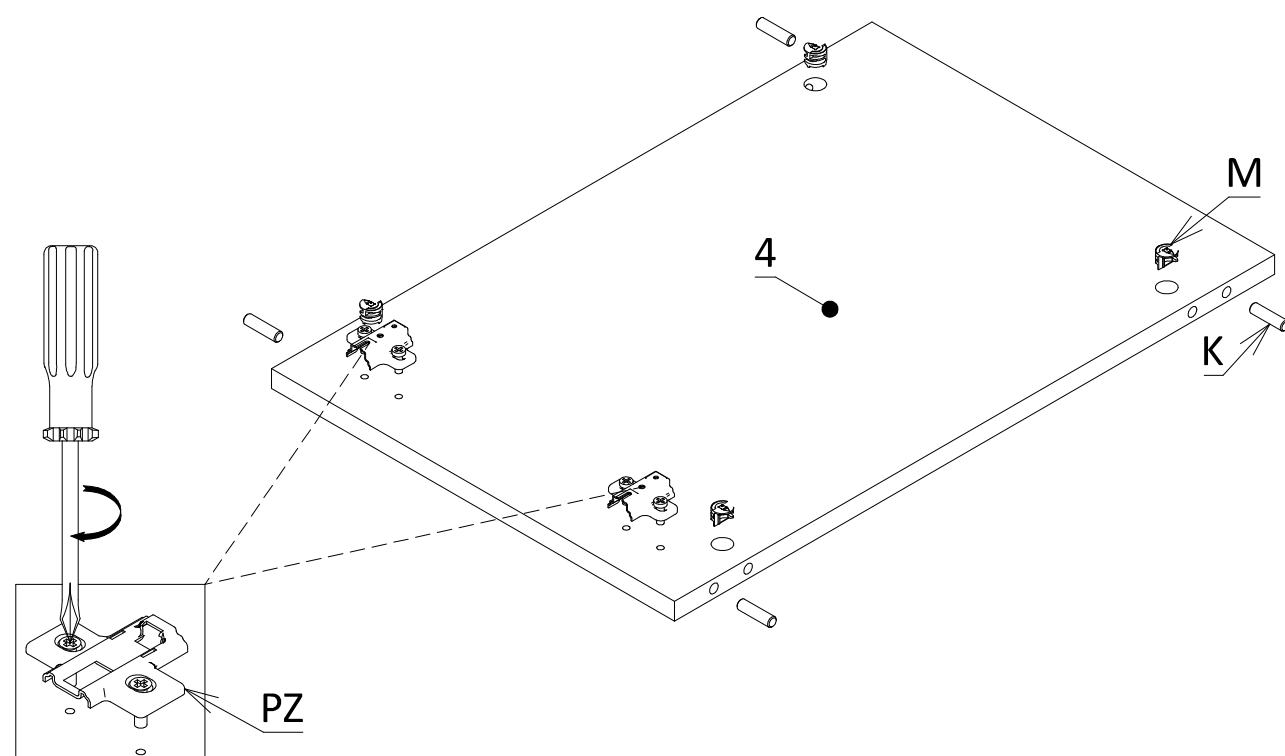



5

	
PZ	M1
2x	4x


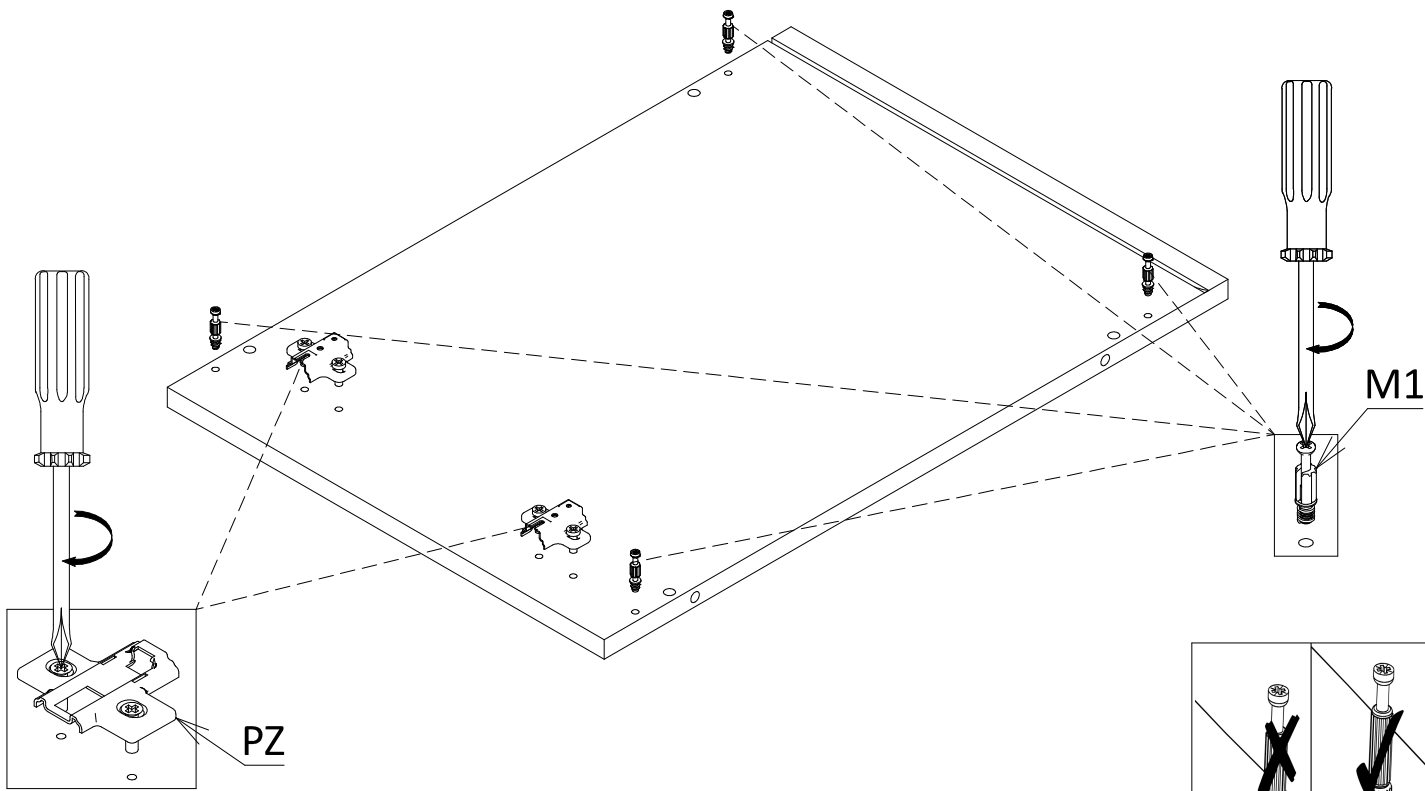


6



	
D4	Z1
12x	6x

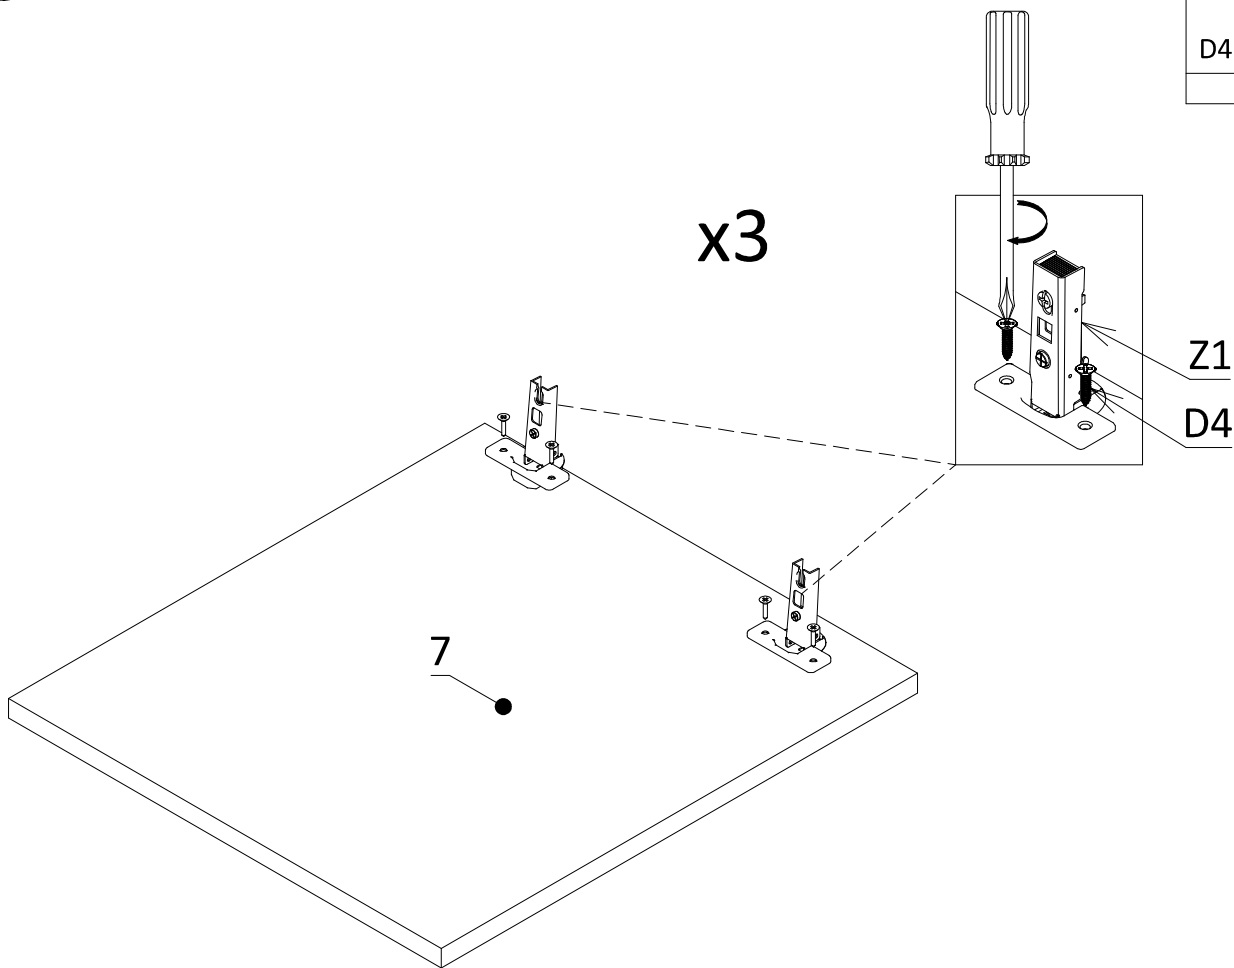


7

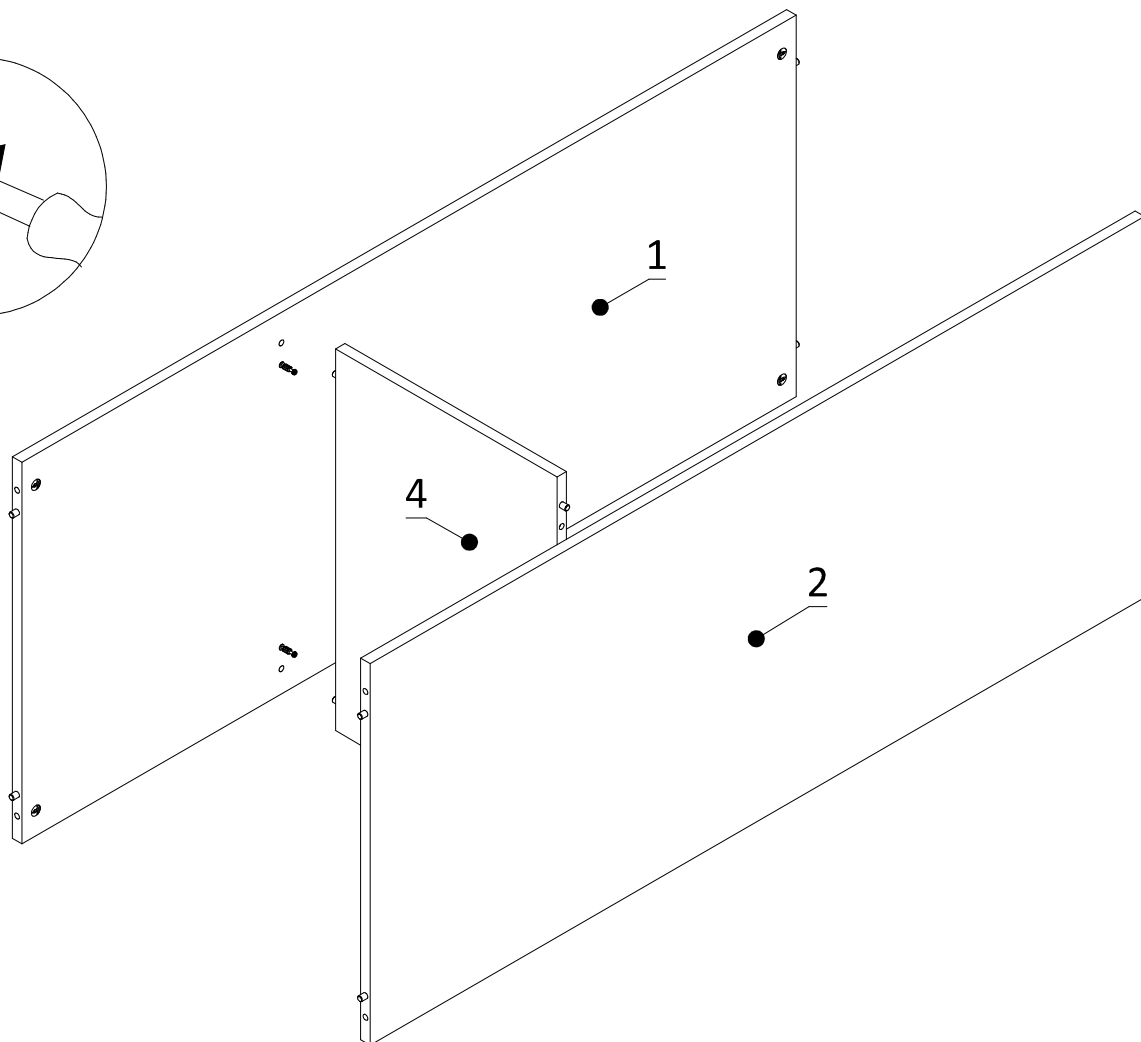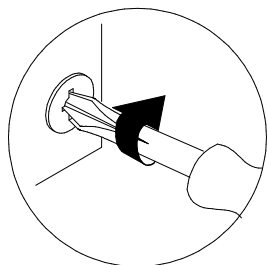





8

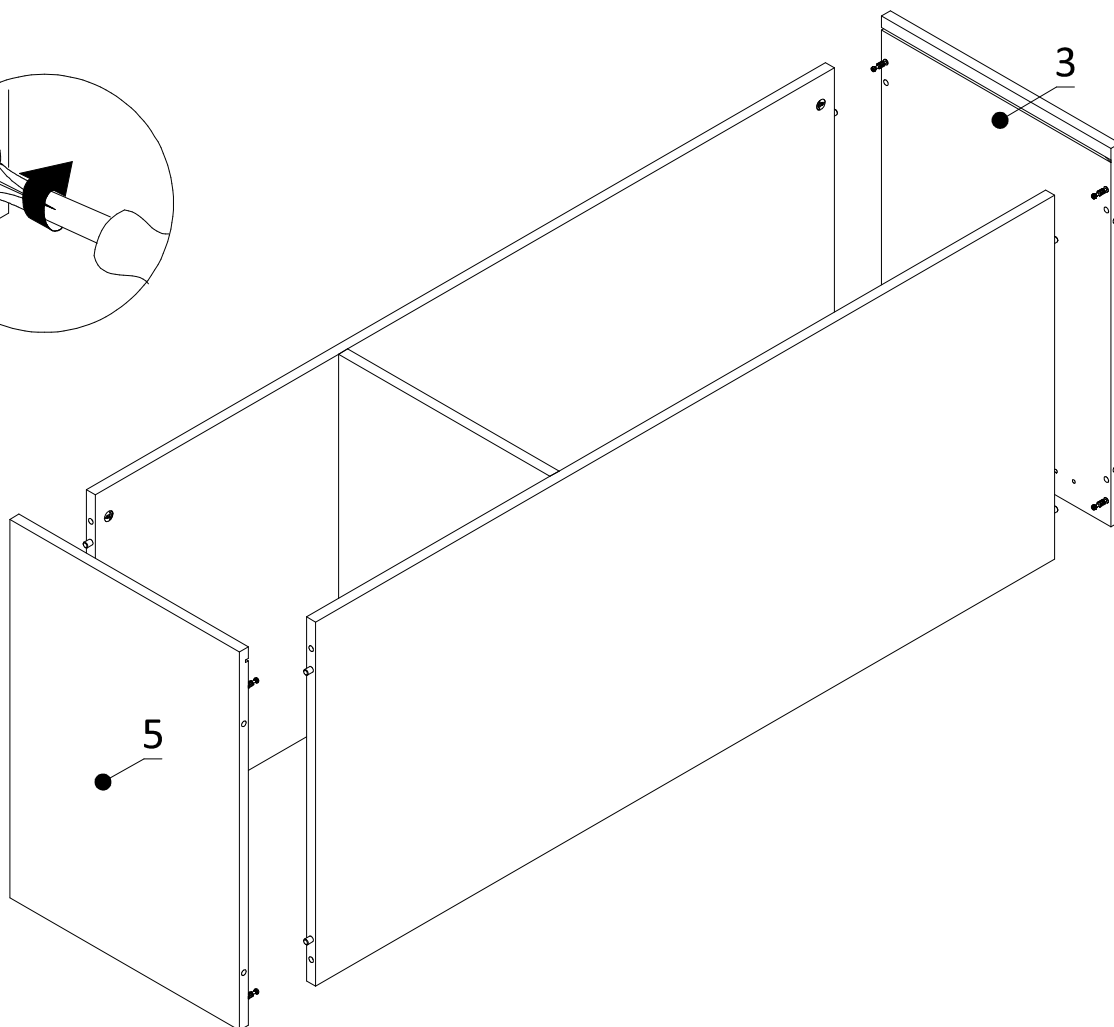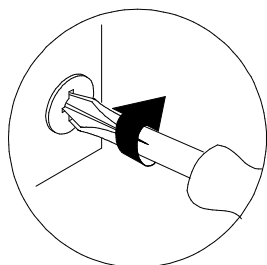



9

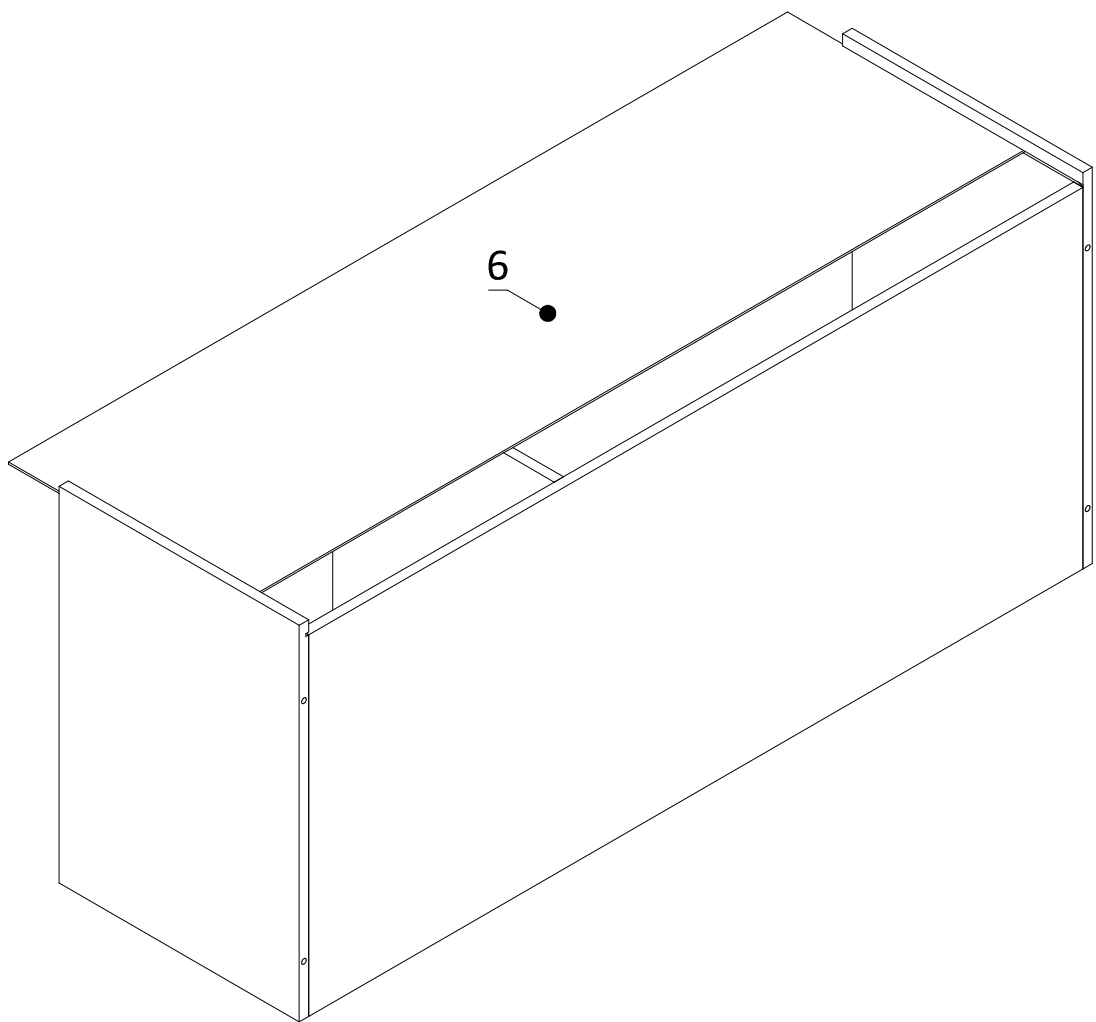

10

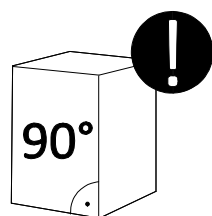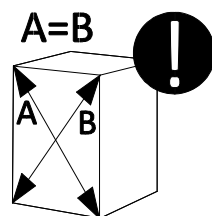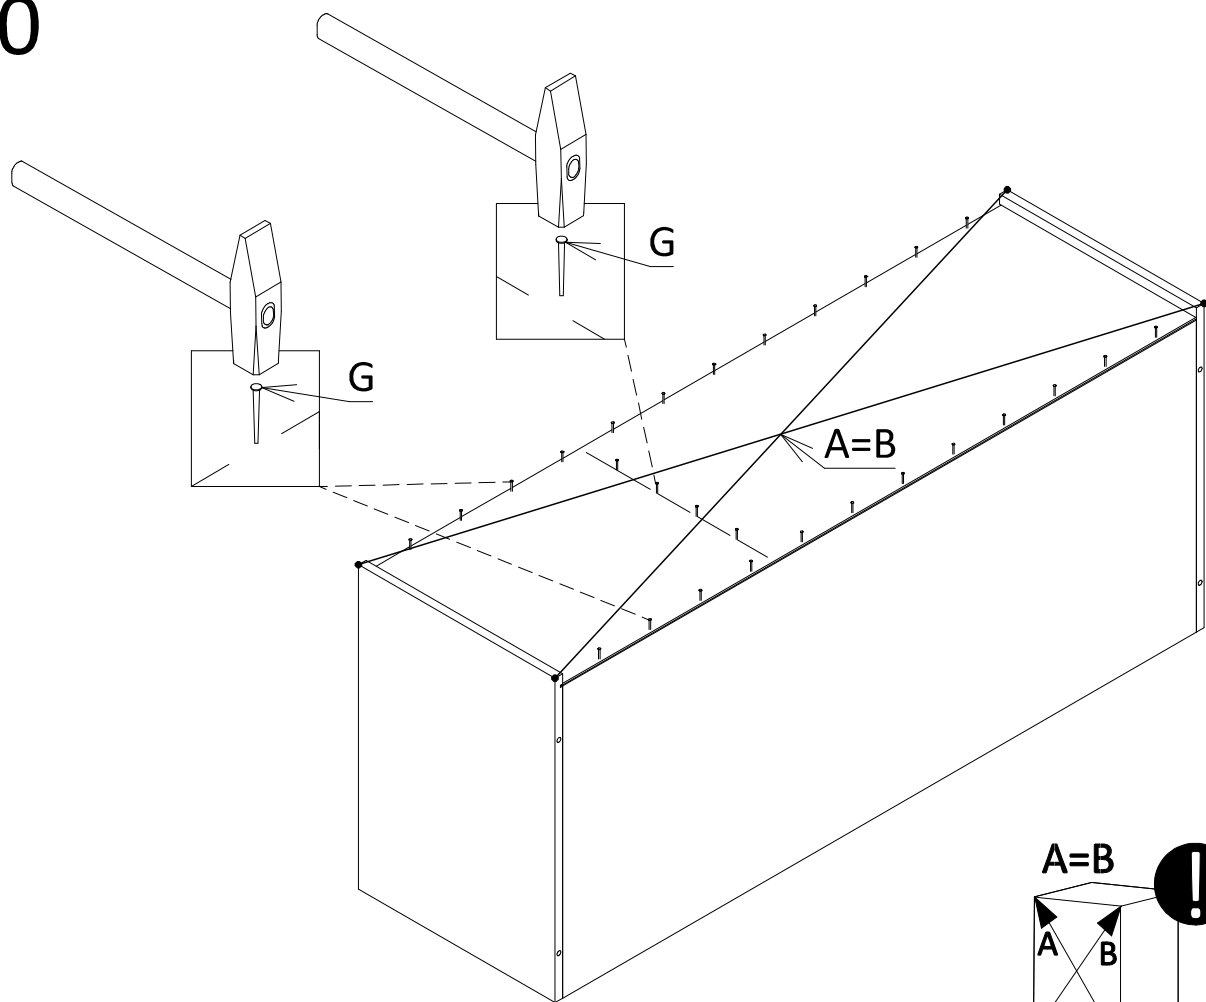




11

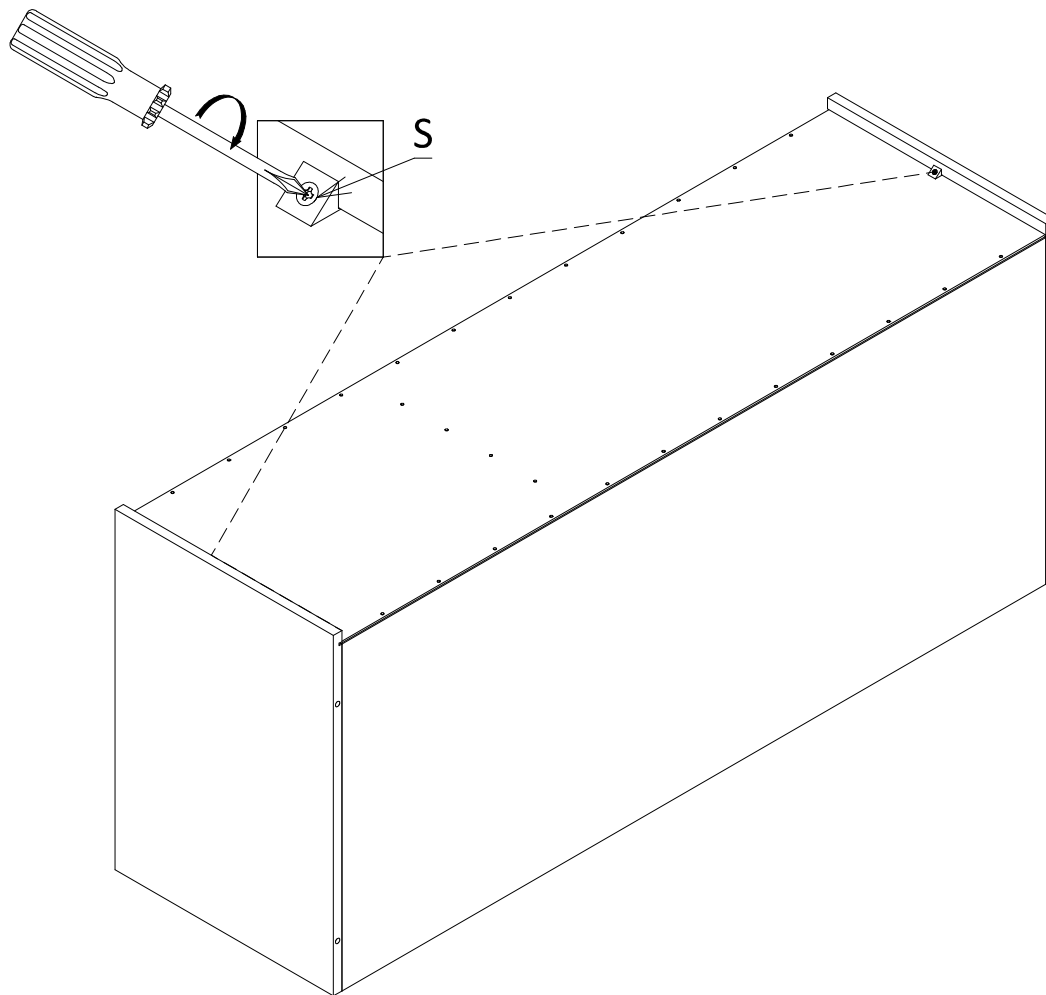


S

2x

12

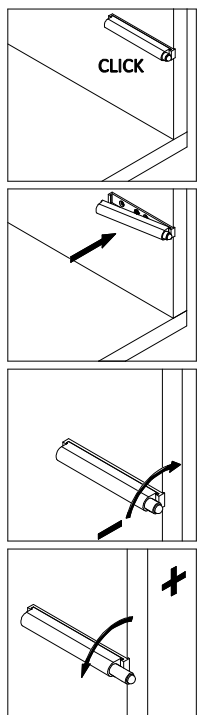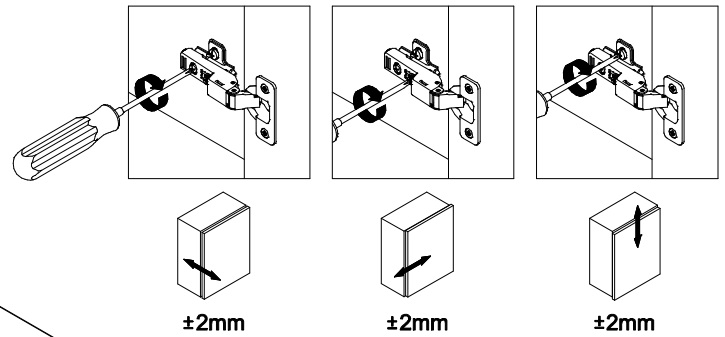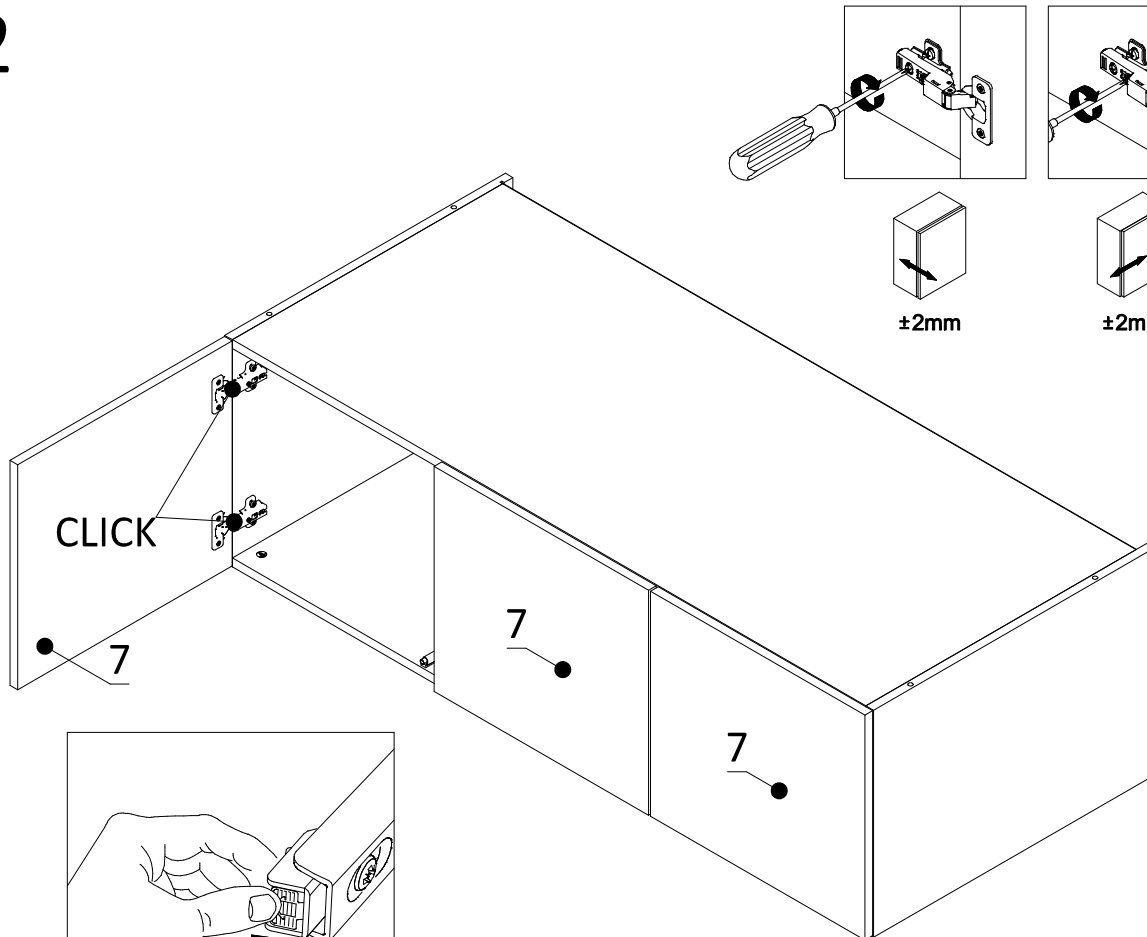

13



K

4x

