


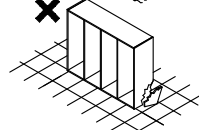
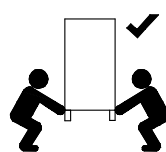
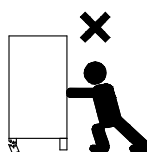
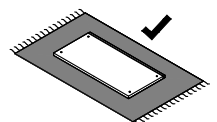
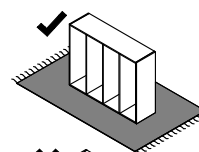
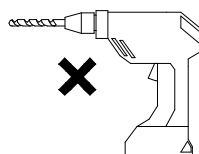
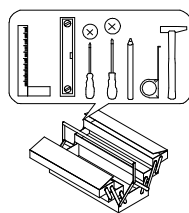
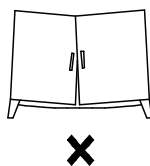
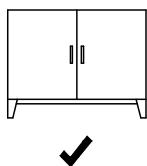
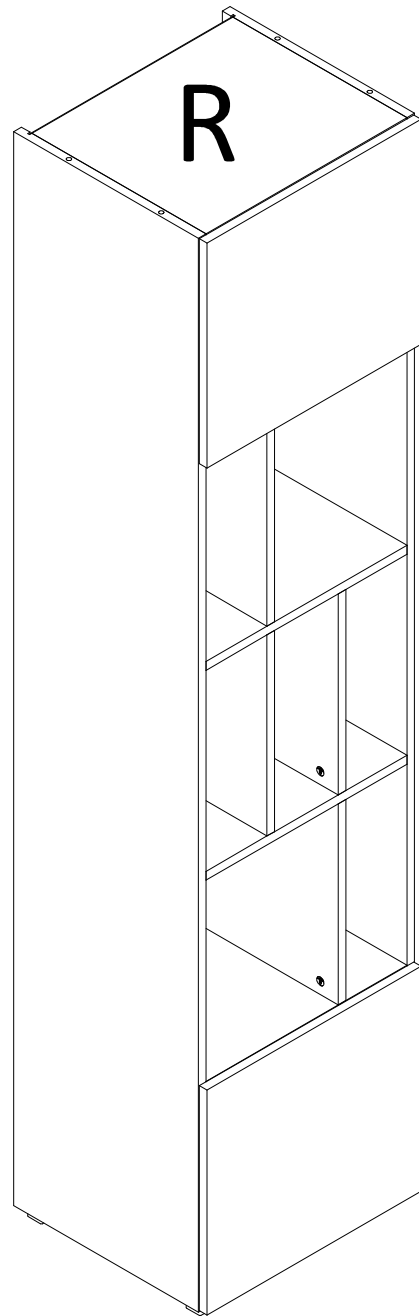
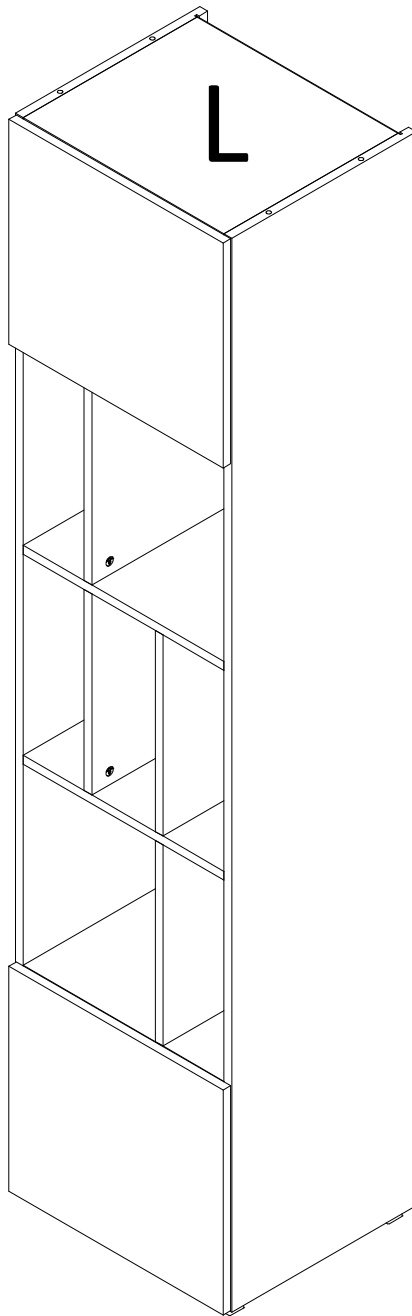
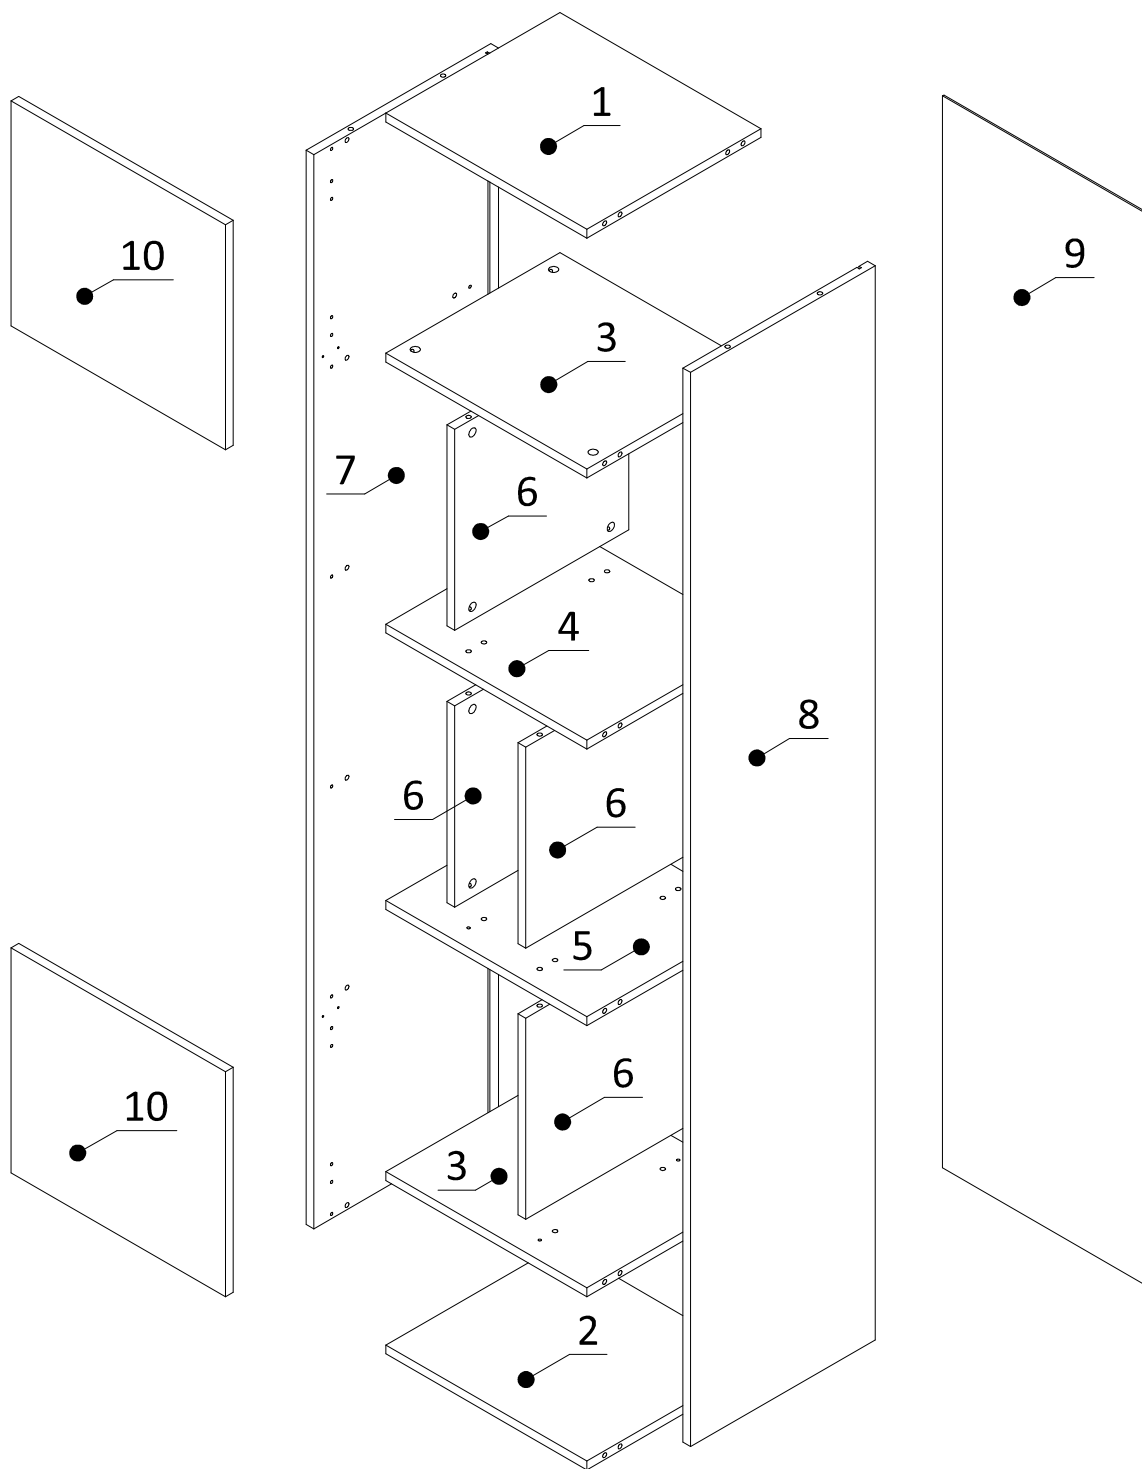








LORIN

R-4






8x45  K1	15/12  M	L20,3  M1	L56  M2	 Z1	 PZ	 ZP			
4x	40x	32x	4x	4x	4x	8x			
8x30  K	4x16  D4	4x20  D2	80x30  N	 T	 ZM	 SL	2x20  G	 S	 PS
32x	8x	8x	4x	2x	40x	2x	30x	10x	1x




1

	
M	K
8x	8x

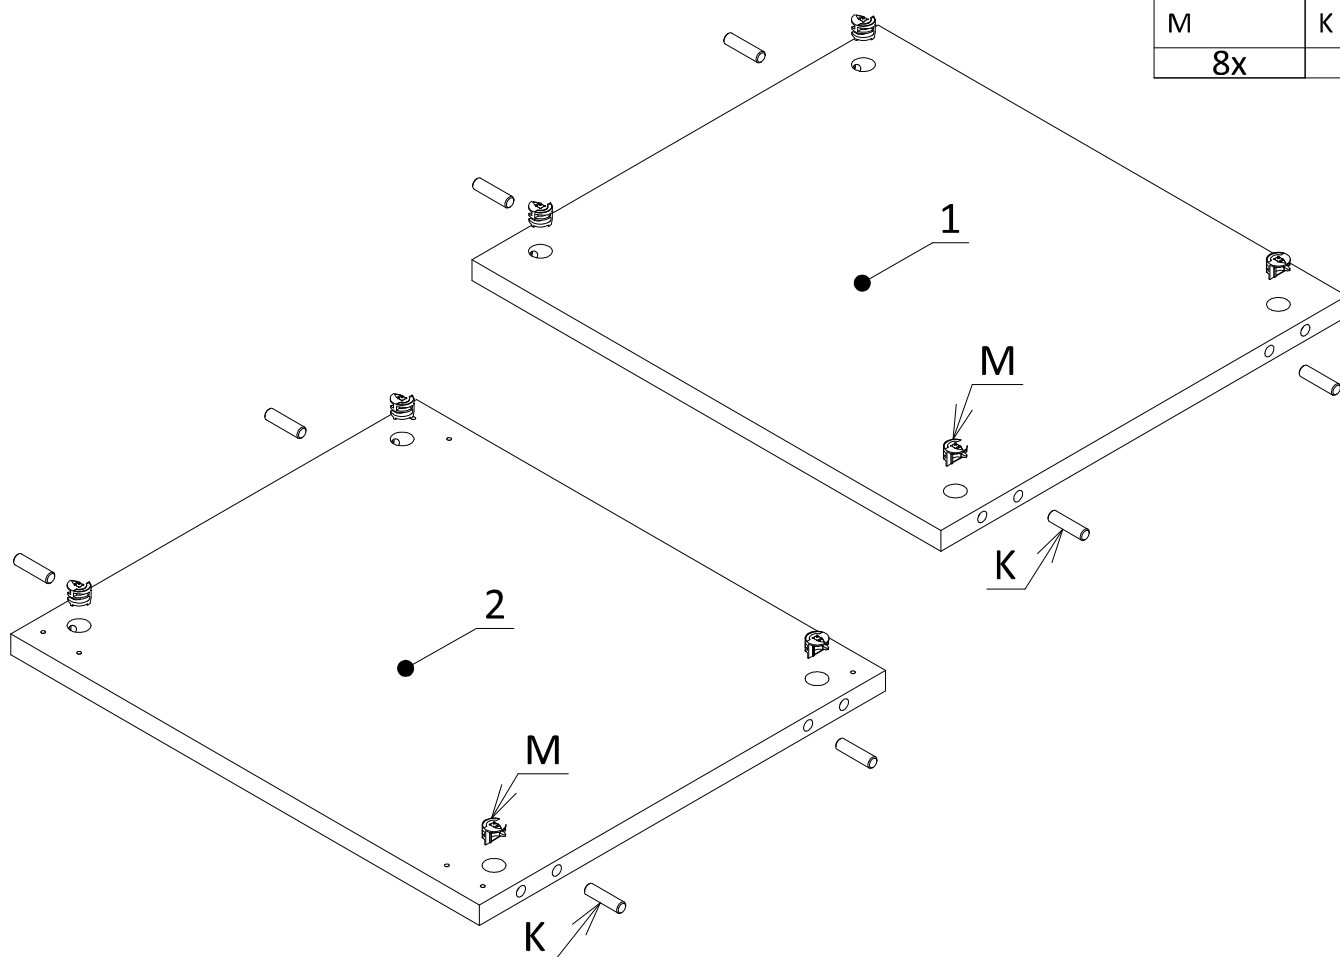


2


		
M1	M	K
4x	8x	8x

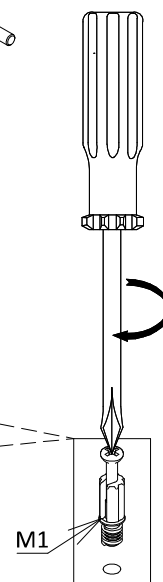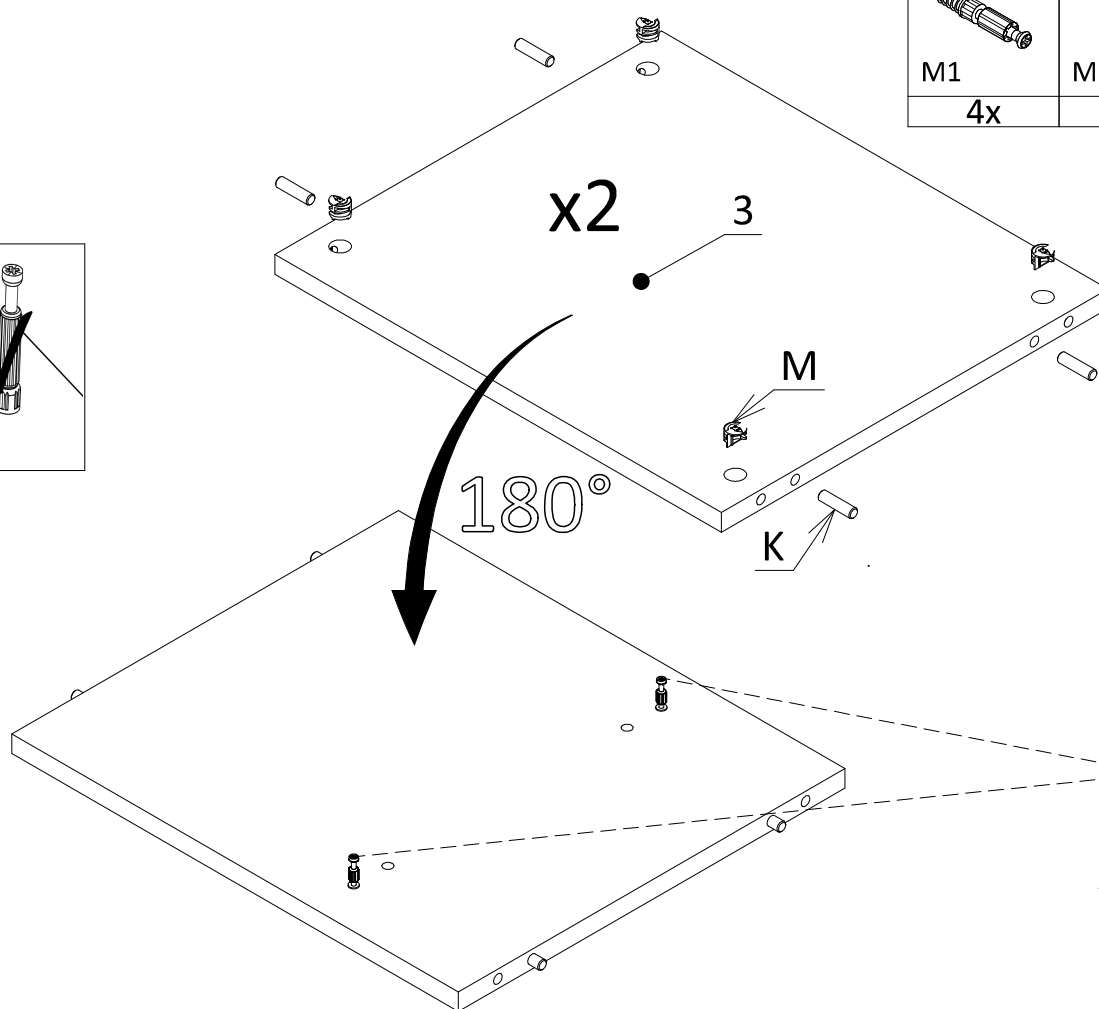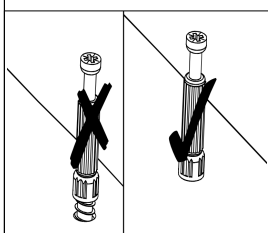


3

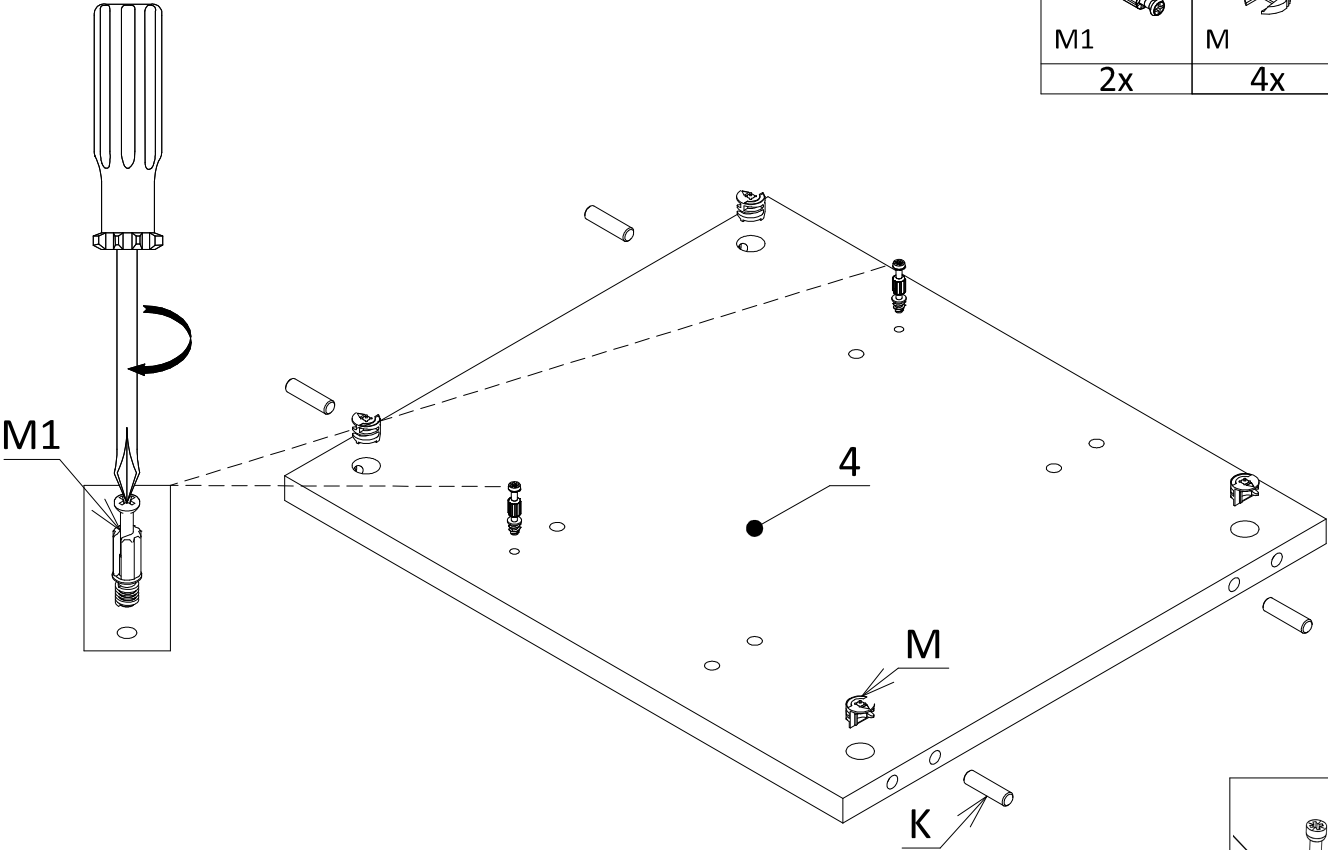


		
M1	M	K
2x	4x	4x

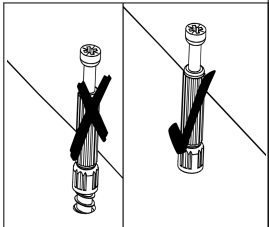


4


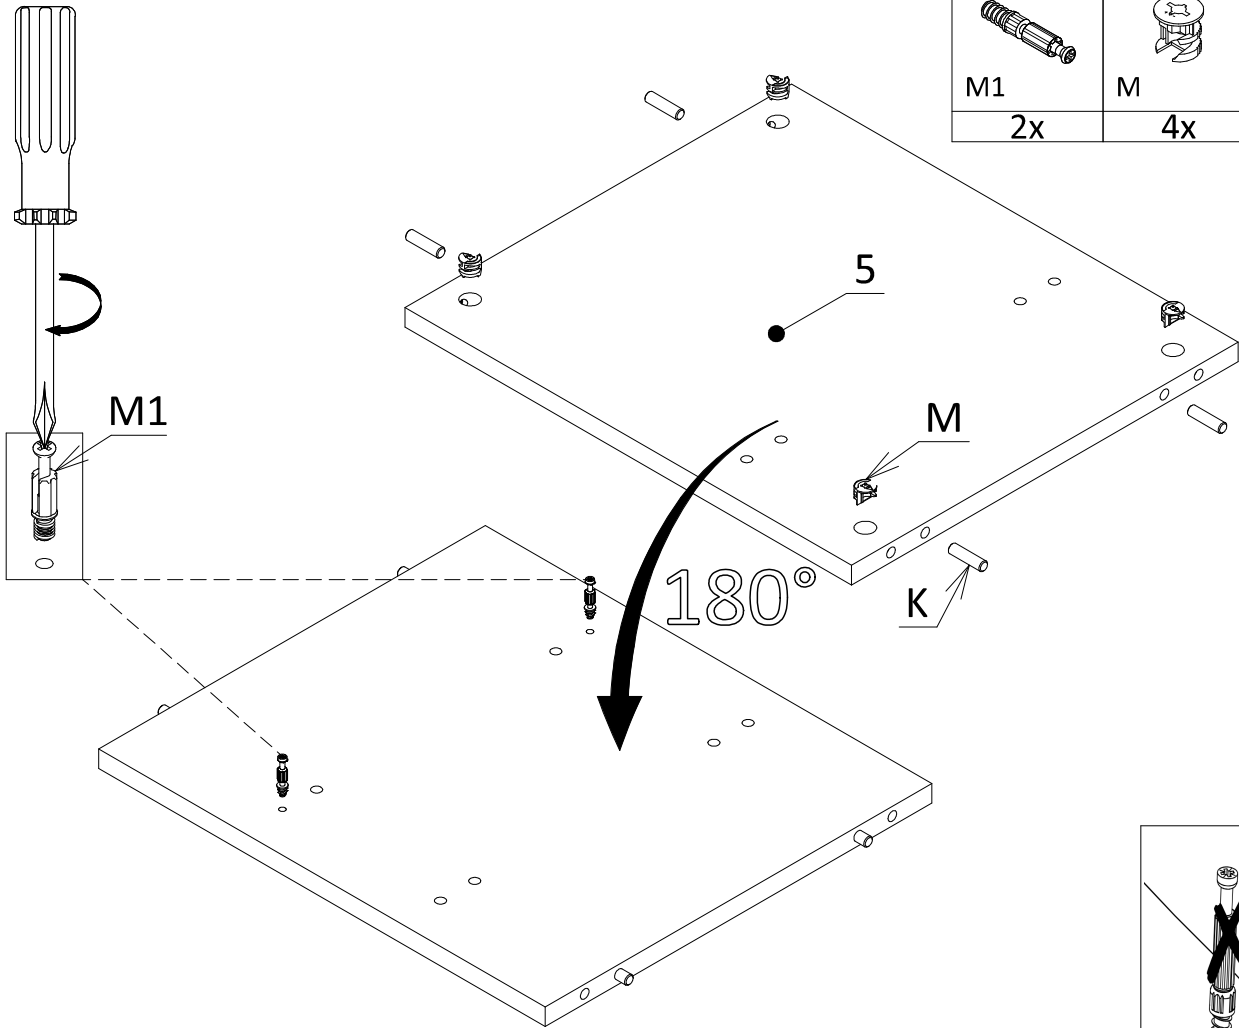


		
M1	M	K
2x	4x	4x

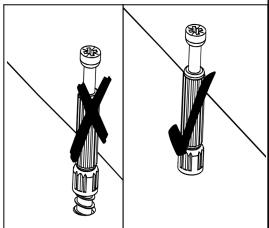




5

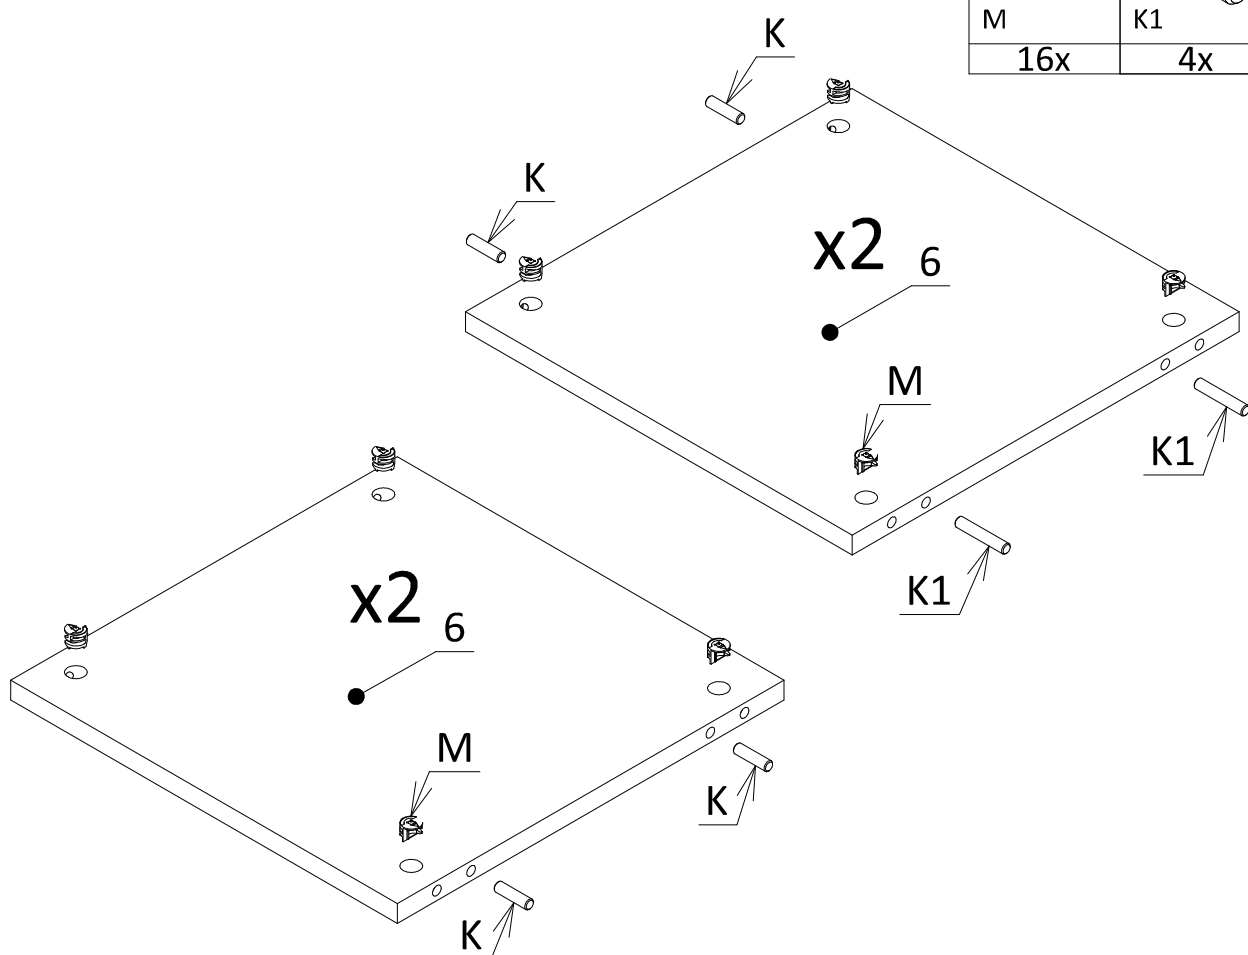


		
M	K1	K
16x	4x	8x

6

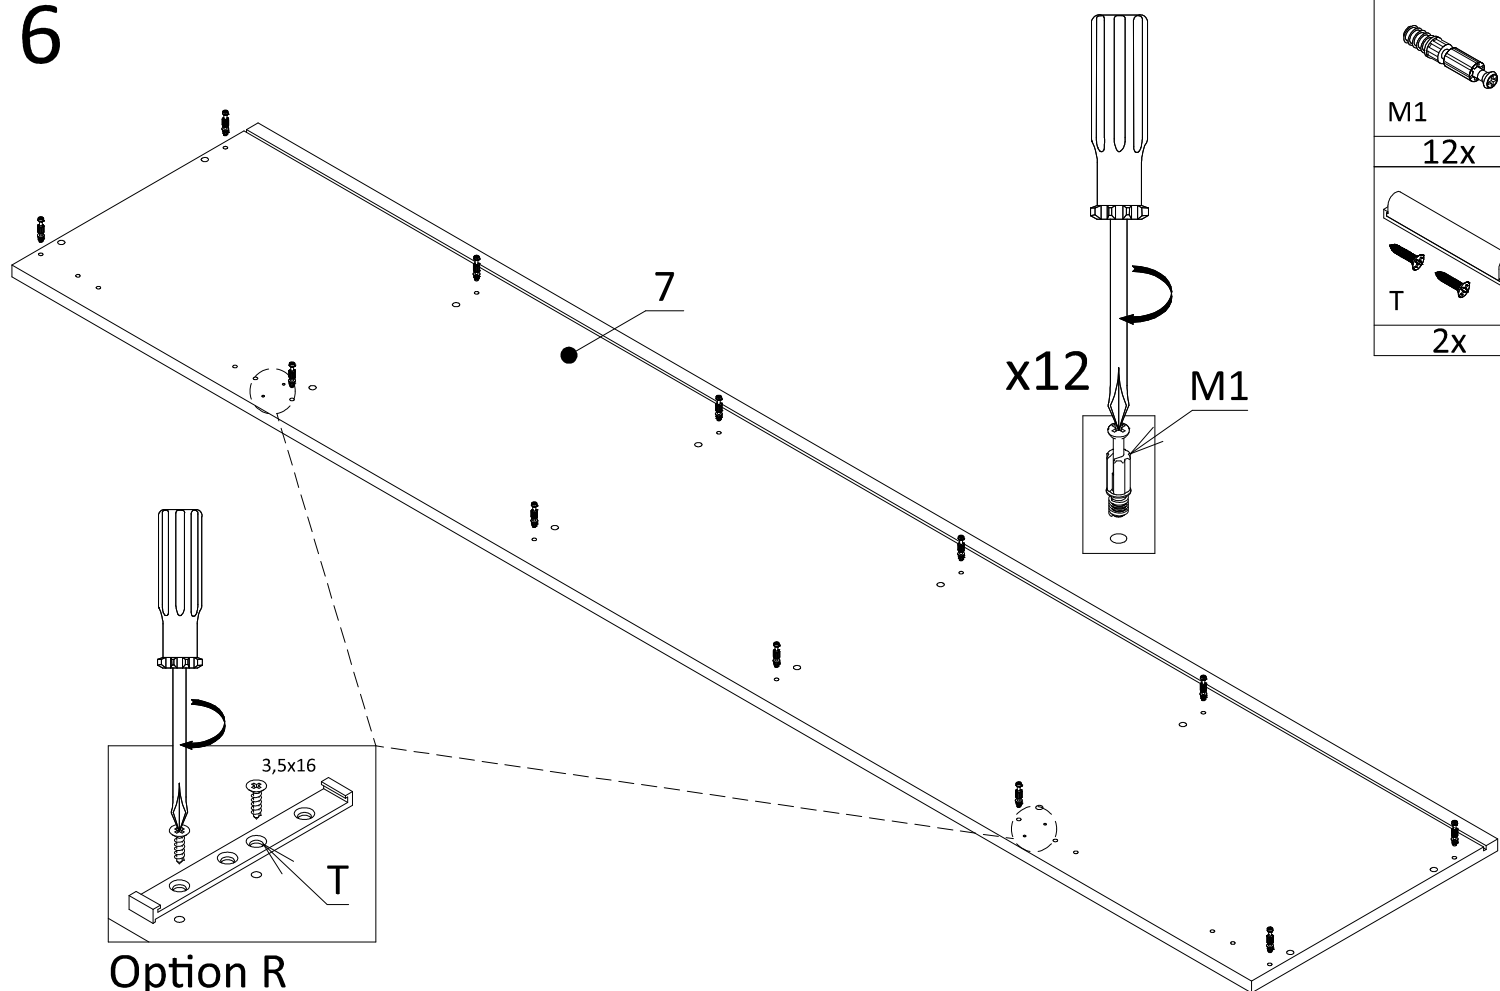



M1
12x

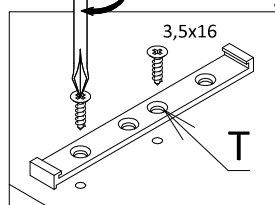T
2x




Option R

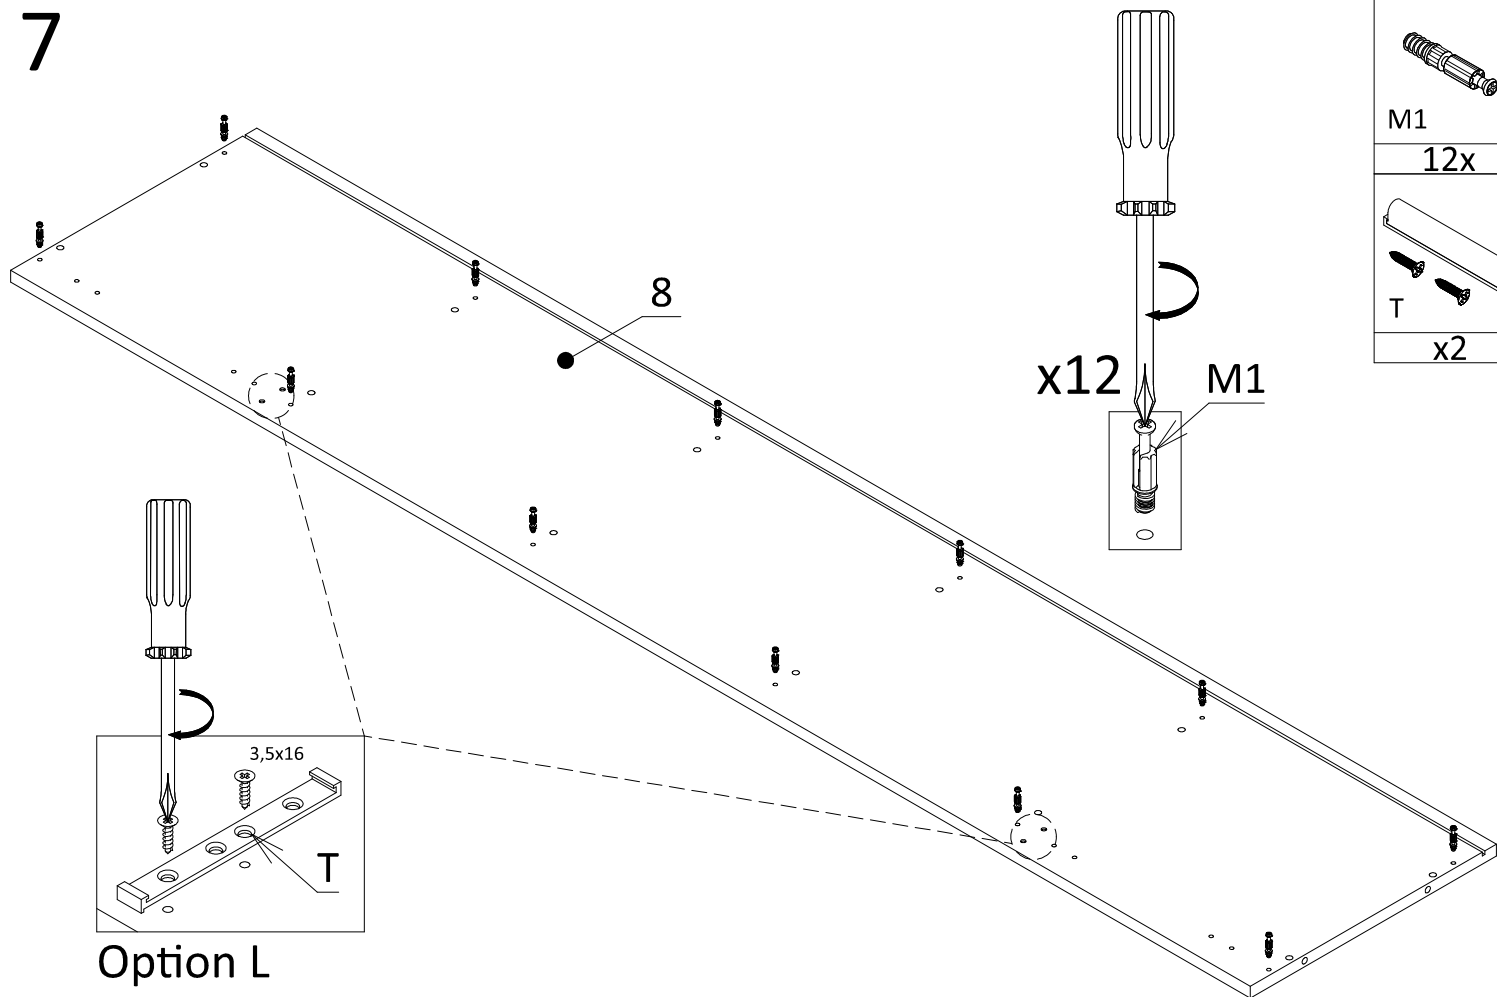
7




8 Option L

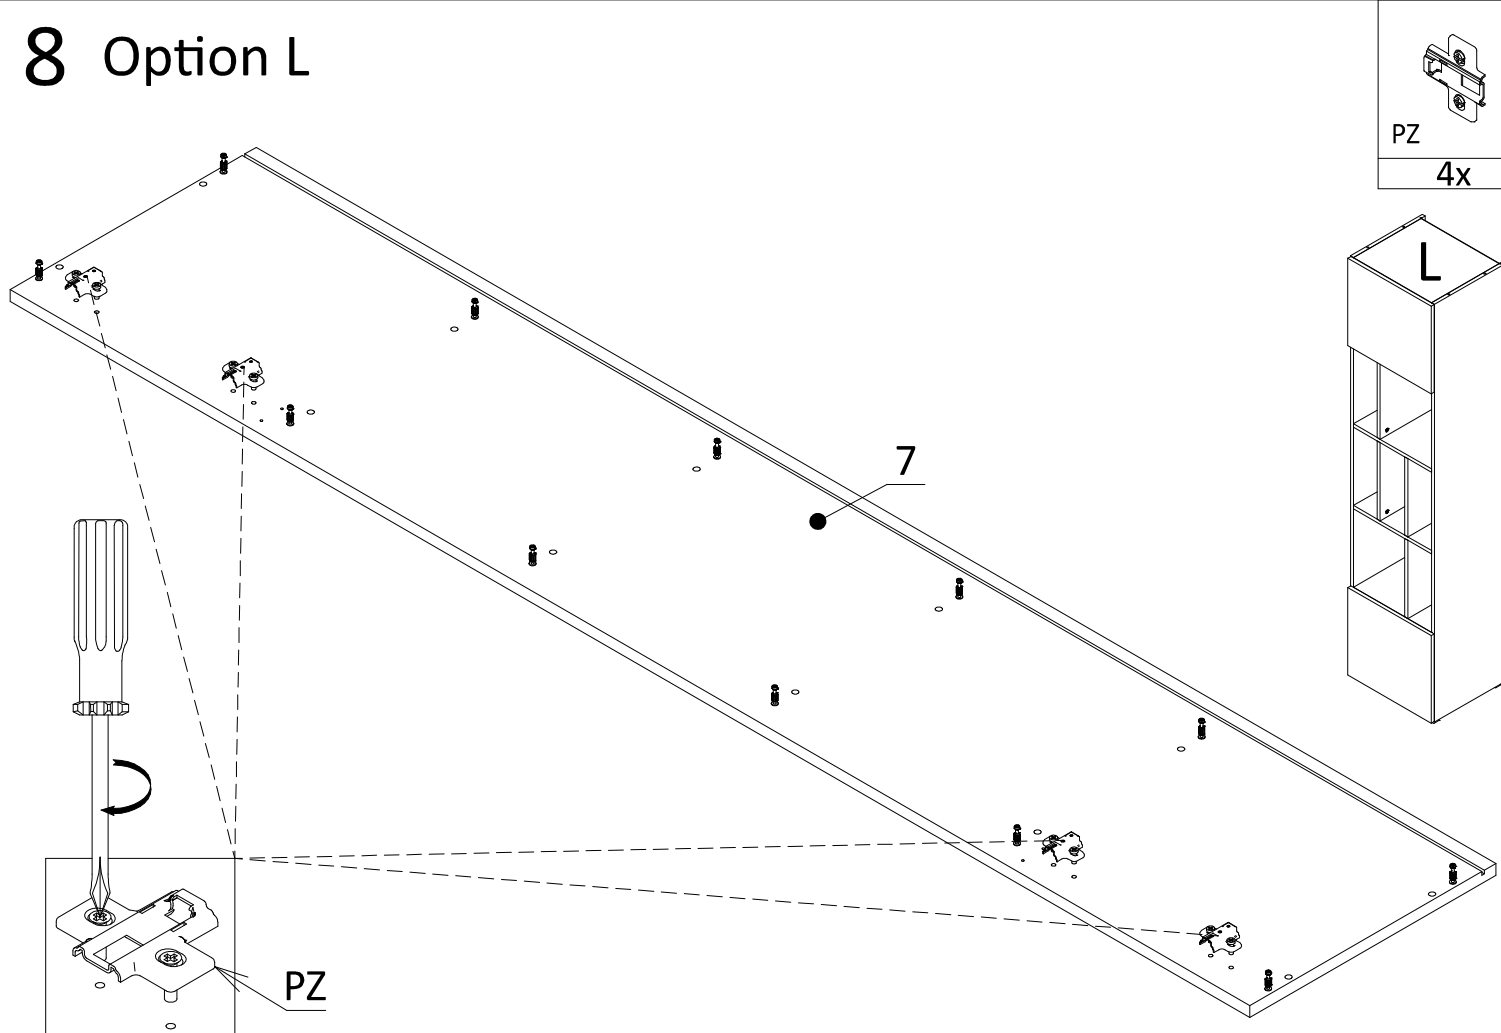



8 Option R

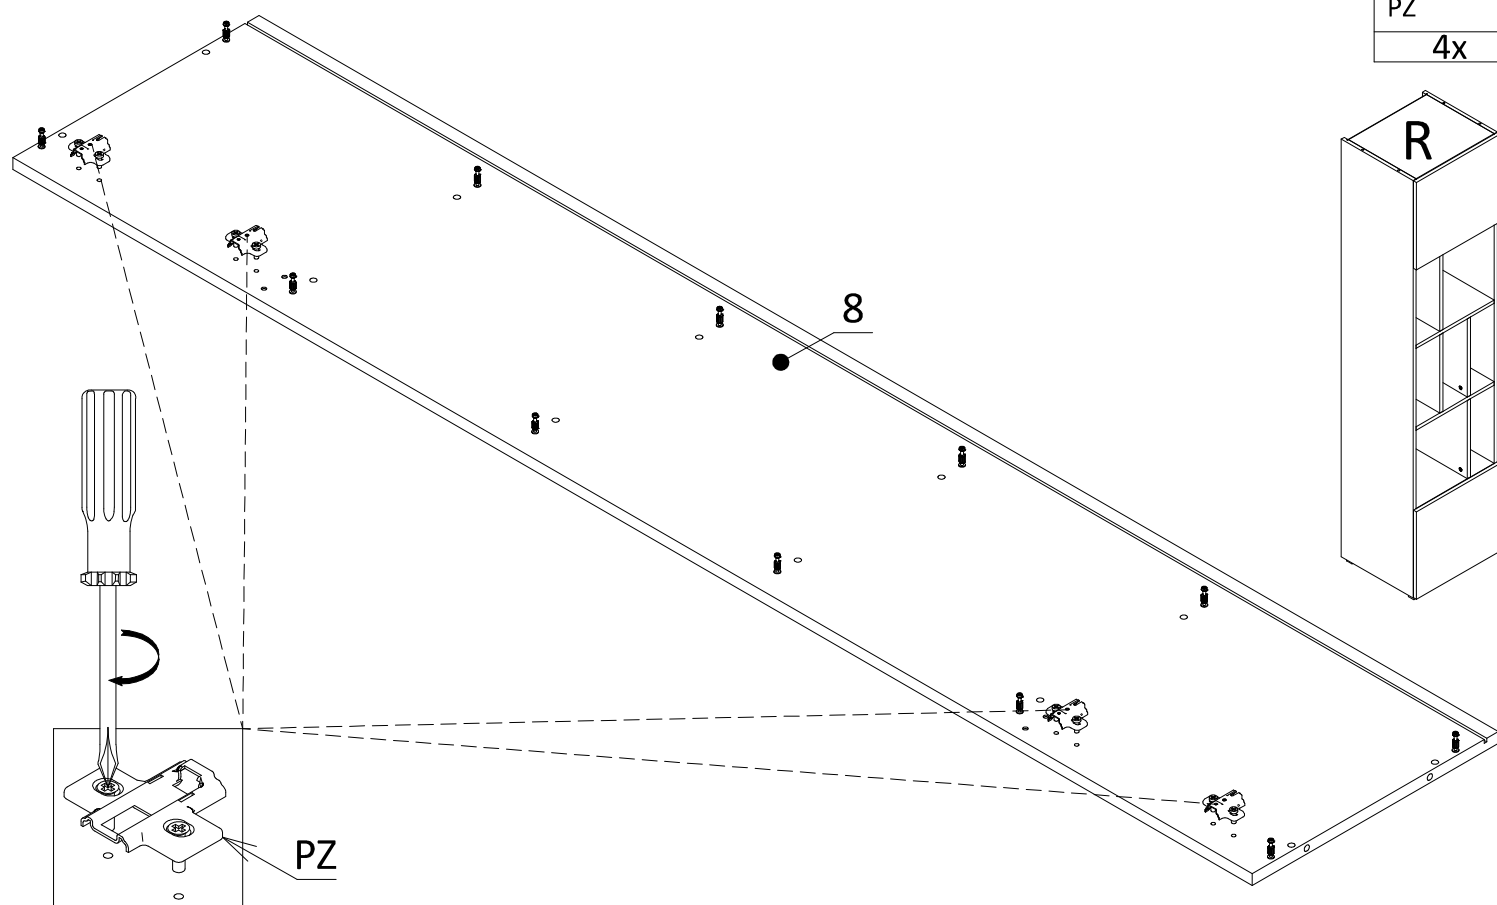


9

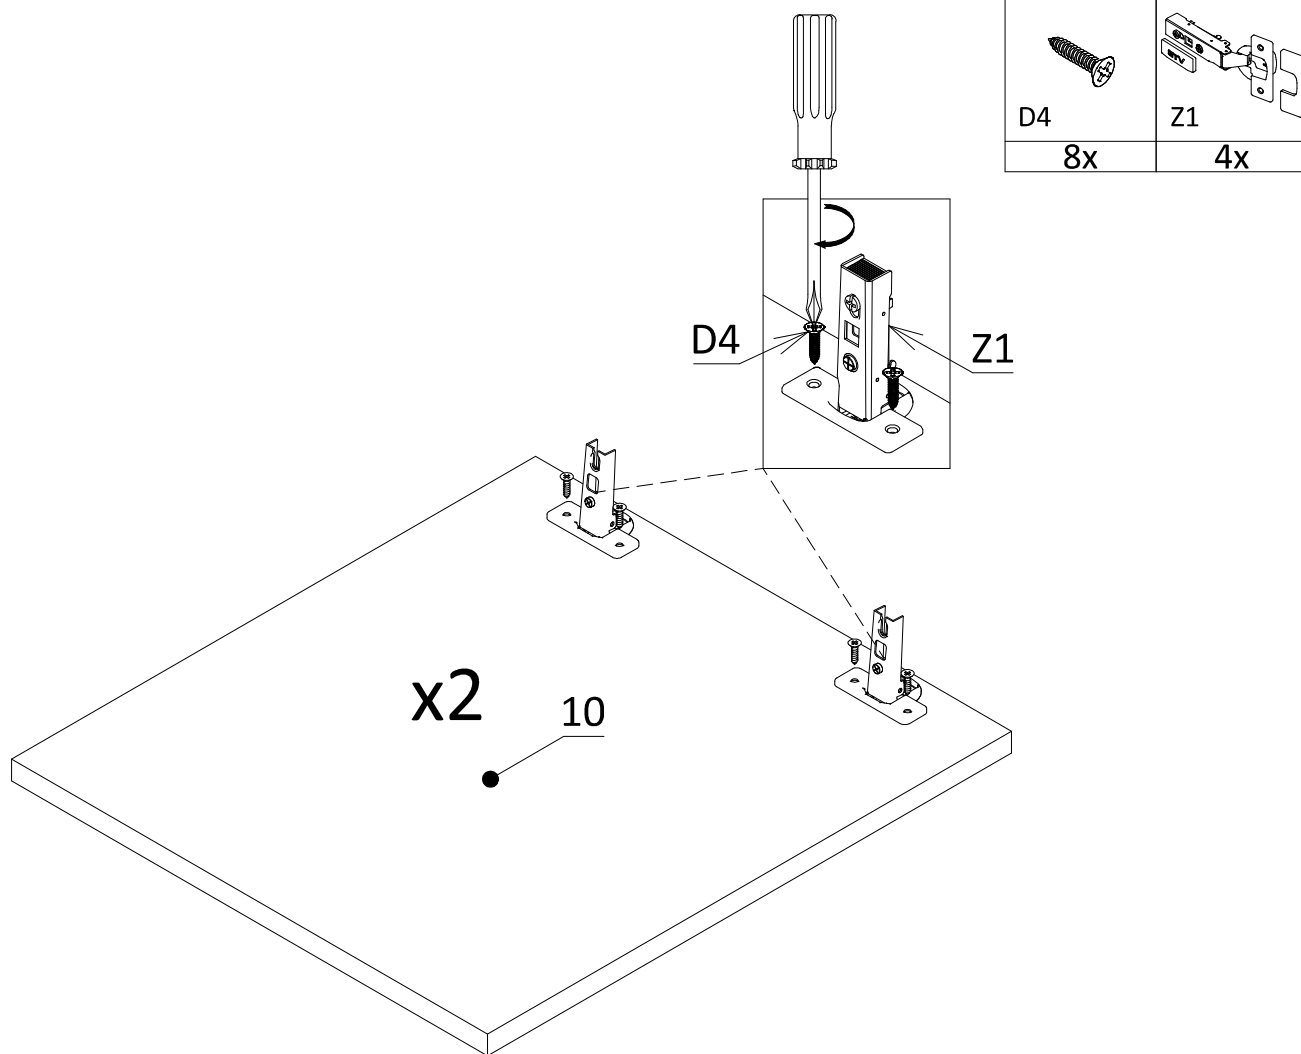

10

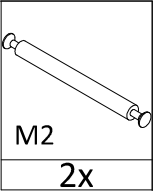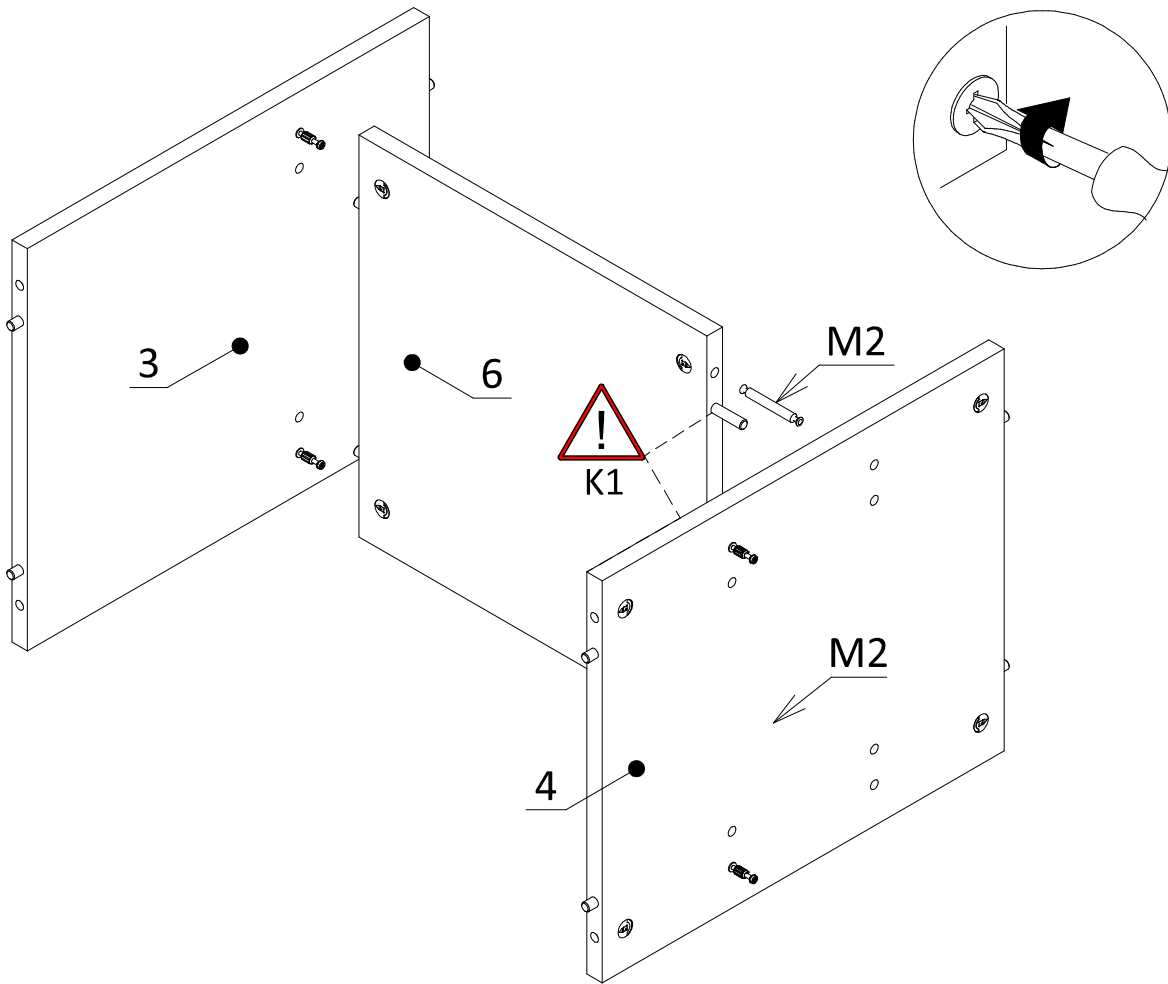


11

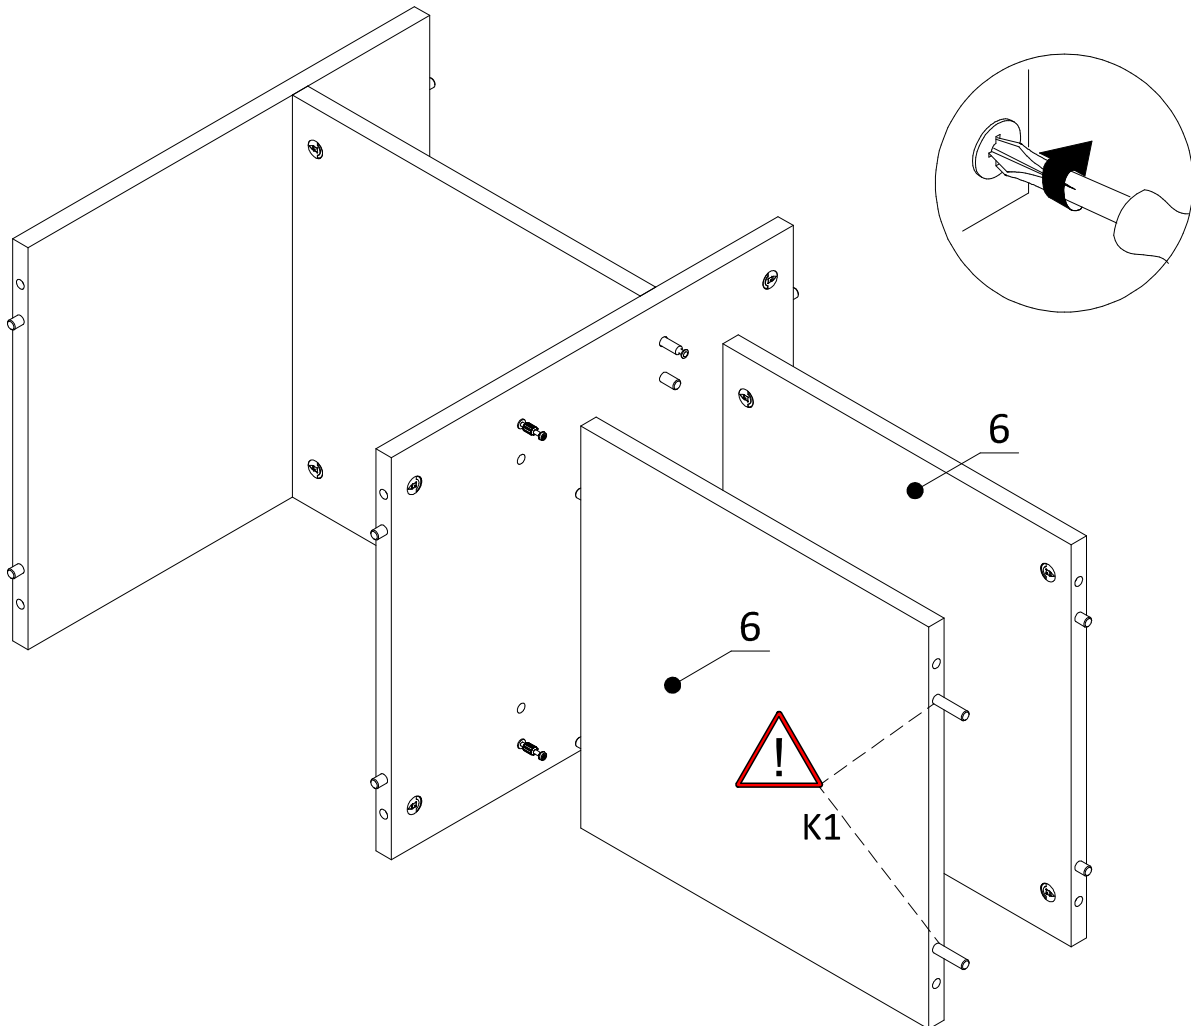


12


M2
2x

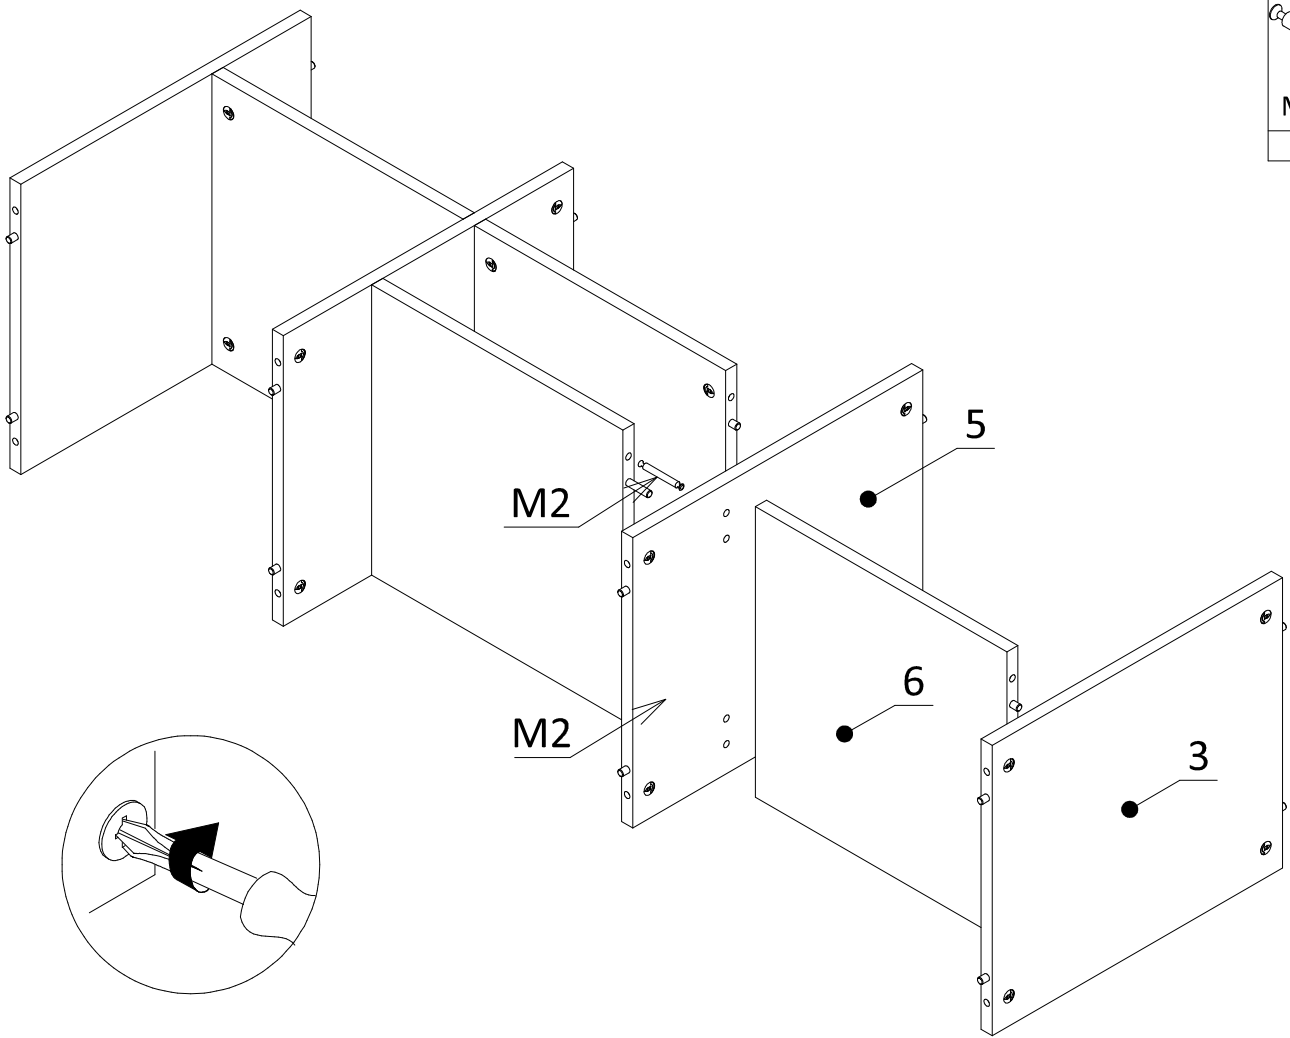

13

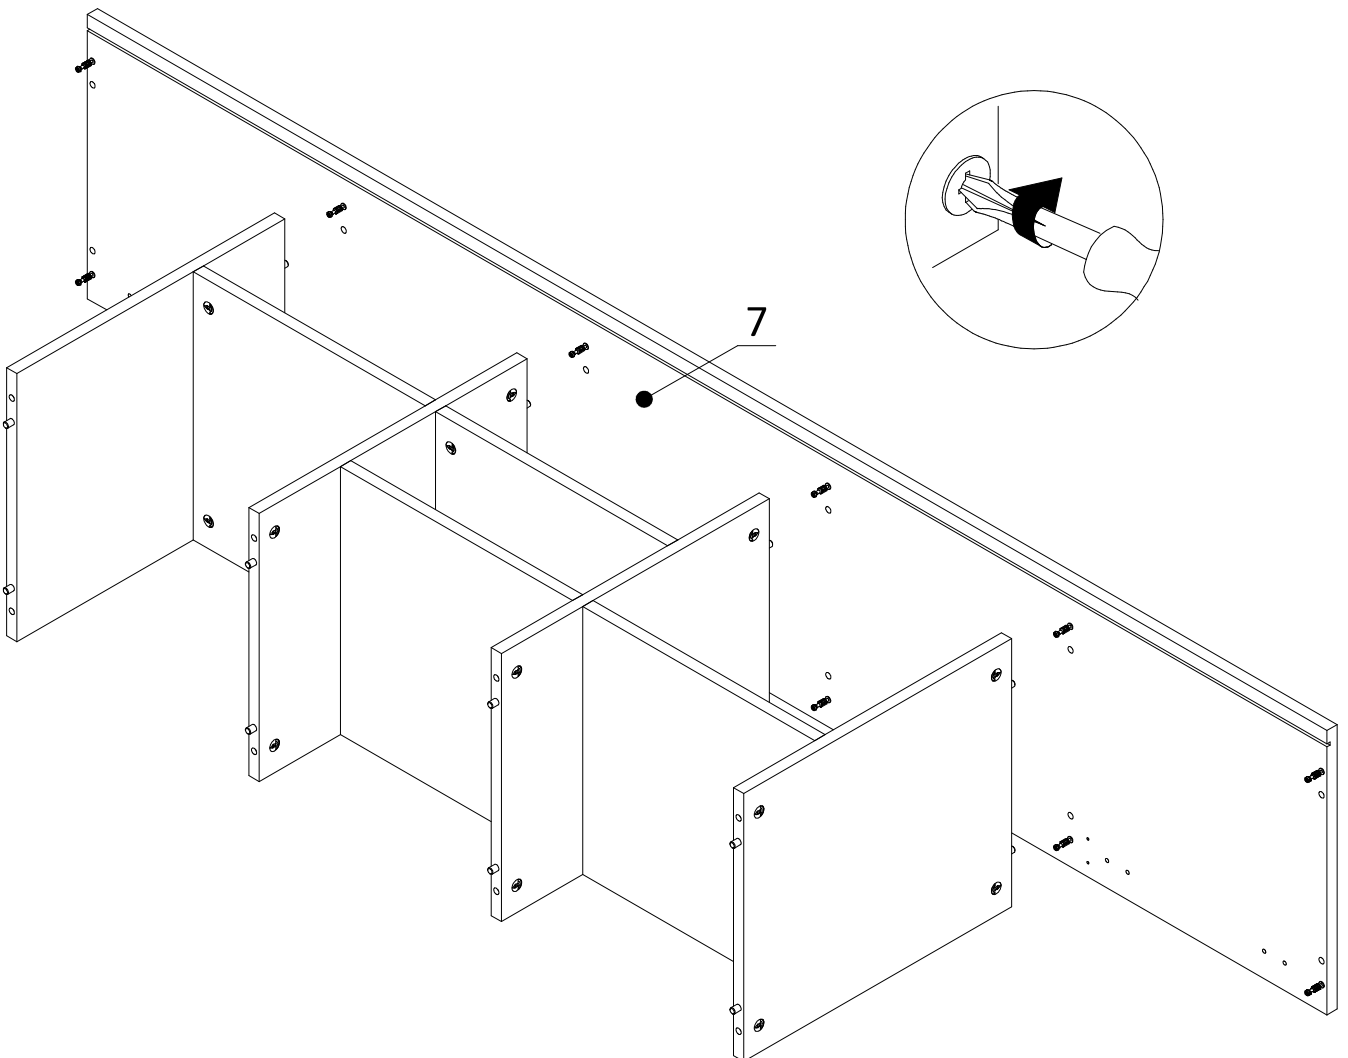

14

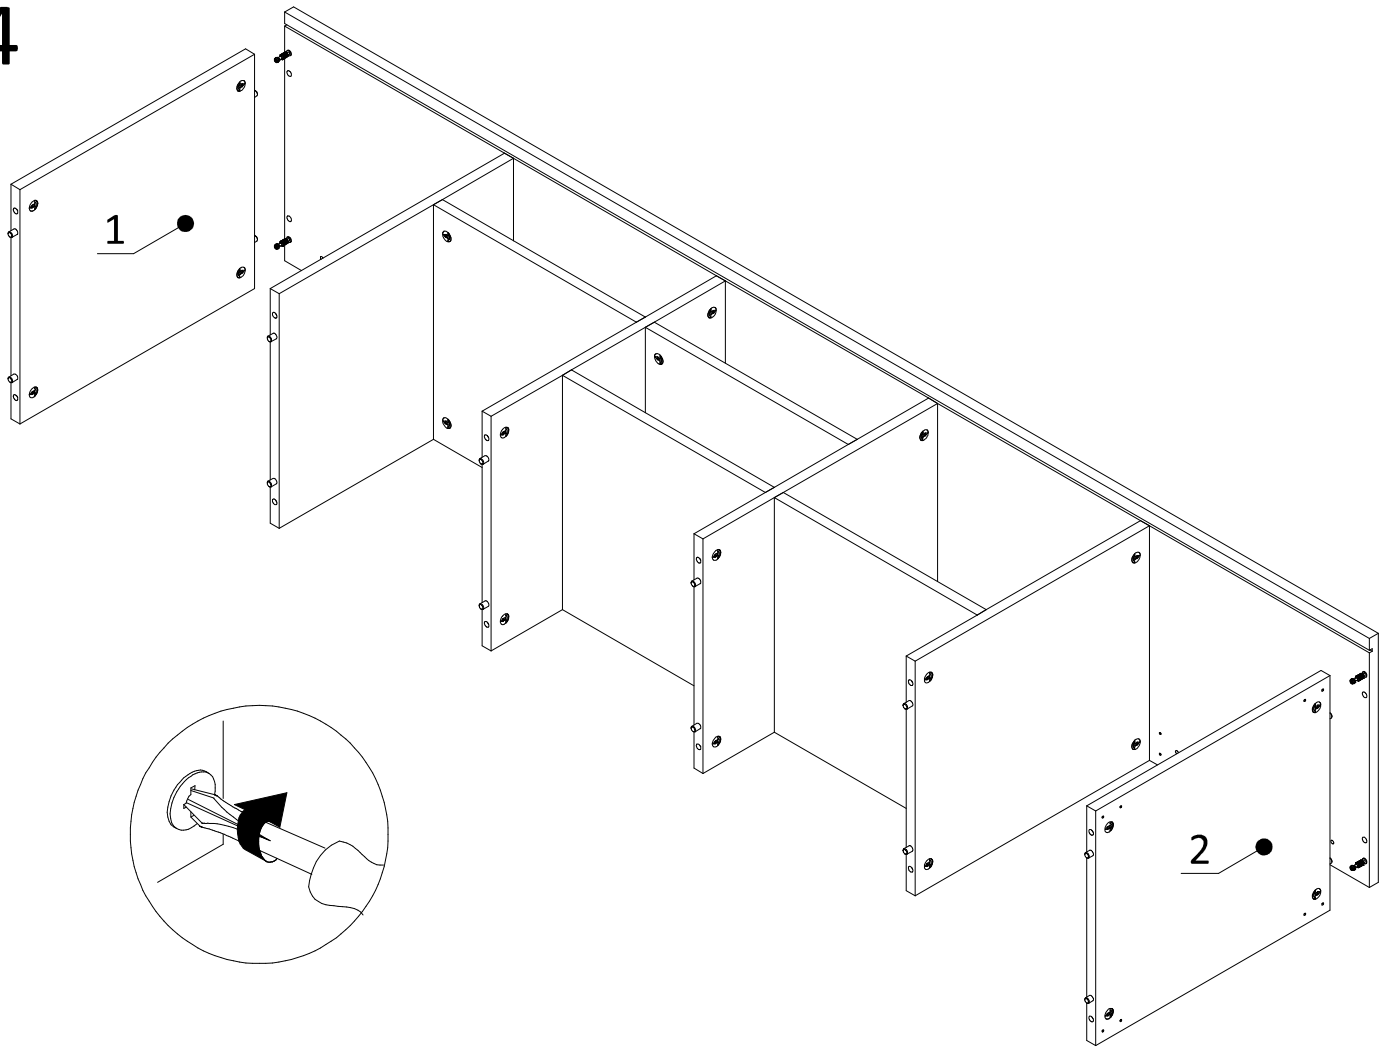

15


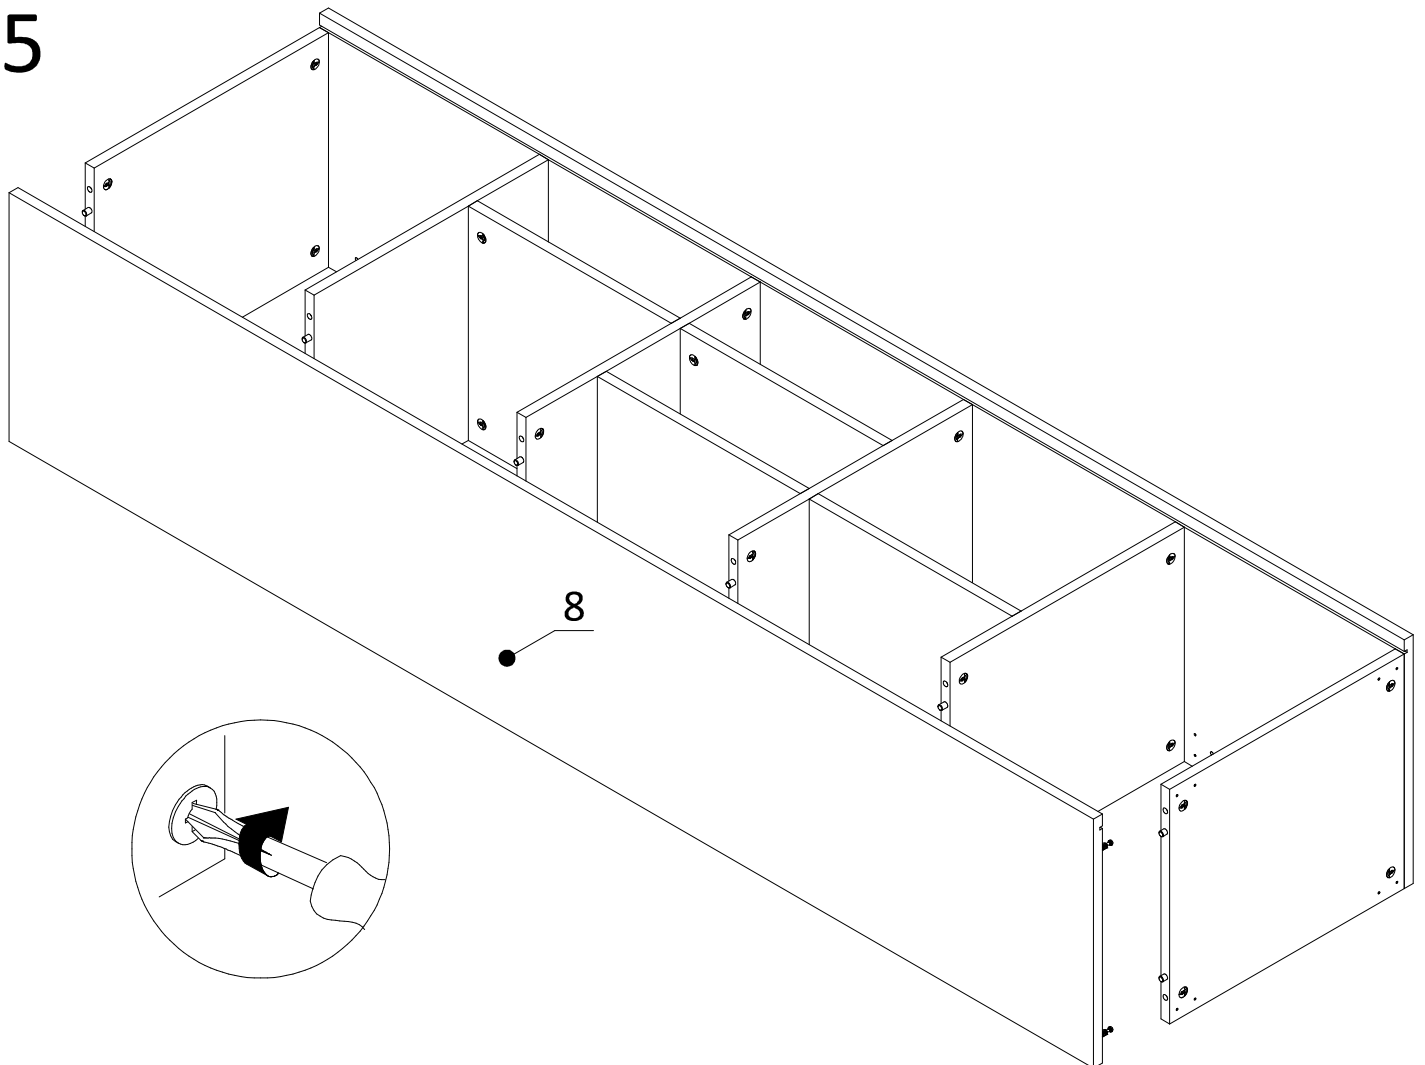



Diagram 6 illustrates the step of attaching the front panel to the cabinet. The front panel is shown being moved into place, as indicated by the large grey arrow. A dot labeled '9' marks the location where the panel is secured to the cabinet's frame.

 S 10x	 G 30x
---	---


18

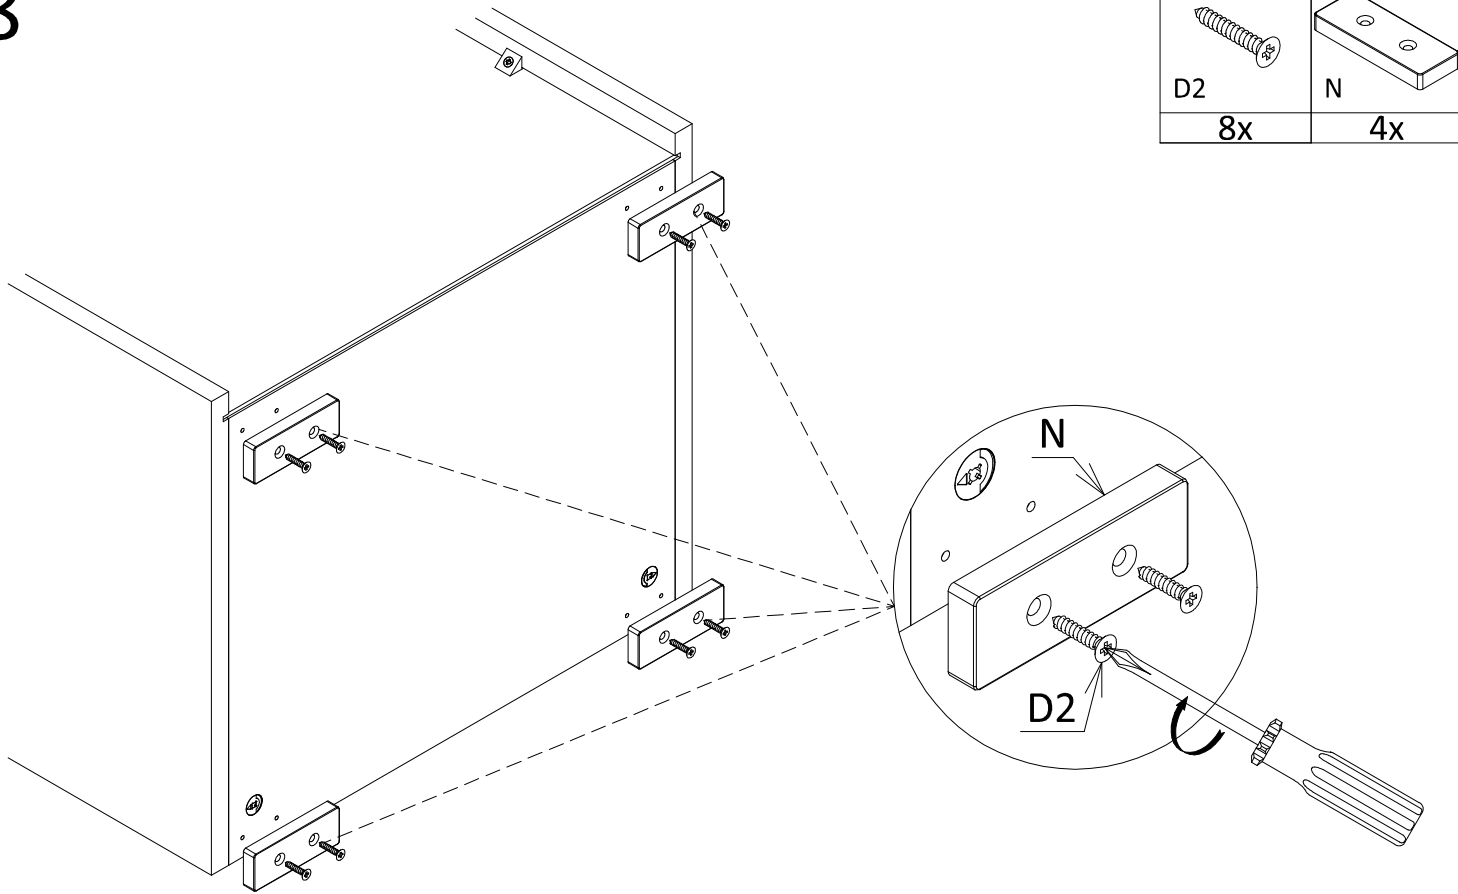





19

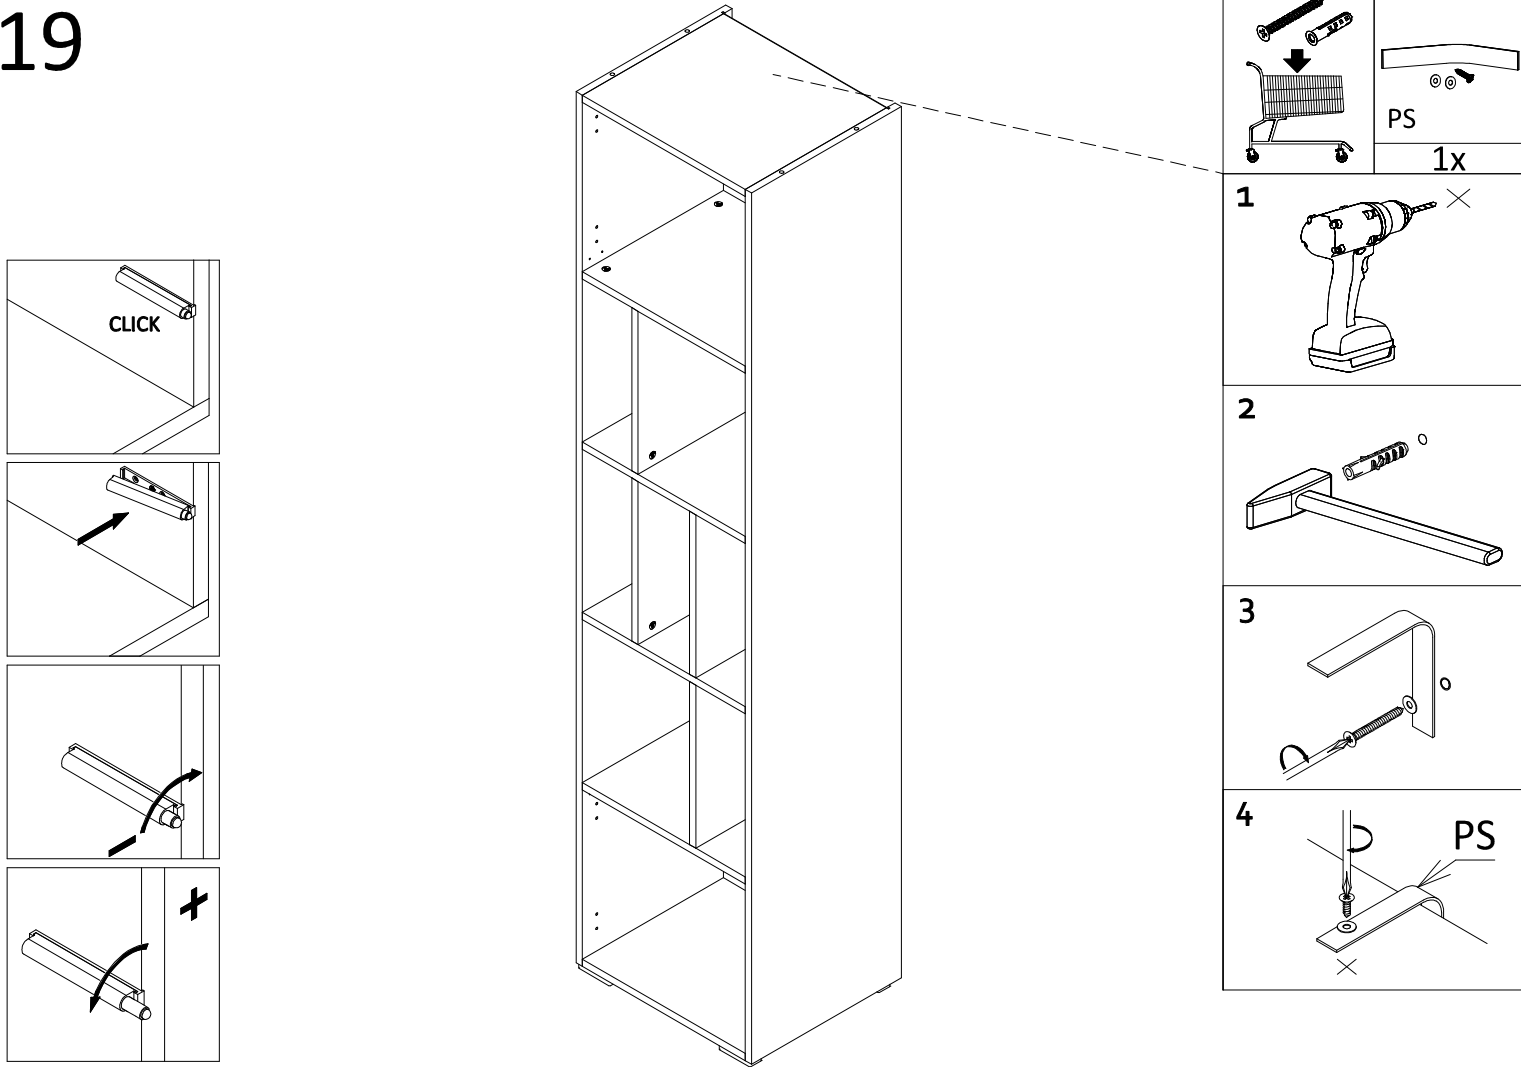





20 Option L

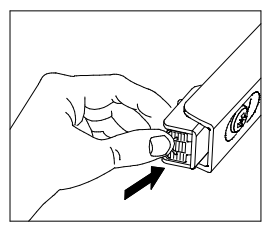

CLICK

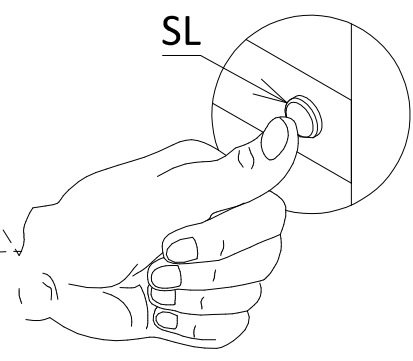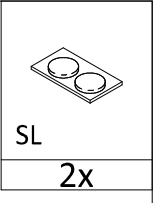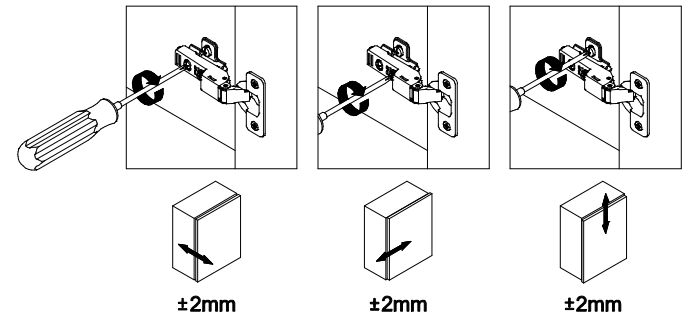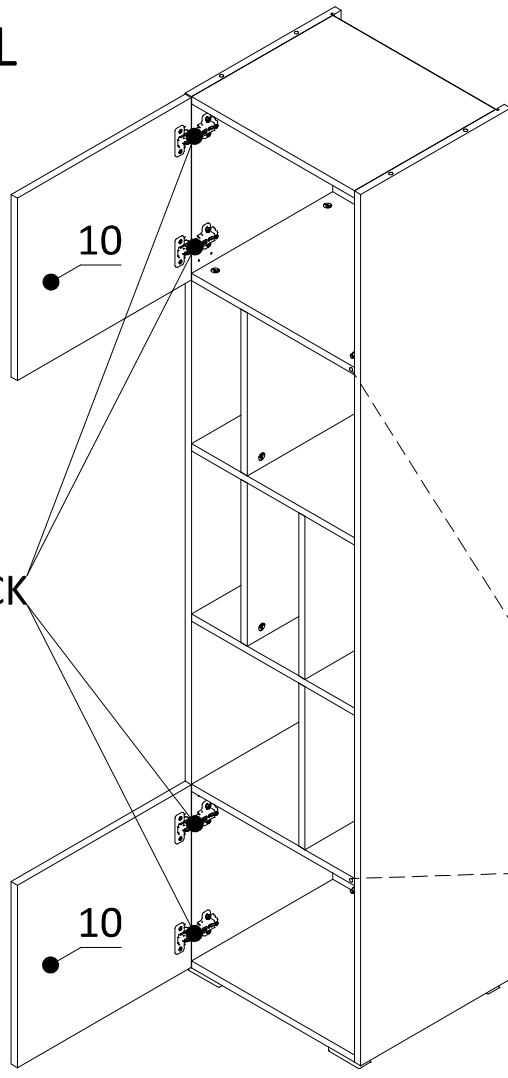

20 Option R

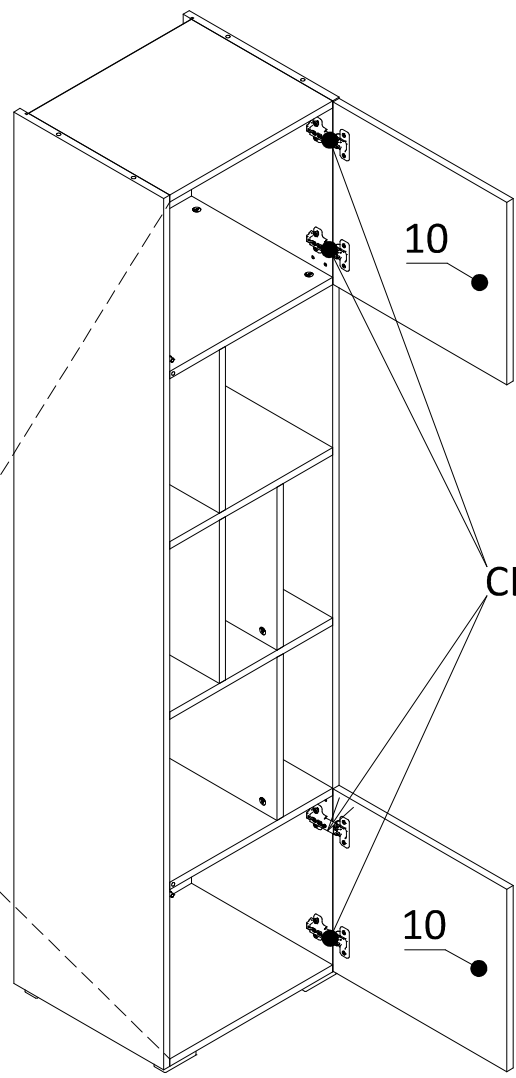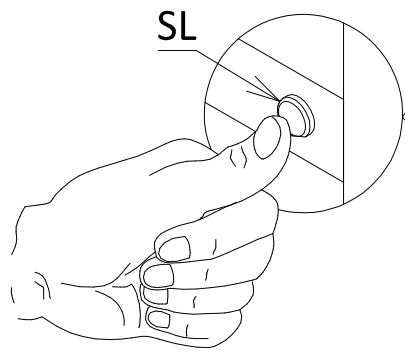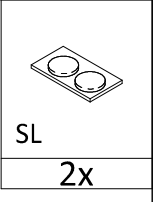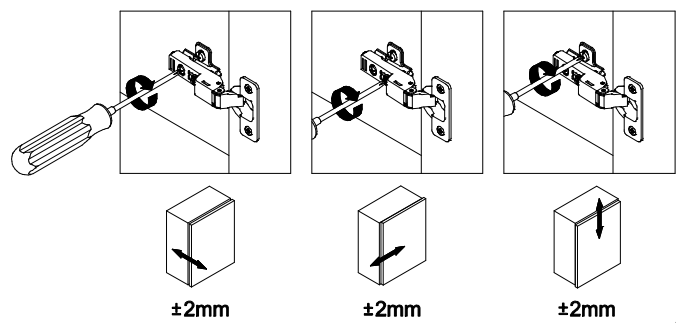

CLICK

